

**CHEMCAD SUITE
CC-DYNAMICS
(CC-DCOLUMN & CC-ReACS)**

User's Guide

Dynamic Process Simulation

Including

**Continuous and Batch
Distillation and Reaction**

LICENSE AGREEMENT

LICENSOR: Chemstations Inc.
2901 Wilcrest Drive, Suite 305
Houston, Texas 77042
U.S.A.

ACCEPTANCE OF TERMS OF AGREEMENT BY THE USER

YOU SHOULD CAREFULLY READ THE FOLLOWING TERMS AND CONDITIONS BEFORE USING THIS PACKAGE. USING THIS PACKAGE INDICATES YOUR ACCEPTANCE OF THESE TERMS AND CONDITIONS.

The enclosed proprietary encoded materials, hereinafter referred to as the Licensed Program(s), are the property of Chemstations Inc. and are provided to you under the terms and conditions of this License Agreement. Included with some Chemstations Inc. Licensed Programs are copyrighted materials owned by the Microsoft Corporation, Rainbow Technologies Inc., and InstallShield Software Corporation. Where such materials are included, they are licensed by Microsoft Corporation, Rainbow Technologies Inc., and InstallShield Software Corporation to you under this License Agreement. You assume responsibility for the selection of the appropriate Licensed Program(s) to achieve the intended results, and for the installation, use and results obtained from the selected Licensed Program(s).

LICENSE GRANT

In return for the payment of the license fee associated with the acquisition of the Licensed Program(s) from Chemstations Inc., Chemstations Inc. hereby grants you the following non-exclusive rights with regard to the Licensed Program(s):

Use of the Licensed Program(s) on more than one machine. Under no circumstance is the Licensed Program to be executed without either a Chemstations Inc. dongle (hardware key) or system authorization code.

You agree to reproduce and include the copyright notice as it appears on the Licensed Program(s) on any copy, modification or merged portion of the Licensed Program(s).

THIS LICENSE DOES NOT CONVEY ANY RIGHT TO USE, COPY, MODIFY OR TRANSFER THE LICENSED PROGRAM(S) OR ANY COPY, MODIFICATION OR MERGED PORTION THEREOF, IN WHOLE OR IN PART, EXCEPT AS EXPRESSLY PROVIDED IN THIS LICENSE AGREEMENT.

TERM

This License Agreement is effective upon acceptance and use of the Licensed Program(s) until terminated in accordance with the terms of this License Agreement. You may terminate the License Agreement at any time by destroying the Licensed Program(s) together with all copies, modifications, and merged portions thereof in any form. This License Agreement will also terminate upon conditions set forth elsewhere in this Agreement or automatically in the event you fail to comply with any term or condition of this License Agreement. You hereby agree upon such termination to destroy the Licensed Program(s) together with all copies, modifications and merged portions thereof in any form.

LIMITED WARRANTY

The Licensed Program(s), i.e. the tangible proprietary software, is provided "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, AND EXPLICITLY EXCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. The entire risk as to the quality and performance of the Licensed Program(s) is with you.

Some jurisdictions do not allow the exclusion of limited warranties, and, in those jurisdictions the above exclusions may not apply. This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from one jurisdiction to another.

Chemstations Inc. does not warrant that the functions contained in the Licensed Program(s) will meet your requirements or that the operation of the program will be uninterrupted or error free.

Chemstations Inc. does warrant, however, that the diskette(s), i.e. the tangible physical medium on which the Licensed Program(s) is furnished, to be free from defects in materials and workmanship under normal use for a period of ninety (90) days from the date of delivery to you as evidenced by a copy of your receipt.

Chemstations Inc. warrants that any program errors will be fixed by Chemstations Inc., at Chemstations' expense, as soon as possible after the problem is reported and verified. However, only those customers current on their update/maintenance contracts are eligible to receive the corrected version of the program.

ENTIRE AGREEMENT

This written Agreement constitutes the entire agreement between the parties concerning the Licensed Program(s). No agent, distributor, salesman or other person acting or representing themselves to act on behalf of Chemstations Inc. has the authority to modify or supplement the limited warranty contained herein, nor any of the other specific provisions of this Agreement, and no such modifications or supplements shall be effective unless agreed to in writing by an officer of Chemstations Inc. having authority to act on behalf of Chemstations Inc. in this regard.

LIMITATIONS OF REMEDIES

Chemstations' entire liability and your exclusive remedy shall be:

- a) The replacement of any diskette not meeting Chemstations' "Limited Warranty" as defined herein and which is returned to Chemstations Inc. or an authorized Chemstations dealer with copy of your receipt, or
- b) If Chemstations Inc. or the dealer is unable to deliver a replacement diskette which is free of defects in materials or workmanship, you may terminate this License Agreement by returning the Licensed Program(s) and associated documentation and you will be refunded all monies paid to Chemstations Inc. to acquire the Licensed Program(s).

IN NO EVENT WILL CHEMSTATIONS INC. BE LIABLE TO YOU FOR ANY DAMAGES, INCLUDING ANY LOST PROFITS, LOST SAVINGS, AND OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LICENSED PROGRAM(S) EVEN IF CHEMSTATIONS INC. OR AN AUTHORIZED CHEMSTATIONS DEALER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR FOR ANY CLAIM BY ANY OTHER PARTY.

SOME JURISDICTIONS DO NOT PERMIT LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL AND CONSEQUENTIAL DAMAGES SO THAT THE ABOVE LIMITATION AND EXCLUSION MAY NOT APPLY IN THOSE JURISDICTIONS.

GENERAL

The initial license fee includes one (1) year of support, maintenance, and enhancements to the program. After the first one (1) year term, such updates and support are optional at the then current update fee.

Questions concerning this License Agreement and all notices required herein shall be made by contacting Chemstations Inc. in writing at Chemstations Inc., 2901 Wilcrest, Suite 305, Houston, Texas, 77042, by telephone, 713-978-7700, or by Fax, 713-978-7727.

DISCLAIMER: CC-STEADY STATE, CC-BATCH, CC-DYNAMICS, CC-THERM, CC-FLASH, CC-SAFETY NET, CC-POLYMERS, CC-LANPS

Copyright(c) Chemstations Inc., 2005, all rights reserved.

This proprietary software is the property of Chemstations, Inc. and is provided to the user pursuant to a Chemstations Inc. program license agreement containing restrictions on its use. It may not be copied or distributed in any form or medium, disclosed to third parties, or used in any manner except as expressly permitted by the Chemstations Inc. program license agreement.

THIS SOFTWARE IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED. NEITHER CHEMSTATIONS INC. NOR ITS AUTHORIZED REPRESENTATIVES SHALL HAVE ANY LIABILITY TO THE USER IN EXCESS OF THE TOTAL AMOUNT PAID TO CHEMSTATIONS INC. UNDER THE CHEMSTATIONS INC. PROGRAM LICENSE AGREEMENT FOR THIS SOFTWARE. IN NO EVENT WILL CHEMSTATIONS INC. BE LIABLE TO THE USER FOR ANY LOST PROFITS OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF USE OR INABILITY TO USE THE SOFTWARE EVEN IF CHEMSTATIONS INC. HAS BEEN ADVISED AS TO THE POSSIBILITY OF SUCH DAMAGES. IT IS THE USERS RESPONSIBILITY TO VERIFY THE RESULTS OF THE PROGRAM.

CC-DYNAMICS Version 5.5

TABLE OF CONTENTS

Introduction	1
Installation	3
Accessing CC-DYNAMICS	3
CHEMCAD and CC-DYNAMICS	5
Main Features of CC-DYNAMICS.....	6
Setting Up A CC-DYNAMIC Simulation: An Overview.....	7
About Dynamic Time and Dynamic Data Files	7
Turning on the Dynamic Mode.....	8
The Dynamics Menu.....	10
Set Run Time	11
Run From Initial State	15
Run From Current State.....	15
Restore To Initial State.....	15
Record Streams and Record Unit Operations	15
Record Process.....	15
Save As Initial State	15
Help.....	15
Reviewing Dynamic Results	16
Plotting Dynamic Results.....	16
Dynamic Column History (CC-DCOLUMN).....	17
Dynamic Stream History	18
The Batch Reactor Model (CC-ReACS)	20
Overview	20
The Batch Reactor (Reaction Side) Mass Balance	22
The Reaction Rate Equations	23
The Jacket/Coil Mass Balances	26
The Reactor Heat Balance.....	26
The Jacket/Coil Heat Balances	29
Heat Transfer Calculation Details.....	29
The Pressure Calculation.....	34
Jacket/Coil Pressure Calculation.....	35
Relief Calculations	36
Batch Reactor Input.....	36
The Batch Reactor Menu.....	37

The Reactor Initial Charge Dialog Box	37
The Batch Reactor General Information Dialog Box.....	38
General Input	39
Semi-Batch Input	42
Convergence Input.....	42
Rate Equation Units Dialog Box	44
The Reaction Kinetics Dialog Box	45
T/Q Profile Dialog Box.....	47
Reactor Specifications Dialog Box	49
Page One-Geometry Input.....	49
Page Two-Process Side	51
Jacket/Coils Specifications Dialog Box	53
External Feed Schedule Dialog Box.....	55
Product Draw Schedule Dialog Box	56
Setting Up Schedules and Profiles in CC-ReACS	57
Scheduling Input Conventions and Procedures	57
Special Points Regarding Individual Schedule/Profile Variable	58
Relief Dialog Box.....	60
Batch Reactor Run Time Plot Options Dialog Box	61
Dynamic Column Models.....	62
Overview.....	62
Dynamic Columns Input	63
The Dynamic Column Menu	63
The General Information Dialog Box	64
The Startup Parameters Dialog Box.....	66
Startup Charge	67
The Column Holdups Dialog Box	68
The Dynamic Column Specifications Dialog Box.....	69
Condenser Input	70
Reboiler Input	72
The Reflux Control Dialog Box	74
Valve Input.....	75
Calculated Results.....	77
Controller Input	77
Sensor Information.....	79
Calculated Results.....	80
The Column Metal Heat Transfer Dialog Box.....	81
The Record Stages Dialog Box	81
The Plot Options Dialog Box	82
The PID Controller/Control Valve Model CC-DYNAMICS	83

Determine the Value of the Measured Variable & Compare to Set Point	84
Calculate the Sensor Output Signal	84
The PID Control Function.....	85
The Valve Position Equation	86
The Control Valve Flowrate Calculation	87
Control Valve Dialog Box.....	93
Parameter Definitions.....	94
Topology	99
PID Controller Dialog Box.....	99
Parameter Definitions Page One.....	101
Controller/Sensor Function.....	102
Measured Object	103
Parameter Definitions Page Two.....	105
Optional Active Time Specs	105
For Split Range Control.....	106
Calculated Results.....	106
The Dynamic Vessel Model	106
The Pressure Calculations	108
The Calculation Modes	109
Maintaining Liquid Levels by Decanting	110
The Vapor Flow Models	112
Relief Vent Calculations	113
The Dynamic Vessel Dialog Box.....	113
Parameter Definitions Page One (General).....	114
Geometry.....	114
Vessel Thermal Mode.....	115
Initial Conditions	116
Optional Inputs	116
Parameter Definitions Page Two (Outlet Flow)	117
Parameter Definitions Page Three (Relief Device).....	118
Pressure Data	119
For Vapor Relief Only.....	120
For Liquid Relief Only.....	120
Parameter Definitions Page Four (Calculated Results).....	121
Topology	122
Other Unit Operations.....	122
The Ramp Controller	122
Parameter Definitions.....	122
The Time Delay Unit Operation	124
Topology	125

The Time Switch Unit Operation.....	125
Topology.....	126
Steady State Unit Operations.....	126
Dynamic Techniques.....	127
Fundamental Techniques.....	128
The Control Valve, CVAL.....	128
How the Control Valve Modifies the Flowrate.....	128
How to Modify the Valve Position.....	133
Sizing, Initial State of Control Valve, Troubleshooting.....	139
What is a Control Loop?.....	140
How to Specify a Transmitter.....	141
How to Specify Error Function.....	142
How to Specify Parameters of PID.....	143
Special Parameters of the PIDC Model.....	145
Control Structures.....	145
What is the Location of the PID Controller in the Flowsheet.....	146
How to Use Cascade Control System.....	149
How to Define a Set Point Tracking System.....	151
How to Define a Set Point Control System.....	152
Applications of Steady State Models in Dynamic Simulation.....	155
How to Use the HTXR Model.....	155
How to Use the Pipe Model.....	157
Dynamic Simulation of a Distillation Column.....	159
Which Icon of SCDS Should You Use in a Dynamic Simulation?.....	159
Column Dynamics Without Any Controller.....	162
How to Install Control Loops for a Column.....	177
How to Use the Built-In Models of Dynamic Column Module.....	186
How to Use Dynamic Column Model For Control of Condenser and Reflux.....	192
Dynamic Column Model For Batch Distillation Systems, Startup Problems.....	207
Rate Regression.....	216
Input Discussion.....	217
Select Parameters Screen Dialog Box.....	218
Parameter Definitions-Page One.....	219
Parameter Definitions-Page Two.....	220
Import Profile.....	221
Parameter Definitions.....	221
Input/Edit Rate Profile.....	222
Parameter Definition.....	223
Check Initial Estimations.....	224
Perform Regression.....	224


Plot Results	224
Using Rate Regression	225
Determining Constants	226
Parameter Selection	226
Build A Batch Reactor Flowsheet	226
Specify The Initial Charge	226
Entering The General Parameters	227
Specify The Reactions	227
Call The Rate Regression Menu	227
Select The Parameters To Be Calculated	227
Build The Regression Data Sets	228
Specify Which Data Sets Are To Be Used In The Regression Analysis	229
Check The Initial Estimates	229
Perform The Regression	229
Troubleshooting Regressions	229
Plot The Results	230
Examples	230
The <i>Rateregressrc1</i> Problem	230
The <i>Rateregressrc1</i> Problem-Analyzing The Results	241
Appendix I-Agitator Coefficients For The Seader-Tate Equation	242
Appendix II-User Added Kinetic Rate Expressions	243
Overview	243
Basic Use	243
Additional Comments	246
Appendix III-Static Head In The Dynamic Vessel	248
Overview	248
Basic Use	248
Inlet and Outlet Nozzles	249
Appendix IV-Reactor Database	252

INTRODUCTION

CC-DYNAMICS is an engineering software tool designed to simulate process equipment as a function of time. CC-DYNAMICS is composed of CC-ReACS and CC-DCOLUMN. CC-ReACS simulates batch and semi-batch reactors and their associated equipment. CC-DCOLUMN simulates the behavior of distillation columns and their associated equipment. CC-DYNAMICS combines both products. All three of these products provide the tools necessary to evaluate the thermodynamics, chemistry, and equipment for these processes, including:

- A database of physical properties for the 2000 most commonly used chemicals.
- Estimation and regression facilities for those chemicals not in the database.
- Thermodynamic models for the phase equilibrium of a wide range of mixtures ranging from ideal systems to polar and electrolyte systems to polymers.
- Comprehensive facilities for regressing thermodynamic parameters with the program.
- Detailed heat transfer calculations.
- PID control system models for controlling temperature, pressure, flowrates, levels and purities in any unit of the process.
- Safety relief simulation. .

A typical application of CC-ReACS is depicted below:

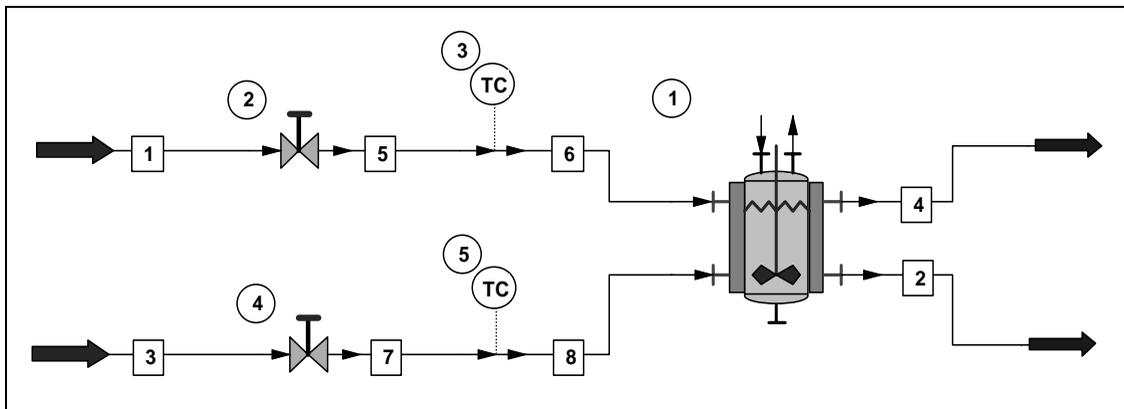


CC-ReACS is designed to be used at all levels and stages of batch chemical process design and analysis. It can be used to:

- Analyze experimental data to determine mechanisms and rates.
- Perform adiabatic or isothermal simulations, which are independent of equipment configuration, control requirements, and heat transfer considerations.

- Perform detailed simulations, which include the equipment, control and heat transfer aspects of the process.
- Simulate simple flowsheets (one reactor with or without supporting equipment) or complex systems (many reactors with associated equipment).


A typical application of CC-DCOLUMN is depicted below:

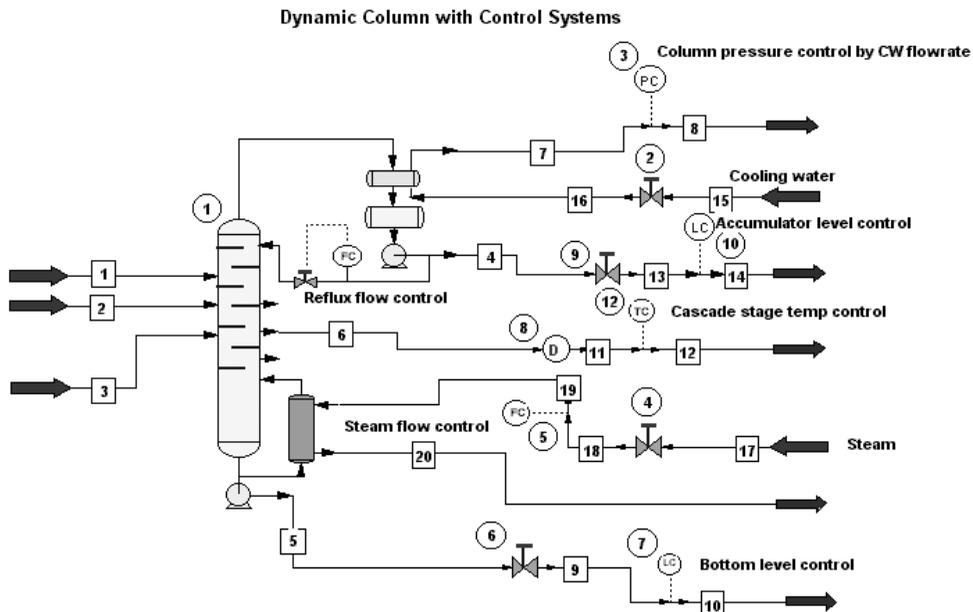

CC-DCOLUMN is designed to be used at all levels and stages of distillation process design and analysis. It can be extremely useful to:

- Quantify the requirements of operability, control loop tuning, changes in throughput or ambient conditions, safety demands, etc.
- Perform detailed simulations, which include the equipment and control aspects of the process
- Simulate the effects of disturbances, startups, and shutdowns on key process variables.
- Perform simulations, which are independent from control requirements.
- Validate control schemes.

By combining CC-ReACS and CC-DCOLUMN into CC-DYNAMICS simulations of batch reactors with columns becomes possible:

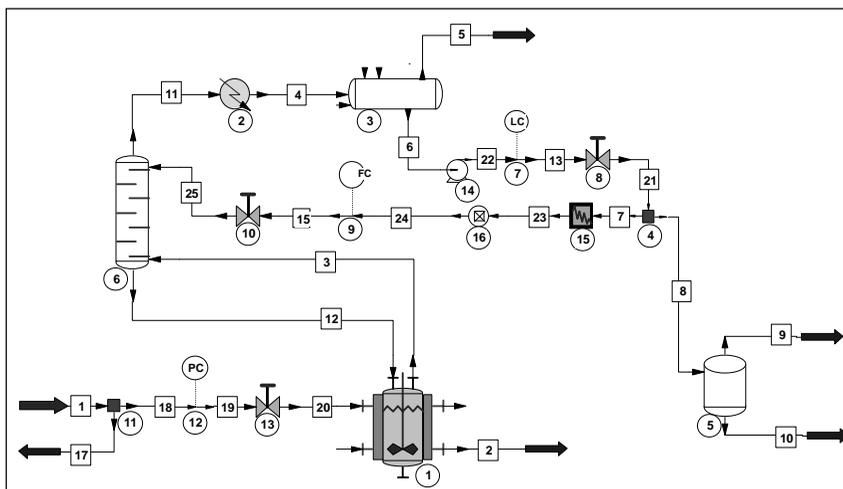


Throughout this manual we will be using the terms CC-DYNAMICS, CC-ReACS, and CC-DCOLUMN to refer to our software. Some users may have purchased only part of CC-DYNAMICS, and it is important to know what features are and are not available in each package. When we use the term CC-DYNAMICS, the documentation is referring to features common to both CC-ReACS and CC-DCOLUMN, for example PID controllers. When we use the term CC-ReACS, we are referring to features only available in the CCRACS part of CC-DYNAMICS, such as Batch Reactors. When referring to CC-DCOLUMN, we are documenting features available in the CC-DCOLUMN part of CC-DYNAMICS.

INSTALLATION


CC-DYNAMICS is completely integrated with the CHEMCAD Suite and does not run in a separate interface. CC-DYNAMICS is always installed with the CHEMCAD Suite. If the any program of the CHEMCAD Suite has been installed there is not any special procedure to install CC-DYNAMICS. The use of CC-DYNAMICS only depends on the user's license (See "Accessing CC-DYNAMICS" below). Please refer to the installation section of the CC-STEADY STATE Users Guide.

ACCESSING CC-DYNAMICS


CC-DYNAMICS is part of the CHEMCAD engineering suite. To access your license for CC-DYNAMICS, start CHEMCAD. And you will be shown to the License Selection screen:

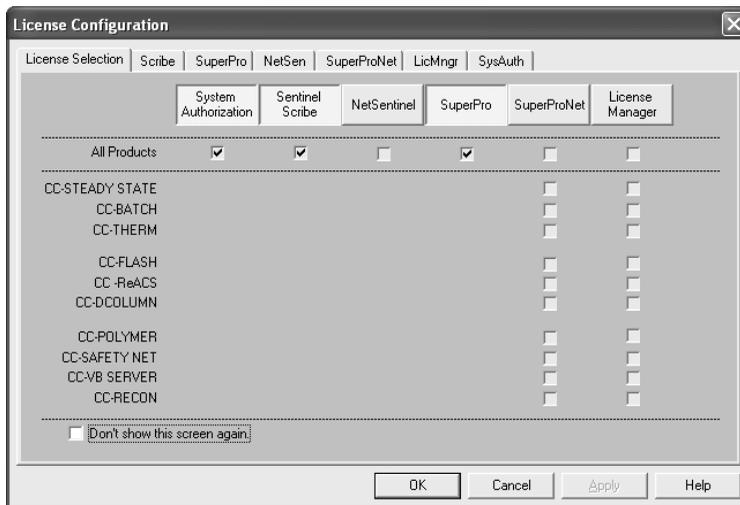


This screen allows you to select which licensing methods you would like to use to authorize your use of CC-DYNAMICS. The default settings shown will look for all available licenses using System Authorization, Sentinel Scribe, or SuperPro Dongles. If you use a network shared license such as a License Manager, the correct settings would be like so:

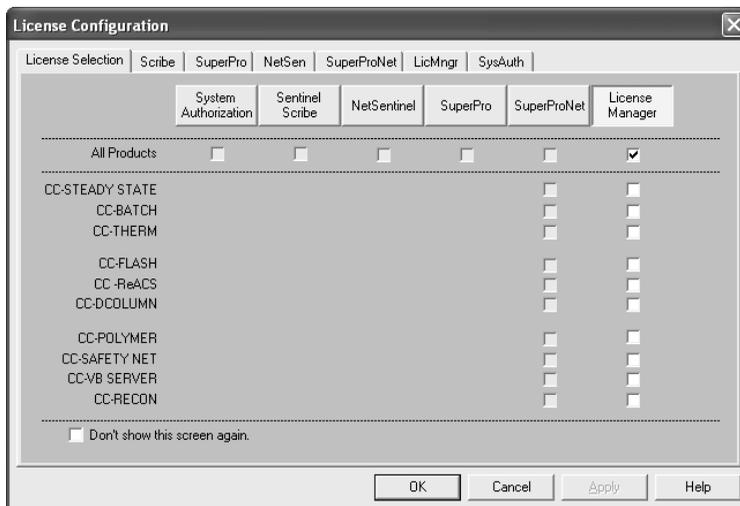

Note that network licensing systems allow you to select which products you wish to look for licenses. In the above example the License manager will look for licenses for all products (see the "all products" checkbox). Alternately you could request that CHEMCAD only look for the CC-DCOLUMN and CC-ReACS licenses:

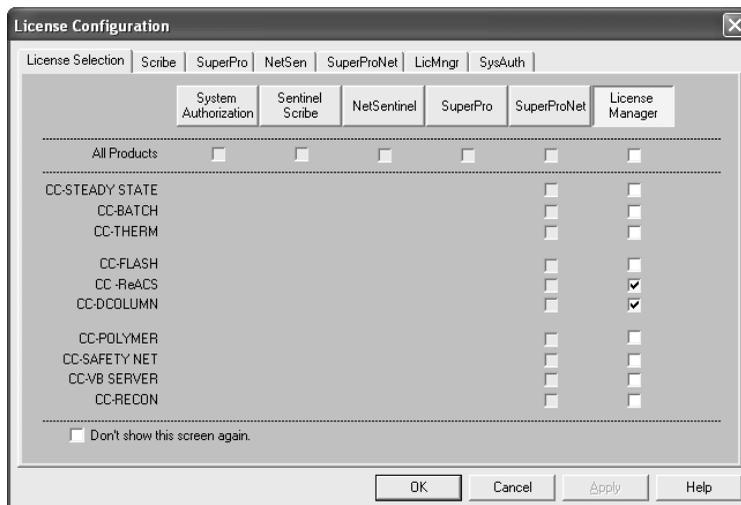

Once you press OK on the License Selection screen, you should get a licensed products screen showing what licenses you ended up with:

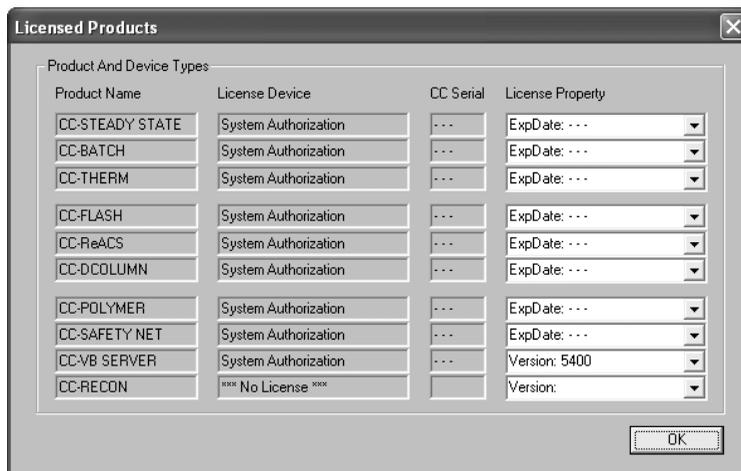

CHEMCAD AND CC-DYNAMICS

CC-DYNAMICS is a module within the CHEMCAD system. As such, it uses many of the features of CHEMCAD. These include:

- The flowsheet drawing features.

- The data input facilities.
- The CHEMCAD physical properties database.
- All thermodynamic options and data available in CHEMCAD.
- Output facilities such as viewing, plotting, and reporting.
- Regression facilities for physical properties, phase equilibrium, and electrolytes.
- Equipment sizing.
- Safety relief calculations.
- Unit operations which are common in both steady state and dynamic simulations. These include mixers, dividers, heat exchangers, flashes, pumps, compressors, valves and black box separators.
- Excel data mapping tools.
- Sensitivity and optimization analysis.
- The on-line help system.

These features and how to use them are described in detail in the CC-STEADYSTATE User's Guide and the On-line Help system to which the user is referred. Those descriptions will not be repeated in this guide.

MAIN FEATURES OF CC-DYNAMICS

This guide describes the use of and technical details of CC-DYNAMICS. These include:

Common CC-DYNAMICS features:

- The PID control system
- The dynamic vessel
- Miscellaneous dynamic unit-operations – Ramp, Time Delay, Task, Time Switch
- Other unit operations which can be used in CC-ReACS simulations
- The dynamics menu

CC-ReACS features:

- The batch reactor
- The rate regression utility

CC-DCOLUMN features:

- The dynamic model of SCDS distillation UnitOp.
- The dynamic model of TPLS distillation UnitOp.

- The dynamic model of TOWR distillation UnitOp.

Each of these features is described in its own section.

SETTING UP A DYNAMIC SIMULATION: AN OVERVIEW

Many of the steps listed below are the same in a dynamic simulation as in a steady state simulation (CC-STEADY STATE).

The steps for setting up a dynamic flowsheet are:

1. Start a new job
2. Select engineering units
3. Turn on the dynamics mode
4. Draw the flowsheet
5. Select components
6. Select thermodynamics options
7. Specify feed streams and initial stream conditions
8. Specify UnitOps
9. Run the simulation
10. Review the results with RESULTS and PLOT
11. Re-run the simulation or extend the run from the current simulation time
12. Generate reports

Most steps and are described in detail in the CC-STEADY STATE User's Guide and in the On-line Help System. Those descriptions will not be repeated in this guide.

ABOUT DYNAMIC TIME AND DYNAMIC DATA FILES

Dynamic simulations perform a calculation of the entire flowsheet every time step. A flowsheet has two time conditions: initial time (dynamic time = 0:00) and current time (dynamic time during calculation). The large amount of calculated data can quickly becoming overwhelming. To reduce size of data files, variables are not recorded by default. The user can specify to record stream or unit operation variables at all times, and / or to record the entire flowsheet at specific times.

CC-DYNAMICS maintains several sets of flowsheet data files in order to manage all of the situations and manipulations the user may choose to execute. These files fall into the following categories:

1. Time Zero files:

These files contain the initial state information. The initial state is the stream and equipment specifications at time equals zero.

Whenever the user makes changes at time zero, CC-DYNAMICS copies all the specified data into a series of files called **#TIMEO.*** These files are used to restore to initial state after calculations. That way, the user may always return to the initial state if desired.

To change the initial state (and the contents of the #TIMEO files) the user must first restore to initial state (using the restore to initial state command) and then edit the data. Unless this is done, access to initial state data will be blocked by the program. *Note that the command **save as initial state** allows the user to overwrite the initial state with current state of the flowsheet.*

2. Current State files:

These files contain all the system data at the end of the last simulation unless the user has restored the initial state. The dialogs for unit operations and streams will show the current state value of variables.

3. Recorded files:


These files contain the time history of the simulation. Batch reactor variables are saved automatically. All other variables are saved only if the user specifically requests it. The recorded files are used to plot the dynamic history of unit operations and streams.

TURNING ON THE DYNAMIC MODE


Activate dynamic mode on the Convergence dialog box. The command for this dialog is under the Run command on the main menu bar. Note that some actions (such as placing a batch reactor on a flowsheet) will automatically set this for you.

Procedure:

Click the **Run** command on the main menu bar. Click on the **Convergence** option at the top of the menu, the following screen will appear:

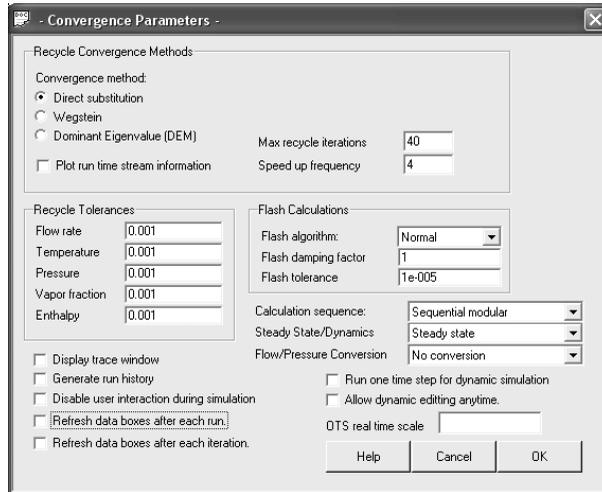


Select the **Steady State/Dynamics** combo box. Scroll down and select **Dynamics** as shown in the picture below.

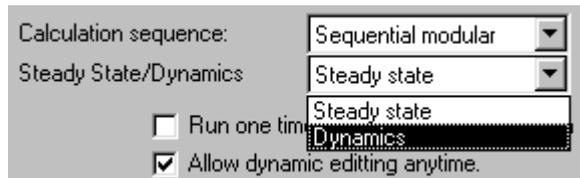

Click **OK** to save the changes. As a result the steady-state Run button will be turned off and the dynamic buttons on the toolbar will be turned on. They will be colored and no longer shaded (see picture below).



Also some dynamics commands will be activated such as the **Dynamics** command on the **Run** menu, the dynamic plot commands on the **Plot** menu, and the **dynamic results** commands on the **Results** menu (see pictures below). The **Dynamics** command on the **Run** menu is discussed in the next section.

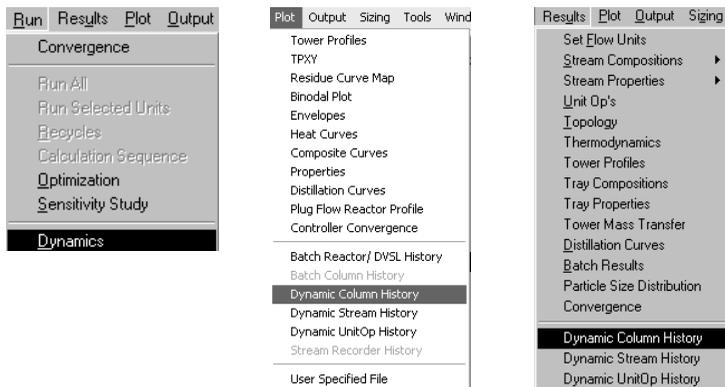

THE DYNAMICS MENU

The DYNAMICS MENU provides the commands for:

1. Running the dynamics simulation
2. Managing the data associated with the runs
3. Recording and displaying the desired results

The dynamics menu has the following options:



Exit:

Exit dynamics menu without executing simulator.

Set Run Time:

This option brings up a screen which allows you to set the overall duration of the run ("Overall Run-Time") and the time increment between successive time slices ("System Timestep"). The duration can be specified as a specific time or as an event.

Run from initial state:

This option resets the flowsheet to the case #TIMEO (the initial conditions) and begins the dynamic simulation.

Run from current state:

Runs the flowsheet from the current conditions.

Restore to initial state:

Copies the flowsheet conditions from the case #TIMEO files to the current state files.

Record Streams:

This option enables the user to specify which streams are to be saved, i.e., have their time histories saved. These streams can then be printed in a report or plotted in a graph using other options in the dynamics menu. This option also allows the user to select which stream variables are to be plotted during runtime.

Record unit operations:

This option enables the user to select which unit operations are to be saved, i.e., to have their time histories saved. These UnitOps can then be printed in a report or plotted in a graph using other options in the dynamics menu. This option also allows the user to select which UnitOp variable is to be plotted during runtime.

Record process:

This option enables you to specify specific times that you want every variable in the process recorded. These recorded results are then available for plotting and printing.

Save as initial state:

This option enables the user to make the current parameters of the dynamic simulation become the new initial state.

Help:

This option opens the help facility of the dynamics menu.

These commands are described below.

SET RUN TIME


This command is used to set the stop criteria of the dynamics run and to specify the time step size (how often the flowsheet equations are integrated). These items must be specified for the calculation to proceed. Clicking this option will cause the following **Set Simulation Run Time dialog box** to be displayed. Please make note of the following:

1. More than one operating step can be specified. If a run is made from time zero (i.e., the initial state), all specified operating steps will be run. If the simulation is being run from the current state, then only those operating steps beyond the current time will be run.

Operating steps can be added at any time, so this feature provides a facility for extending the dynamic simulation indefinitely.

2. The time step size is specified in the **Step size** field.
3. Operating step run time limits can be specified as fixed times or as events. These stopping events can be when a UnitOp or Stream variable is equal to, greater than, less than, limited from below or limited from above by a specified value.

The Dynamic Run Time Schedule dialog box has two pages that look like this:

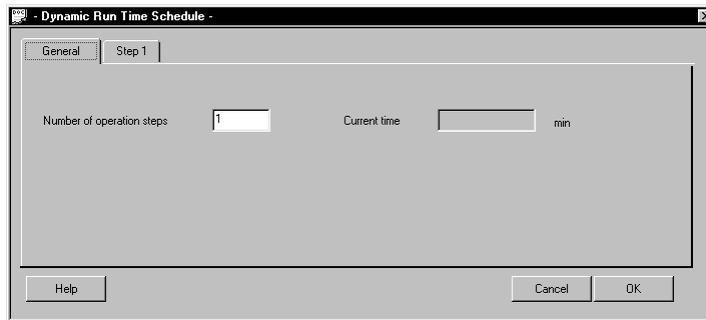

GENERAL INPUT

Number of operating steps:

The number of operating steps to be simulated must be entered in this field. Otherwise, the program will only run the first step. Up to ten operating steps can be specified. For each operating step a stop criteria can be specified.


Current Time:

Displays the current simulated time. That is, the time at the end of the last simulated operating step.

Step X:

For each operating step a dialog box displaying the following fields will be provided.

Using the stop criteria, you can stop the simulation after a specified amount of time, or when a stream or equipment variable reaches a certain value, minimum or maximum.

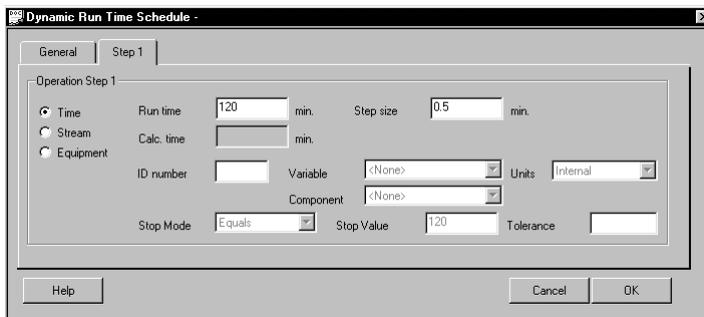

Stop When:

This field identifies the type of stop criteria to be used for this operating stop. Options are:

- Time – stop when the specified run time has been reached.
- Stream – stop when a specified stream variable has met the stop criteria
- Equipment – stop when a specified equipment or UnitOp variable has met the stop criteria.

Run Time:

If the stop criteria are to be time, the duration of the operating step must be entered in this field (in minutes).

Step Size:

The step size determines the frequency of integration during the simulation. Step size is specified in minutes of simulated time. For example, if the operating step is to calculate 100 minutes of simulated time, and the step size is 2 minutes, the program will integrate the flowsheet equations 50 times during the simulation.

The step size selected will have an impact on the accuracy of the results and the speed of the calculation. Smaller time steps will produce smaller errors, but will require more time to make the run.

Step size can be different for every operating step if desired.

ID Number:

If the **Stop When** selection is “Stream” or “Equipment”, the ID number of the relevant stream or equipment must be entered in this field.

Variable Number:

If the **Stop When** selection is “Stream” or “Equipment”, the number of the relevant stream or equipment variable must be entered in this field. Variable numbers are listed in the on-line help.

Variable Unit:

If the stop criteria are to be based upon a stream or equipment variable, then it is advisable to identify the type of variable which has been selected. Variable Type identifies the engineering units to be applied to the variable. If the variable type is identified, the program will apply the global flowsheet

engineering units to the **Stop Value**. If the Variable type is not identified, then the program will apply internal engineering units to the **Stop Value**.

For example, if the stop criteria is to be based upon the temperature of stream 5, and the global flowsheet units for temperature is degrees Celsius, then the "Temperature" option should be selected in the **Variable Unit** field. This will tell the program that the **Stop Value** has units of degrees Celsius. If "Temperature" is not selected, the program will assume the **Stop Value** is specified in degrees Rankine (CC-DYNAMICS' internal units for temperature).

Component:

If a component purity or flowrate criteria is chosen, identify the relevant component from the list.

Stop Mode:

The stop mode is the numerical operator, which is used to compare the current value of the stopping variable to the stop value. When:

{Current value of stopping variable} operator {Stop Value} is true

then the operating step is over.

The following operators are available:

- **Equal to (=):** This operator will end the operating step when the current value of the stopping variable is within a specified tolerance of the stop value.
- **Greater than (>):** This operator will end the operating step when the current value of the stopping variable exceeds the stop value.
- **Less than (<):** This operator will end the operating step when the current value of the stopping variable is below the stop value.
- **Minimum:** This operator will end the operating step when the value of the stopping variable passes through a minimum.
- **Maximum:** This operator will end the operating step when the value of the stopping variable passes through a maximum.

Stop Value:

This is the numerical value of the stopping criteria. If "Stream" or "Equipment" was selected in the **Stop When** field, the stop value must be specified. If "Time" was selected in the **Stop When** field, the stop value field is not used.

Stop Tolerance:

This is the acceptable tolerance to be used when the "equal to" **Stop Mode** is used.

Calculated Run Time:

If "Stream" or "Equipment" was selected in the **Stop When** field, the program will calculate the time it took to complete the operating step. That value will be displayed in this field. Units are always minutes.

RUN FROM INITIAL STATE

Selecting this option will cause the program to return to the initial conditions and rerun the entire simulation. All results from previous simulations will be discarded.

RUN FROM CURRENT STATE

Selecting this option will continue the simulation from the current state, i.e., from the last calculated result. In order to use this option, an operating step beyond the current state must be scheduled on the **Set runtime** option above.

RESTORE TO INITIAL STATE

This option will restore the initial conditions specified. All previous calculations will be discarded. It is necessary to restore to the initial state in order to change certain flowsheet variables. By default, once a simulation has started, CC-DYNAMICS will not allow you to change any variables. You can change this by going to the Run->Convergence menu and selecting "Allow dynamic editing anytime."

RECORD STREAMS AND RECORD UNIT OPERATIONS

Unless otherwise specified the user, CC-DYNAMICS will only record the histories of batch reactors and dynamic columns. For all other UnitOp and streams only the initial and final variable values are recorded. If desired, to view, plot, or report the historical results of these other UnitOps and streams, then you must instruct the program to do so using the **Record Streams** and **Record Unit Operations** menu options. Each options calls a dialog box in which you can list the streams and/or UnitOps that you wish recorded. Selections can be typed in or chosen with the mouse. Once an item is selected, then all of the variables associated with that item are recorded.

RECORD PROCESS

This dialog box is used to identify times (simulated) when the entire process is to be recorded. Recording the entire process means that every variable in the process will be written to disk. Use this option with caution, it can slow down calculations and greatly increase the storage space required for your simulation.

SAVE AS INITIAL STATE

Selecting this option will cause the program to set the current conditions of the dynamic run as the new initial condition. All parameters from the previous initial state will be discarded and it will not be possible to recover data for the previous state.

HELP

This button will open the help facility of the dynamics menu.

REVIEWING DYNAMIC RESULTS

Dynamic results can be obtained on the **Results** menu. The user should select one of three general dynamic options at the bottom of the Results command: **Dynamic Column History**, **Dynamic Stream History** and **Dynamic UnitOp History**.



Please note the following points when viewing dynamic results:

1. Clicking on the Results command on the menu bar will cause the Results menu to open. This menu contains a set of options for reviewing program output.
2. The answers for dynamic vessels can be reviewed using the Dynamic UnitOp History option.
3. Dynamic column results are reviewed using the Dynamic Column History option.
4. The answers for other dynamic unit operations are reviewed using the Dynamic UnitOp History command.
5. Stream histories are obtained using the Dynamic Stream History option.
6. The Unit Operations option can be used to produce a display of the input for a dynamic UnitOp. Certain calculated values, such as final temperature, final level, etc., will also be displayed.
7. The Streams option will display properties and composition of any stream at end of the simulation.
8. A UnitOp and stream histories can be obtained only for recorded UnitOps and streams.


PLOTTING DYNAMIC RESULTS

To plot a recorded variable there are two options. The user can either use the dynamic plot commands on the **Plot** menu or use the dynamic results buttons on the tool bar.

Stream histories and UnitOp histories are plotted using the Batch Reactor/DVSL History, Dynamic Column History, Dynamic Stream History, and UnitOp History options on the Plot menu. With the

exception of batch reactors and dynamic columns, **you must indicate to the program that a given stream or UnitOp is to be recorded before the simulation is run**, otherwise the data will not be available to plot.

Dynamic plot results can be obtained by selecting one of the dynamic options at the bottom of the **Plot** menu or by clicking on the Dynamic Plots buttons on the menu bar (see pictures below):

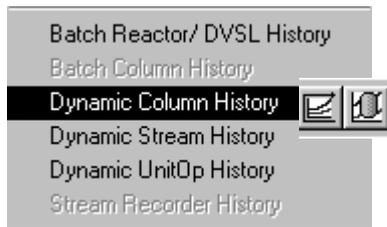

DYNAMIC COLUMN HISTORY (CC-DCOLUMN)

After running a Dynamic Column, you may plot several of the recorded values using this option. Once you select this option, you will be asked to select the dynamic column on your flowsheet. When you click **OK**, you will see the following dialog box:

Variable to be plotted

Define the variable to be plotted on the y-axis. Select one from the pull-down list.

Object to be plotted

Select one of the following. This field may not be needed if the variable specified above does not require a location (e.g., reflux ratio).

- Distillate
- Bottom
- Stage

Stage Information

If a plot for one of the stages in the column is desired, specify the following:

- Stage No. – Enter the stage number for which the properties will be plotted.
- Phase – Indicate whether you are plotting data for the liquid or vapor phase.
- Time Unit / Frequency

Time Unit

Specify what time unit you want to use for the x-axis and the frequency you want plotted (hr, min, sec).

Plot Frequency

This is the number of time steps between plotting results. If the simulation integration time step is one minute and the plot frequency is five, the results will be plotted every five (simulated) minutes.

Y-axis min/max values

CC-DCOLUMN allows tuning up the range for the plot of a recorded variable. Specify a minimum and maximum for the y-axis of your plot

Components to be plotted


You may plot up to ten components by selecting them in this section. If the plot you select is any related to flow or concentration (i.e. mole/mass/mass frac/ etc) you may want to select the component(s) to be plotted. Select components from the pull-down list.

DYNAMIC STREAM HISTORY

After running a dynamic flowsheet, you can plot stream variables versus time, if you have specified that a stream be recorded in the Dynamics Menu.

To plot a stream variable go to the **Plot** menu and select the **Dynamic Stream History** option. You may also click on the **Dynamic Stream History** button on the menu bar.

Selecting this option will open the following dialog box:

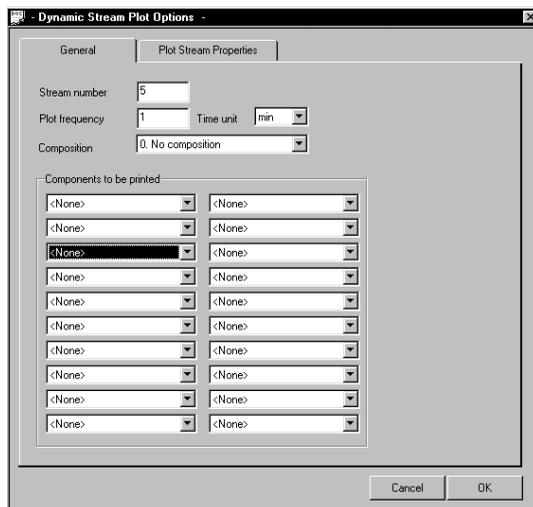

Stream number

Define the stream number to be plotted. You must have specified that this stream be recorded.

Plot Frequency/Time Unit


Specify the frequency and time for the stream variables to be plotted.

Composition / Components

Specify whether or not you desire a composition/time plot and the units you desire (i.e. mole/mass/mass frac/ etc). Also specify which components are to be plotted.

Stream Variables

Click on the **Plot Stream Properties** tab. The following screen will appear:

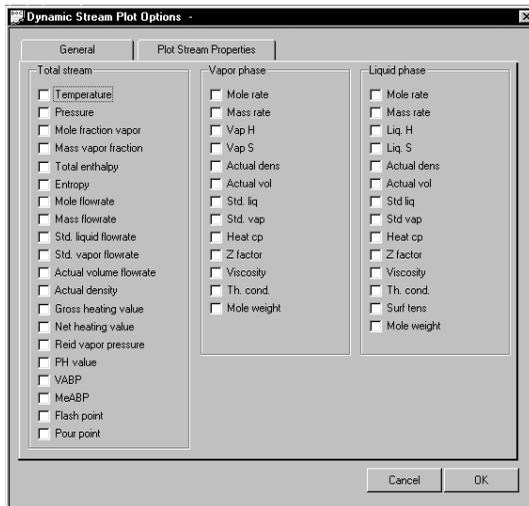

Specify which stream variables to plot by using the check boxes next to the variable names. Click **OK** to save the changes and open the stream property plot CC-DCOLUMN will create.

THE BATCH REACTOR MODEL (CC-REACS)

OVERVIEW

Figure 1 provides a pictorial summary of the batch reactor model.

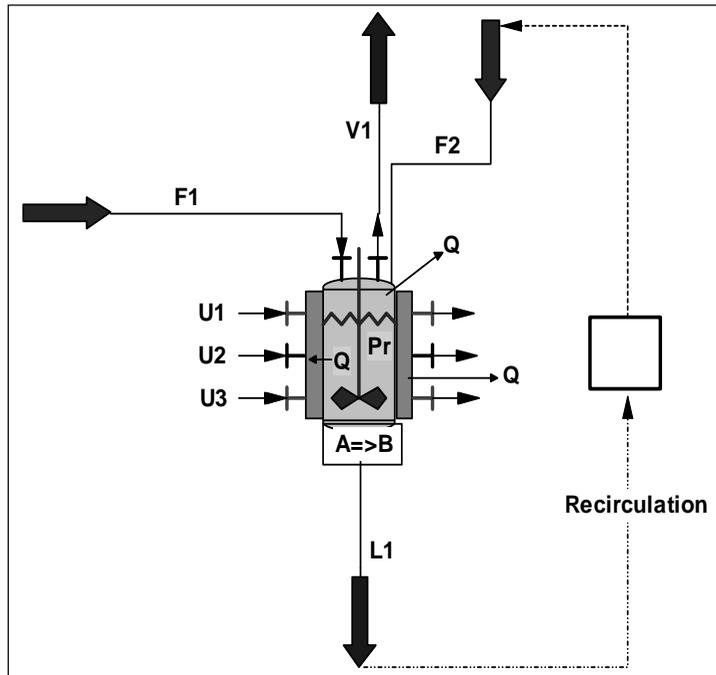


Figure 1

The batch reactor UnitOp simultaneously solves the following sets of equations:

1. For the reaction mass it solves:

- The mass balance which involves up to two feeds streams, one vapor and one liquid outlet stream (both optional), the reaction rate equation, and the phase equilibrium (flash) relationships.
- The heat balance which includes the enthalpies of the feeds, outlets and holdup, the heat of reaction, the heat transferred from/to the jackets and coils, agitator horsepower and ambient heat losses/gains.
- The pressure calculation (optional) which uses the reactor geometry and the phase equilibrium relations to determine pressure and rate.

2. For the jackets and coils it solves:

- The mass balance including the holdup and up to three utility streams (in and out) per jacket or coil.
- The heat balance, which includes the enthalpies of the holdup, the inlet and outlet, streams, the heat transferred to (from) the reaction mass, and ambient losses (gains).

- The pressure calculation (determination of the dynamic pressure inside the jacket/coil) via energy and phase equilibrium equations.

The model has the following major features:

- Unlimited number of simultaneous reactions.
- Arrhenius or Langmuir-Hinshelwood, as well as user defined forms of the rate equation.
- Any combination of jackets, external coils, and/or internal coils on the reactor vessel (maximum of five per reactor).
- Heat-cool-chill can be simulated.
- Reactor pressure can be fixed or calculated.
- Heat transfer coefficients can be specified or calculated.
- Jackets may be baffled or unbaffled, and agitating nozzles can be used.
- External coils may be dimpled or half pipe.
- Feed and product flow rates may be scheduled, controlled, or, for vapor vents, calculated.
- Batch, semi-batch, and continuous operation can be simulated.
- PID control systems can be used.
- Run time plots can be generated.
- Heat transfer can be scheduled or calculated.
- Phase equilibrium can be vapor-liquid or vapor-liquid-liquid.
- The thermal mode of calculation can be isothermal, adiabatic, isothermal with a temperature schedule, adiabatic with a heat load schedule, or calculated using heat transfer methods.
- Agitator characteristics can be user specified.
- Recirculation loops are permitted.
- Dynamic rating of pressure relief valves can be modeled using the DIERS methodology.

THE BATCH REACTOR (REACTION SIDE) MASS BALANCE

The batch reactor mass balance starts with the generic dynamic mass balance relation:

$$\text{Rate of accumulation} = \text{rate in} - \text{rate out} + \text{rate of formation}$$

where

$$\text{rate of formation} = \text{reaction rate} - \text{rate of evaporation/condensation}$$

For CC-ReACS, the individual component balances are expressed:

$$V \cdot \frac{dC_i}{dt} = \sum F_{in,j} \cdot C_{j,i} - F_{out} \cdot C_i + \sum r_{n,i} \cdot V - C_i \frac{dV}{dt}$$

where

V	=	Reaction mass volume
C _i	=	Concentration of component i
t	=	Time
F _{in,j}	=	The flow rate of feed j
C _{j,i}	=	The concentration of component i in feed j
F _{out}	=	The flow rate of the liquid draw stream
r _{n,i}	=	The rate of reaction n in component i

Please note that:

1. As stated above, the model permits one or two feeds, one liquid draw, and one vapor outlet or vent. Recirculation loops around the reaction mass are also permitted.
2. The reaction rates are calculated using the Arrhenius expression, the Langmuir-Hinshelwood equation or a rate expression defined by the user. The Arrhenius and Langmuir-Hinshelwood equations are given below. The methodology for user added rate expressions is provided in Appendix II to this manual.
3. The evaporation/condensation term is calculated using the phase equilibrium model selected by the user. These models can handle a very wide range of applications including vapor-liquid, liquid-liquid, and electrolyte systems.
4. When the relief device analysis is included in the simulation, it participates fully in the mass balance. If two-phase fluid is vented, the liquid as well as the vapor will be deducted from the reactor contents. The composition of these is determined by the DIERS methods.
5. The vessel volume can have a number of influences on the mass balance. These are:
 - Vessel liquid overflow or underflow will terminate the simulation.
 - When pressure is fixed, vapor generation over the available vapor space will be vented.
 - Vessel volume will influence the pressure calculation, which in turn will influence the evaporation/condensation term.

THE REACTION RATE EQUATIONS

CC-ReACS provides two standard forms for the rate expression. In addition, the user may define his/her own reaction rate expression or algorithm.

The standard rate expressions are:

Arrhenius Equation

For a single reaction, the Arrhenius equation looks like this:

$$r = \left(A \cdot e^{-E/(RT)} \right) \cdot \prod C_i^{a_i}$$

where

- r = The rate of the reaction in moles per volume-time
- A = The frequency factor
- E = The activation energy
- R = The gas law constant
- T = The reaction temperature
- Π = The multiplication operator
- C_i = The concentration of species i
- a_i = The order of the reaction for species i

Langmuir-Hinshelwood Equation

The Langmuir-Hinshelwood equation is the Arrhenius equation multiplied by an “adsorption resistance” factor, F. The Langmuir-Hinshelwood equation is intended to model the impact of mass transfer resistance associated with using a solid catalyst. Since this modification requires a lot of data to determine the adsorption terms, it is not frequently used. Note that if $\beta=0$, $F=1$ and the reaction rate becomes the simple Arrhenius form.

$$F = \left(1 + \sum \phi_i \cdot e^{-E_i/(RT)} \cdot C_i^{b_i} \right)^{-\beta}$$

therefore

$$r = \left(A \cdot e^{-E/(RT)} \right) \cdot \left(\prod C_i^{a_i} \right) \cdot \left(1 + \sum \phi_i \cdot e^{-E_i/(RT)} \cdot C_i^{b_i} \right)^{-\beta}$$

where

- ϕ_i = The adsorption frequency factor for species i
- b_i = The adsorption exponential factor for species i
- β = The power factor for reaction adsorption sites

Multiple Reaction Systems

For multiple reaction systems, the total rate of reaction for a single component is:

$$r_i = \sum_{j=1}^{nrx} \left(N_{i,j} \cdot A_j \cdot e^{-E_j/(RT)} \cdot \prod_{k=1}^{n_j} C_k^{a_{k,j}} \right) \cdot \left(1 + \sum_{k=1}^{n_j} \phi_{k,j} \cdot e^{-E_{k,j}/(RT)} \cdot C_k^{b_{k,j}} \right)^{-\beta_j}$$

where


r_i	=	Rate of formation for component i, mole/volume-time
i	=	Subscript for component i
k	=	Subscript for reactant k
j	=	Subscript for reaction j
$N_{i,j}$	=	Stoichiometric coefficient for component i in reaction j
A_j	=	Frequency factor in reaction j
E_j	=	Activation energy in reaction j
R	=	Universal gas constant
T	=	Absolute temperature
C_k	=	Concentration of reactant k, mole/volume or the partial pressure of reactant k
$a_{k,j}$	=	Exponential factor for reactant k in reaction j (Exp. reactor)
n	=	Number of reactants
nrx	=	Number of reaction
$\phi_{k,j}$	=	Adsorption frequency factor for component k (Adsorp fac) in reaction j
E_k	=	Adsorption energy factor for component k (Adsorp E) in reaction j
β_j	=	Power factor for adsorption sites term for reaction j (Beta factor)
\prod	=	Multiplication operator
$b_{k,j}$	=	Adsorption exponential factor for reactant k in reaction j (Adsorp Exp)

This is the Langmuir-Hinshelwood form. When $\phi_{k,j}$, $b_{k,j}$, and/or β_j are zero, this equation reduces to the Arrhenius form.

The following should be noted about the standard reaction rate models:

1. Reactions can take place only in the liquid phase.
2. Where two liquid phases are present, they are treated as a single liquid phase when computing reaction rates. The concentration terms are calculated as the overall concentrations of the combined liquid phases. In addition, the amount of any given species, which is available for consumption, is the total amount of that species present in the combined liquid phases.

3. Unless otherwise specified, the order of reaction j in species i is assumed to be equal to the stoichiometric coefficient of species i in reaction j .
4. Only reactant concentration terms can participate in the rate expression. Where this is inconvenient, specify the non-reactant as a reactant with a stoichiometric coefficient less than the calculation mass balance tolerance. Then specify the order at the desired value. For example, if A goes to B in the presence of homogeneous catalyst, C, and the rate data indicates that the concentration of C linearly influences the reaction rate, then:
 - a. Specify the stoichiometry:

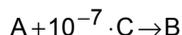

- b. Specify the rate expression, e.g.j

$$r = A \cdot e^{-E/RT} \cdot [A]^1 [C]^1$$

User Added Rate Expressions:

If the user has rate expressions that are not in the Arrhenius form, he/she can also enter them into CC-ReACS. The user rate expression setting allows the user to enter a reaction expression, which is interpreted by Microsoft Excel. The method for defining a user added rate expression or algorithm is provided in Appendix II of this user's guide.

THE JACKET/COIL MASS BALANCES

The program uses the following assumptions and conventions when computing mass balances for jackets and coils.

1. Unless otherwise specified by the user, the jacket is initially empty.
2. Liquid utilities fill the jacket from the bottom up. Once the jacket is full, the inlet and outlet flow rates are equal.
3. Vapor (compressible) utilities fill the jacket instantaneously. The temperature and pressure are adjusted (via adiabatic flash) to match the fluid volume to the jacket volume.
4. Each jacket or coil can have up to three utilities. Meaning, up to three inlet and outlet streams.
5. Stream utilities are modeled as steam traps.
6. Transition conditions, e.g. switching from stream to cooling water, are ignored. The switch is assumed to be instantaneous at each stream. The program refills the jacket or coil.

THE REACTOR HEAT BALANCE

The dynamic heat balance of a reactor is written as:

$$\begin{aligned} \text{Rate of accumulation} &= \text{Feed enthalpies} \\ &- \text{Outlet stream enthalpies} \end{aligned}$$

- + Heat of reaction
- Latent heat of evaporation/condensation
- Heat transferred to/from the jackets and coils
- Heat transferred to and from the atmosphere

These terms are described individually below:

1. Inlet and outlet stream enthalpies

The feed enthalpies are inputs to the reactor model and are determined by the selected thermodynamic routines and the UnitOp the feed came from (if any). The reaction simulation determines outlet enthalpies.

2. Heat of reaction

Unless specified by the user, CC-ReACS calculates the heat of reaction from the thermochemical properties of the reactants and products:

$$\Delta H_r = \sum (\Delta H_f \text{ of products})_{T,P} - \sum (\Delta H_f \text{ of reactants})_{T,P}$$

where

$\sum (\Delta H_f \text{ of products})_{T,P}$ is the sum of the heats of formation for the reaction products at the system conditions.

and

$\sum (\Delta H_f \text{ of reactants})_{T,P}$ is the sum of the heats of formation for the reaction reactants at the conditions.

For liquid components:

$$\Delta H_f(T) = \Delta H_{f,ig}(25) + \int_{25}^{T_b} C_{p,g} dT - \Delta H_v(T_b) - \int_{T_b}^T C_{p,l} dT$$

where

- $H_f(T)$ = The heat of formation at the system temperature
- $H_{f,ig}(25)$ = The standard (ideal gas at 25°C) heat of formation of the component
- T_b = Boiling point at component
- $C_{p,g}$ = The ideal gas heat capacity of the component

$H_v(T_{b+})$ = The latent heat of the component at its boiling point

$C_{p,l}$ = The liquid heat capacity of the component

3. Thermal modes

The batch reactor model has the following thermal simulation modes:

- Isothermal – the required heat duty is calculated
- Adiabatic – heat transfer to and from the reaction mass is assumed to be zero
- Adiabatic with specified heat duty – the heat duty to and from the reaction mass is assumed to be equal to a constant user specified value
- Specify time/temp profile – a heat duty is calculated to conform to a user-specified temperature profile
- Specify jackets/coils – heat transfer to and from the reaction mass is calculated using heat transfer methods
- Specify time/heat duty profile- – heat transfer to and from the reaction mass is taken from a user-specified schedule
- Specify vapor rate and P, calc duty – the heat duty is calculated based on the users selection of vapor product rate and pressure.

4. Heat loss to the ambient

If the user specifies the overall heat transfer coefficient, U ; the available heat transfer area, A ; and the ambient temperature, T_a , the program will calculate a heat gain/loss using the expression:

$$Q = U \cdot A \cdot (T - T_a)$$

Where T is the reaction mass temperature and Q is the heat transferred.

5. Heat transfer to and from jackets and coils

Heat transferred to/from the reaction mass from/to jackets and coils is computed using heat transfer methods whenever the “Specify jackets/coils” thermal mode is selected. Standard industry heat transfer methods are used. These methods are described in a later section of this guide.

The following points should also be noted regarding the reactor side heat balance:

1. If the relief device is included in the simulation, it will influence the heat balance like so:
 - The DIERS methodology affects the amount and composition of the material exiting the vapor vent. The enthalpy of this material is included in the heat balance.
 - A relief simulation can involve the calculation of an emergency heat load such as that created by a fire. This emergency heat load is included in the heat balance and is in addition to any other heat duty specified or calculated elsewhere.

2. The program does not calculate required agitator horsepower. However, if the user specifies the agitator horsepower, it will be included in the heat balance.
3. In order to activate the program's heat transfer calculations, it is necessary to select the "Specify jackets/coils" thermal mode. Selection of this mode is required if a PID control system is to be used on the reactor jacket. However, it is not necessary to set up a PID control system if this mode is selected. It is possible to specify a fixed or scheduled utility flow to a jacket or coil.

THE JACKET/COIL HEAT BALANCES

Heat balances for jackets and coils are calculated:

$$\begin{aligned}
 \text{Rate of accumulation} &= && \text{Utility stream inlet enthalpies} \\
 &- && \text{Utility stream outlet enthalpies} \\
 &+(-) && \text{Heat transferred from/to the reaction mass} \\
 &-(&+) && \text{Heat lost/gained to the ambient}
 \end{aligned}$$

These are explained below:

1. Inlet and outlet stream enthalpies

The enthalpies of utility inlet streams are input to the jacket model and are determined by the system thermodynamics and the UnitOp providing the utility stream (if any). Outlet stream enthalpies are equal to the enthalpy of the fluid contained in the jacket.

2. Heat transferred to/from the reaction mass

Heat transfer to and from the reaction mass is computed whenever the "Specify jackets/coils" thermal mode is selected. This calculation uses standard industrial methodologies, described below.

3. Heat loss to the ambient

If the user specifies the overall heat transfer coefficient, U ; the available heat transfer area, A ; and the ambient temperature, T_a ; CC-ReACS will calculate a heat gain/loss from/to the ambient. The following expression is used:


$$Q = U \cdot A \cdot (T - T_a)$$

where

T is the jacket/coil temperature and Q is the heat transferred.

HEAT TRANSFER CALCULATION DETAILS

Figure 2.1 illustrates the local heat transfer model used by CC-ReACS.

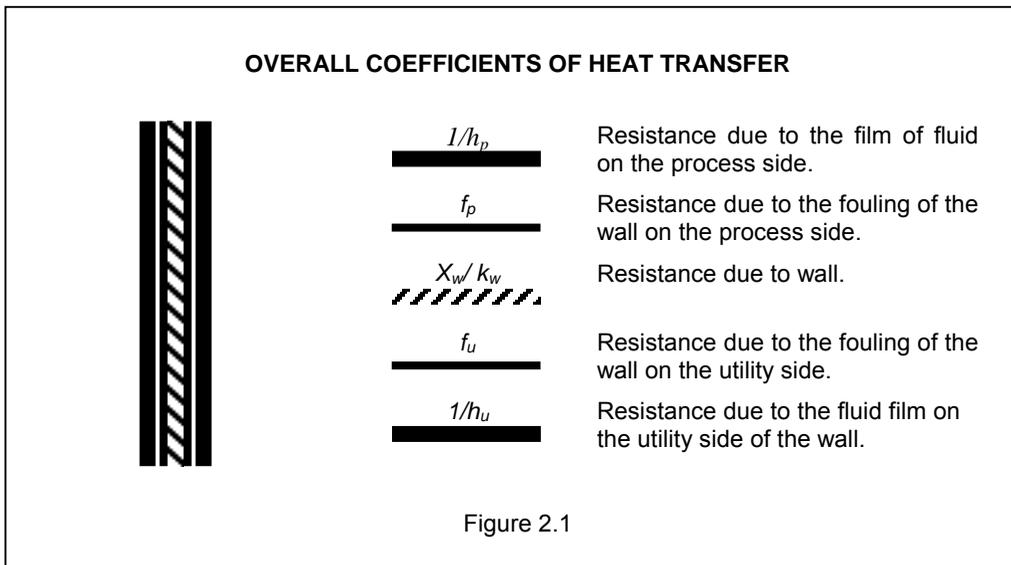

Thermal resistances are summed to give the total resistance ($1/U$):

$$\frac{1}{U} = \frac{1}{h_p} + f_p + \frac{x_w}{k_w} + f_u + \frac{1}{h_u}$$

where

- U = The overall heat transfer coefficient
- h_p = The process (reaction) side heat transfer (film) coefficient
- f_p = The process side fouling factor
- X_w = The reactor vessel wall thickness
- f_u = The utility side fouling factor
- k_w = The thermal conductivity of the reactor wall

Globally, the heat transferred is calculated by solving the expression:

$$Q = U \cdot A \cdot \text{LMTD}$$

where

Q	=	The heat transferred
U	=	The overall heat transfer coefficient
A	=	The heat transfer area
LMTD	=	The log means temperature difference between the process and utility sides

The vessel wall thickness, thermal conductivity and the fouling factors are specified by the user.

The reaction mass temperature, T_r , and the jacket/coil temperature, T_j , are determined by the heat balances. Since the heat balances on the reaction and utility sides are linked by the heat transfer calculation, the determination of T_r and T_j is coupled.

This leaves the following variables requiring explanation:

- The process side heat transfer coefficient, h_p
- The utility side heat transfer coefficient, h_u
- The heat transfer area

The process (reaction) side heat transfer coefficient

CC-ReACS will calculate a process side heat transfer coefficient at two locations; the reactor vessel wall, and the outside surface of an internal coil that is immersed in the liquid reaction mass. The Sieder-Tate equation is used in both situations. This equation is:

$$Nu = f \cdot Re^a \cdot Pr^b \cdot \left(\frac{\mu_w}{\mu} \right)^c$$

where

Nu	=	Nusselt number
Re	=	Reynolds number
Pr	=	Prandtl number
μ	=	Bulk fluid viscosity
μ_w	=	Viscosity of the fluid at the reactor wall temperature

The coefficients f , a , b , c are dependent on which agitator is used. The user must supply them if an agitator other than the default agitator is to be modeled. A table of acceptable values for common agitators is provided in the appendix.

Utility side heat transfer coefficients

Film coefficients for spiral baffled jackets, dimpled jackets, and half pipes are calculated using the following methods:

For *spiral baffling* and *dimple/half pipe external coils*:

$$\text{Re} < 2100; \quad \text{Nu} = 1.86 \left[\text{Re} \cdot \text{Pr} \cdot \left(\frac{D_e}{2} \right) \right]^{0.33} \left(\frac{\mu}{\mu_w} \right)^{0.14}$$

$$\text{Re} < 10,000; \quad \text{Nu} = 0.027 \cdot \text{Re}^{0.2} \cdot \text{Pr}^{0.33} \cdot \left(\frac{\mu}{\mu_w} \right)^{0.14} \left[1 + 0.35 \left(\frac{D_e}{D_c} \right) \right]$$

2100 < Re < 10,000; ReACS uses the Colburn Analogy

where

D_c = The coil diameter

For *unbaffled jackets*, the Lehrer equation is used:

$$\text{Nu} = \left[\frac{0.03 \text{Re}_{\text{ann}}^{0.75} \cdot \text{Pr}}{1 + \frac{1.74 (\text{Pr} - 1)}{\text{Re}_{\text{ann}}^{0.125}}} \right] \left(\frac{\mu}{\mu_w} \right)^{0.14}$$

where

Nu = Nusselt number
 Re = Reynolds number
 Pr = Prandtl number
 μ = Viscosity
 D_e = Equivalent diameter
 w = Reactor wall
 ann = Annulus of the jacket

The characteristic dimension in the Reynold's and Nusselt numbers is the equivalent length, D_e . The characteristic velocity in the Reynolds number is U_h . These are calculated below:

$$D_e = \left(\frac{8}{3} \right)^{0.5} \cdot \delta$$

$$U_h = (U_{\text{ann}} \cdot U_o)^{1/2} + U_{\text{buoy}}$$

where

$$U_o = \left[\frac{M_{med}}{q \cdot (\pi d_0^2 / 4)} \right]$$

The following applies for radial inlets:

$$U_{ann} = \frac{M_{med}}{q \pi d_{Ro} \delta}$$

Both free and forced convection occurs. The free convection is described by a "buoyancy rate" U_{buoy} :

$$U_{buoy} = 0.5 (2gh_{ann}\beta\Delta\vartheta)^{1/2}$$

If the inlets are tangential, the following equation applies

$$U_{ann} = \frac{M_{med}}{qh_{ann}\delta}$$

If the inlets are tangential, the only means of allowing for the buoyancy rate U_{buoy} is vector addition. For this reason, U_{buoy} was ignored by Lehrer in the range of Reynolds numbers investigated.

where

$$U_{buoy} = 0$$

For *jackets with agitating nozzles* the program uses the Pfaudler methods for heat transfer. These methods are too lengthy for proper description here and the user is referred to the Pfaudler heat transfer manual.

For *internal coils* the Sieder-Tate equation is used to calculate the heat transfer coefficient.

Determination of the heat transfer area


Each jacket or coil has a heat transfer area dependant upon the level of fill in the reactor. The jacket may cover the base and walls of the vessel, the base only or the wall only. The area for heat transfer is calculated using:

$$A = \frac{(V - V_{min})}{V_{max} - V_{min}} \cdot (A_{max} - A_{min}) + A_{min}$$

Where the maximum and minimum heat transfer areas A_{max} and A_{min} and the corresponding volumes V_{max} and V_{min} are specified. If the level of fill exceeds V_{max} then the area is limited to A_{max} . If the level of fill falls below V_{min} as in a vessel with a dished base, the area is linearized between A_{min} and zero.

$$\text{For } V < V_{\min} \quad A = \frac{V}{V_{\min}} \cdot A_{\min}$$

The variation of heat transfer area with level of fill is illustrated below.

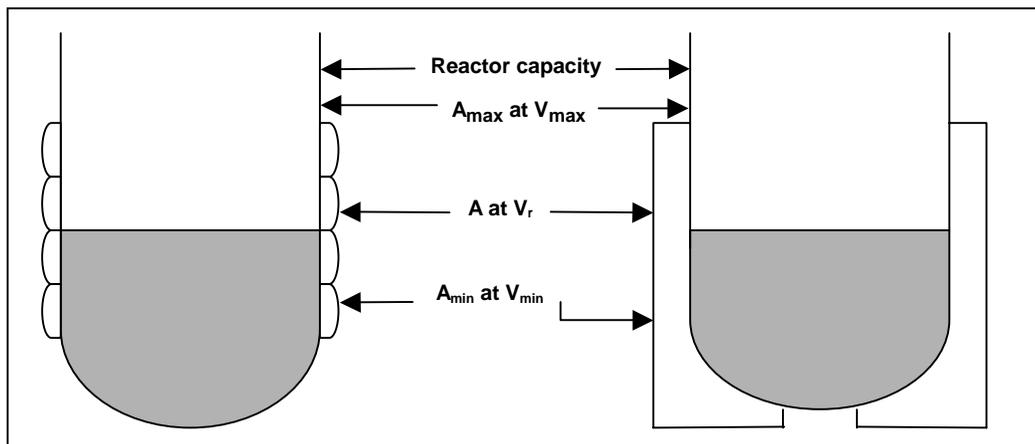

The capacity of a jacket should be entered as the total volume of the jacket including any recirculation loop. The model assumes the jacket is well mixed. For a recirculating system, the recirculation rate is assumed to be sufficiently fast for the contents of the recirculation loop to be the same temperature as the contents of the jacket.

THE PRESSURE CALCULATION

In the default condition, CC-ReACS calculates the pressure in the reactor. It does this by including a constant volume flash in the equation set. The program holds the reactor volume constant and varies the reactor pressure until the summation of the vapor volume and the liquid volume equal the reactor volume. The user may turn this feature off by specifying the reactor pressure. In this case, the summation of the vapor and liquid volumes will not necessarily equal the reactor volume, unless the user specifies vapor draw to maintain pressure.

The following points should be noted regarding the pressure calculation:

1. If the pressure is to be calculated, the flowrate of the vapor vent or outlet stream (if present) must be specified. If not, the problem is under specified. However, this specification can be made explicitly by the user by scheduling the vapor flowrate, or it can be made implicitly using a PID control system. An example of the latter would be a pressure control system where the vapor flowrate is adjusted to maintain a described reactor pressure.
2. Frequently, the initial charge specifications will produce volumes that do not match the vessel volume. If the pressure is to be calculated, this can produce unwanted results unless certain conventions are adopted to manage this situation. In CC-ReACS, the following conventions are adopted:

- a. If the liquid present exceeds the reactor capacity, an error message is issued and the simulation will not proceed.
- b. If the initial charge is subcooled, then the program will do an adiabatic flash to reset the temperature and pressure to values which fill the vessel. A warning message will be issued.
- c. If the initial charge is two-phase at the specified temperature and pressure, and the sum of the vapor and liquid volumes is not equal to the reactor volume, an error message will be issued. If the user chooses to go ahead with the simulation, then the program proceeds as follows:
 - The vapor and liquid amounts and compositions are determined.
 - The available vapor space is determined by subtracting the liquid volume from the reactor volume.

$$AVS = RV - LV$$

where

$$AVS = \text{Available vapor space}$$

$$RV = \text{Reactor volume}$$

$$LV = \text{Liquid volume}$$

- The “excess” vapor is calculated below:

$$EV = VV - AVS$$

where

$$EV = \text{Excess vapor}$$

$$VV = \text{Vapor volume of the initial charge}$$

The excess vapor is therefore negative if the initial charge does not fill the reactor vessel.

- The excess vapor is removed from the initial charge so that the vapor volume, VV , exactly equals the available vapor space, AVS . If the excess volume is negative, this means adding enough vapor (of the same composition as the initial vapor) to fill the available vapor space.

JACKET/COIL PRESSURE CALCULATION

CC-ReACS sets the jacket/coil pressure as follows:

1. If the utility stream is a liquid (non-compressible), no pressure calculation is performed. The jacket pressure is equal to the utility inlet pressure.
2. If the utility stream is compressible, the pressure is recalculated to match the utility volume to the jacket volume. Since utility vapor rates are generally many times greater than the jacket volume, this requires that the jacket integration time step be several orders of magnitude smaller than the flowsheet time step. This adjustment is handled automatically by the program.
3. Stream utilities are modeled as steam traps.

RELIEF CALCULATIONS

The CHEMCAD Relief device model is explained in detail in the on-line help system. No effort is made to repeat that information here. The following points, however, are specific to CC-ReACS and should be noted.

1. Only the rating calculations can be performed in CC-ReACS dynamically. The size of the relief valve and/or rupture disk must be specified. CC-ReACS will then calculate the amount, composition and vapor quality of the material which passes through the vent. This material is then removed from the heat and material balance. The relief device may be sized based on the CHEMCAD Relief Device Sizing routine, see the on-line help system for details.
2. The vent inlet pressure is determined dynamically based on vessel contents and heat input. The valve (disk) backpressure may be specified by the user and is fixed throughout the simulation, or calculated using a nodes and pipe segments to define the flare header system.

BATCH REACTOR INPUT


Input for the Batch Reactor requires completion of the following dialog boxes:

- The **Initial Charge dialog box**
- The **General Information dialog box**
- The **Rate Equation Units dialog box**
- The **Reaction Kinetics dialog box**
- The **T/Q Profile dialog box**
- The **Reactor Specifications dialog box**
- The **External Feed Schedule dialog box**
- The **Product Draw Schedule dialog box**
- The **Relief Device dialog box**
- The **Set Screen Information dialog box**

It is not necessary (or even possible) that all of these dialog boxes be completed for every problem. Obviously, you do not need to complete the **Product draw dialog box** if you are simulating a strictly batch process. The bulk of the input is provided through the first four dialog boxes listed above. The others are used as needed. CC-ReACS will not permit access to those dialog boxes that are not relevant to the current simulation. The programs "access decisions" are made based upon specifications made in the **General Information dialog box**.

THE BATCH REACTOR MENU

All of the above listed items are accessed through the **Batch Reactor Menu**, which appears whenever you double-click on a batch reactor UnitOp on a flowsheet. To access a dialog box, you simply click on the appropriate **Batch Reactor Menu** item. When the dialog box is closed, control will return to this menu.

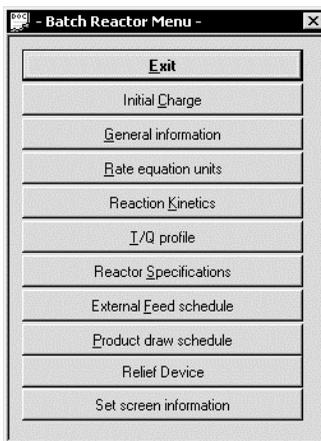

A field by field description of the input for each of these dialog boxes is provided below:

THE REACTOR INITIAL CHARGE DIALOG BOX

The **Reactor Initial Charge dialog box** has the same structure and format as a CHEMCAD stream dialog box. Only the flow units are amounts instead of rates. This dialog box also follows the same input conventions as a stream dialog box, therefore:

1. The composition must always be specified. If it is specified as component amounts, then the total amount is determined by CC-ReACS as the sum of the component amounts. If the composition is specified as component fractions (mole, mass, or volume), then the total amount must be user specified.
2. If the specified component fractions do not sum to one the program will normalize them.
3. The user must specify any two of the initial charge's Temperature, Pressure, and vapor fraction. From this input the program will calculate the enthalpy of the initial charge.
4. A user specified vapor fraction of one (1.0) is taken to mean the dew point. A user specified vapor fraction of zero (0.0) is taken to mean the bubble point.
5. Enthalpy cannot be user specified.

Please refer to the CHEMCAD User's Guide for a detailed description of how to complete stream dialog boxes.

THE BATCH REACTOR GENERAL INFORMATION DIALOG BOX

The **Batch Reactor General Information dialog box** has three pages, which appear below:

The screenshot shows the "Batch Reactor General Information" dialog box with the following settings:

- Number of reactions: 2
- Show plot during simulation:
- Specify reactor phase: Mixed phase, liquid phase reaction
- Kinetic rate expression: Standard
- Thermal Mode:
 - 1 Isothermal (specify temp)
 - 2 Adiabatic (no heating exchange)
 - 3 Specify heat duty
 - 4 Spec time / temp. profile
 - 5 Specify jackets/coils
 - 6 Specify time / heat duty profile
 - 7 Specify vapor rate and P, calc duty
- Specify constant pressure: 200 psia
- Pressure will be fixed to the given specification:

Buttons: Help, Cancel, OK

GENERAL INPUT

Batch Reactor General Information -

General Semi-Batch Convergence

ID: 1

Feed Streams

Feed stream 1: None Feed stream 2: None

Feed 1 option: Flowrate Feed 2 option: Flowrate

Product Streams

Liquid product: None Vapor product: Stream 1

Reactor Contents

Reactor Holdup: ft³

Transfer reactor content to stream #:

Help Cancel OK

Batch Reactor General Information -

General **Semi-Batch** Convergence

ID: 1

Integration Parameters

Integration Method: Semi-implicit RK4 (for stiff systems)

Step size:

Tolerance:

Results from current iteration:

Reactor temperature	244.128	F
Reactor pressure	200	psia
Wall temperature	199.089	F
Heat rate	-8.79499e-007	MMBtu/h
Rxn heat rate	-8.79499e-007	MMBtu/h
Liquid level	2.26494	ft

Overall Results:

Overall heat	3.52639	MMBtu
Overall H of rxns	-0.148153	MMBtu

Help Cancel OK

The batch reactor can accommodate any number of simultaneous reactions. For each of these reactions, the stoichiometry and rate data must be given in the **Reaction Kinetics dialog box**.

Show plot during simulation:

You may turn the runtime plot on or off. If the runtime plot option is on, then the specific variable plotted is specified on the **Set Screen Information dialog box**. Multiple runtime plots can be specified using the **Record Streams** and the **Record Unit Operations** options on the **Dynamics Menu**.

Specify reactor phase:

- liquid (default)
- Mixed phase, reaction occurs in the liquid phase only.

If **liquid** is selected here, the program assumes that all constituents are in the liquid phase at all times. It is therefore impossible to have a vapor vent with this option. It is impossible for the program to calculate the reactor pressure when this option is selected. If the vapor-liquid equilibrium calculation indicates that a vapor phase is present, CC-ReACS will issue a warning message, but will continue to calculate concentrations as if everything were in the liquid phase.

If **mixed phase** is selected, then at each time step the program will determine the contents of the vapor and liquid phases. Only the liquid phase constituents will be used in the concentration terms and only liquid phase constituents will be available for reaction. Obviously, then the mixed phase option must be selected if you want to have a vapor vent or calculate the reactor pressure during the simulation.

Kinetic rate expression:

- Standard (default)
- User-Specified

If standard is selected, the reaction rate calculated using the standard rate expressions (Arrhenius or Langmuir-Hinshelwood). The details of the Arrhenius equation and the Langmuir-Hinshelwood equation are provided in the description of the batch reactor model.

If user specified is selected, the reaction rate is calculated using the user specified reaction rate. A full description of the user added rate facility is described in Appendix II to this manual.

Specify Thermal mode:

The thermal mode defines the assumptions to be made about heat transfer during the simulation. Options are:

1. Isothermal (default)
2. Adiabatic
3. Specify heat duty
4. Specify fixed time/temperature profile
5. Specify jackets/coils
6. Specify time/heat duty profile
7. Specify vapor rate and P, calc heat duty

Mode 1: Isothermal:

The batch reactor can be isothermal. For this option, the heat duty required to maintain this temperature will not be calculated for the unit. This option assumes perfect reactor control and therefore, calculations for heat transfer and temperature control are not made. Entries for these functions are not permitted. The option requires entry of temperature.

Mode 2: Adiabatic:

The batch reactor can also be adiabatic. For this option, CHEMCAD calculates the reaction temperature for the batch reactor. As in the case of isothermal operation, the reactor control is not relevant, and control and heat transfer calculations are not performed.

Mode 3: Specified heat duty:

This option is a special form of the adiabatic mode. It requires an entry for heat duty. As in modes 1 and 2, the reactor control system is not specified or used.

Mode 4: Specify time/temperature profile:

The user may fix the temperature of the reaction mass at each time step by specifying the temperature profile, that is, the temperature as a function of time. A heat duty will be calculated at each time step. The temperature profile is provided on the T/Q profile dialog box, which is accessed from the "Batch Reactor Menu". The input for the T/Q profile is described in detail below.

Mode 5: Specify jackets/coils:

Using this mode heat transfer calculations are made based upon the flow and conditions on the jacket side (and/or coil side) and the reaction side of the reactor. Although it is not required that a control system be employed when using this mode, if a control system is to be specified, this mode (5) must be selected. This requires that the user input the specifications for the control system calculations. This is done in other menus and equipment.

Mode 6: Specify time/heat duty profile:

This option is similar to Mode 4 above, except that the heat duty/unit time is specified and the temperature at each time step is calculated. Control is assumed to be perfect. The heat duty profile is specified on the "T/Q Profile" dialog box (see below).

Mode 7: Specify vapor rate and P/calculate heat:

The user may fix the pressure and a vapor draw schedule to have the program calculate the required heat duty. A vapor outlet stream must be connected to the reactor for this heat mode. The vapor draw scheduled may be specified in the **Product Draw Schedule** menu.

Reaction Temperature:

If mode 1 is selected, then a field will open for the specification of the reaction temperature.

Heat duty:

If mode 3 is selected, then a field will open for the specification of the heat duty. This is the amount of heat to be added or subtracted to the reactions. Negative indicates cooling. Positive indicates heating.

Pressure:

If you want CC-ReACS to calculate the reactor pressure at each time step, leave this field blank. If you do not want the program to calculate the reactor pressure at each time step (that is, you want to specify a fixed pressure for the simulation), then enter the reactor operating pressure.

If pressure is specified:

- For a single liquid phase reactor, all the thermal calculations, such as holdup density, holdup volume, enthalpy, etc., will be calculated, but no flash calculation will be performed. If holdup volume is greater than the reactor volume, the program will give an error message and stop the simulation.

- For a two-phase reactor, the program will use the given pressure and temperature to do the flash calculations. The program will not check the holdup volume in this situation.
- For adiabatic reactors, the same rules apply, except that the temperature must be determined iteratively.

If pressure is not specified:

- The program will take the temperature and reactor volume and do a flash until the right pressure is found. That is, the pressure at which the total volume is equal to the volume of reactor.
- If the user chooses a liquid phase reactor mode, the thermal calculations will not be pressure sensitive. In this situation, the program will use the bubble point pressure in all calculations. The program checks the holdup volume, gives error messages and stops the simulation if it is greater than reactor volume.

SEMI-BATCH INPUT

IF EXTERNAL FEED STREAMS EXIST...

Up to two feed streams may be fed directly to the batch reactor. If feed streams to the reactor exist, then the user must:

- Draw an inlet stream to one of the top inlet positions on the batch reactor.
- Enter the ID number of the feed stream in the Feed stream number field.
- In the Feed1 (2) option fields, specify whether the feed schedule input is the instantaneous flow rate or the cumulative feed flow rate.

IF LIQUID IS DRAWN FROM THE REACTOR...

Liquid product stream no.:

If a liquid product is to be drawn from the bottom of the reactor, the user must do the following:

- Draw an outlet stream from the bottom position of the batch reactor icon.
- Enter the ID number of the liquid draw stream in this field.

IF VAPOR IS DRAWN FROM THE REACTOR...

Vapor stream no.:

One vapor outlet stream is permitted on the reactor vessel. That stream must be drawn on the flowsheet, and its ID number must be specified in this field.

CONVERGENCE INPUT

Integration Method:

The program offers two methods for integrating the reaction equations:

- **Semi-implicit RK4 method:** This is the fourth order, semi-implicit Runge-Kutta method. This method is the more rigorous of the two methods, but it is slower computationally. For stiff systems, that is systems where some variables move significantly faster than other variables, it is necessary to use this method in order to get an accurate answer. Since most chemical processes are stiff, this is the default.
- **Runge-Kutta 4:** This is the fourth order Runge-Kutta method. It is an explicit method and is therefore not suitable for stiff systems. If you have a system where all reactions proceed slowly, this method can save you significant computation time.

INTEGRATION PARAMETERS...

Step size:

This is the amount of simulated time between integrations. Since CC-REACS uses some form of the Runge-Kutta method for all integrations, this step size is a starting point. It defines the largest step size which can be used for integration. Input is required.

Tolerance:

This is the tolerance to be used by the Runge-Kutta method(s) for integration. This input is optional as the program has a default.

CALCULATED RESULTS

Calculated results for important variables are summarized. Detailed data and plots of variables vs. time may be prepared from the Results or Plot menus in CC-ReACS.

Reactor Temperature:

Reactor Temperature at the last calculated time step is displayed.

Reactor Pressure:

Reactor pressure at the last calculated time step is displayed.

Wall Temperature:

Reactor wall temperature at the last calculated time step is displayed.

Heat Rate:

The heat duty of the reactor at the last calculated time step. Negative represents heat removed, and positive represents heat added.

Reaction heat rate:

The heat of reaction at the last calculated time step.

Liquid Level:

Liquid level in the reactor at the last calculated time step is displayed.

Overall Heat:

The overall heat transferred from the reactor is displayed. Negative represents heat removed, and positive represents heat added.

Overall heat of reactions:

The cumulative heat of reaction for the reactor.

RATE EQUATION UNITS DIALOG BOX

The purpose of the **Rate Equation Units** is to permit the user to specify different engineering units for the rate equations that are being used in the flowsheet globally. This makes entry of Arrhenius and Langmuir-Hinshelwood parameters easier. The entry fields are:

Stoichiometrics/Equation Basis:

This option is used to specify whether the stoichiometry and rate equations have a mole or mass basis. The available options are:

- **Use mole basis for stoichiometry and rate equation.**

Default mode

- **Use mass basis for stoichiometry and rate equation.**

This option is useful for biological reactions (*stoichiometry becomes mass based*), which are often mass based. It is important to note that with the **mass basis** option, stoichiometry *becomes mass based*.

Time units for rate equations:

- 0 hours
- 1 minutes
- 2 seconds

Volume units:

Volume units are used to specify concentration and reactor size. The volume units may be independent of global volume units. Options are:

- 0 cubic feet
- 1 cubic meters
- 2 liters
- 3 cubic centimeters (cc)

Activation Energy and Heat of Reaction Units:

Activation energy units may be selected independently of global enthalpy units. Allowable options are:

- 0 Btu
- 1 kBtu
- 2 MMBtu
- 3 Joules
- 4 kJoules
- 5 MJoules
- 6 Cal

- 7 kCal
8 MCal

The energy units are based on mole units selected below.

Reference reaction temperature for heat of reaction:

This is the reference temperature for the heats of reaction. This value is given in the same temperature units as are being used globally. If this field is left blank, a value of 77⁰F (25⁰C) is assumed.

THE REACTION KINETICS DIALOG BOX

The **Reaction Kinetics dialog box** appears as follows:

Reaction Number: 1

Frequency factor: 8.623e+013 Beta factor:

Activation energy: 35960 Heat of reaction:

Component	Stoichiometric coefficient	Exponential factor	Adsorption factor	Adsorption energy	Adsorption exponent
2 1-Butene	-1	1			
6 Methanol	-1	0.389			
5 MTBE	1				
<None>					

Edit next reaction
 Edit specified rxn
 Exit reactions

Rxn #

This is a “reaction” dialog box and it permits the user to define the stoichiometry and the kinetic relationship for a reaction. Simply fill in the blanks. The following rules apply:

1. One of the dialog boxes must be completed for each reaction. CC-ReACS knows how many reactions are present by reading the “No. Reaction” field from the batch reactor **General Information dialog box**.
2. **CC-ReACS** will display one **Reaction Kinetics dialog box** for each reaction specified in the **Number of Reactions** field on the **General Information dialog box**. The user has three options to edit reactions utilizing the option buttons at the bottom of the screen:

Edit next reaction: This is default option. Pressing OK when this option is selected will open the reaction kinetics dialog box of the next reaction.

Edit specified rxn: Pressing OK when this option is selected and a reaction number is input will open the reaction kinetics dialog box of the specified reaction. This option allows scrolling forward and backwards as well.

Exit Reactions: Pressing OK when this option is selected will stop the kinetics specification process. The main batch reactor menu will appear.

- If a standard rate equation is being used, then the program will return to the **Batch Reactor Menu** when the user selects the **Exit reactions** option or after the last reaction dialog box is completed. If a user defined rate expression is to be used, the program will go to the **User Rate Expression dialog box** after the last reaction dialog box is closed or after selecting the **Exit reactions** option.

After the **User Rate Expression dialog box** is closed, the program will return to the **Batch Reactor Menu**.

The total rate of reaction for a single component in a simultaneous reaction can be calculated using one of the "standard" rate equations (Arrhenius or Langmuir-Hinshelwood) or it can be calculated using a user defined rate expression. The form of the Arrhenius and the Langmuir-Hinshelwood equations are described below. Use of the user defined rate equation facility is described in the appendices.

The Arrhenius / Langmuir-Hinshelwood equations:

$$r_i = \sum_{j=1}^{nrx} \left(N_{i,j} \cdot A_j \cdot e^{-E_j/(RT)} \cdot \prod_{k=1}^{n_j} C_k^{a_{k,j}} \right) \cdot \left(1 + \sum_{k=1}^{n_j} \phi_{k,j} \cdot e^{-E_{k,j}/(RT)} \cdot C_k^{b_{k,j}} \right)^{-\beta_j}$$

Note: Most users will not have a need for the adsorption terms contained in the second brackets. Leaving out such data, the rate expression reverts to the traditional stoichiometric reactant-concentration dependent form with Arrhenius temperature dependence.

where

r_i	=	Rate of formation for component i, mole/volume-time
i	=	Subscript for component i
k	=	Subscript for reactant k
j	=	Subscript for reaction j
$N_{i,j}$	=	Stoichiometric coefficient for component i in reaction j
A_j	=	Frequency factor in reaction j
E_j	=	Activation energy in reaction j
R	=	Universal gas constant
T	=	Absolute temperature
C_k	=	Concentration of reactant k, mole/volume or the partial pressure of reactant k
$a_{k,j}$	=	Exponential factor for reactant k in reaction j (Exp. reactor)
n	=	Number of reactants
nrx	=	Number of reaction

$\phi_{k,j}$	=	Adsorption frequency factor for component k (Adsorp fac) in reaction j
$E_{k,j}$	=	Adsorption energy factor for component k (Adsorp E) in reaction j
β_j	=	Power factor for adsorption sites term for reaction j (Beta factor)
Π	=	Multiplication operator
$b_{k,j}$	=	Adsorption exponential factor for reactant k in reaction j (Adsorp Exp)

The input fields for the **Reaction Kinetics dialog box** are described below:

Frequency factor: This is variable A_j in the above equation. This is sometimes called the rate constant (for isothermal reactions). The units of A_j depend upon the reaction order (the exponential factor).

Activation energy: This is variable E_j in the above equation. It has units of energy/mole.

Beta factor: This is the adsorption exponent B_j in the above equation. It is dimensionless.

Heat of reaction: This is the heat of reaction at system temperature and pressure. The user may specify the heat of reaction. If not, CC-ReACS will calculate it from the constituent heats of formation. Whether input or calculated, a negative value indicates an exothermic reaction and a positive value indicates an endothermic reaction.

FOR EACH COMPONENT PARTICIPATING IN THE REACTION SPECIFY:

Stoichiometric coefficient: This is the stoichiometric coefficient of this component. If this component is a reactant, it should have a negative value. If a product, it should have a positive value.

Exponential factor: This is the component activity exponent term, a_{kj} , in the above equation. In other words, this is the order of the reaction in this component. If left blank, then if this component is a reactant, then the exponent; a_{kj} is set equal to the absolute value of the stoichiometric coefficient. If this field is left blank and this component is not a reactant, the exponent, a_{kj} , is set equal to 0.0.

Adsorption factor: This is the Langmuir-Hinshelwood adsorption frequency factor, ϕ_{kj} , in the above rate equation. If left blank, ϕ_{kj} is set equal to zero and no adsorption resistance for this component is included in the rate expression.

Adsorption energy: This is the Langmuir-Hinshelwood adsorption activation energy, E_{kj} , used in the above rate equation. If left blank then E_{kj} is set equal to 0.0.

Adsorption exponent: This is the Langmuir-Hinshelwood adsorption component exponent, b_{kj} , in the above rate equation. If left blank, b_{kj} is set equal to 0.0.

Note: It should be noted at this point that if the user is going to specify his/her own rate expression, when the user selects the **Exit reactions** option or the last **Kinetic Data dialog box** (there is one for each reaction) is closed, then the **User Rate Expressions dialog box** will automatically open. This procedure and how to specify user rate expressions is explained in Appendix II.

T/Q PROFILE DIALOG BOX

The purpose of the T/Q Profile dialog box is to enable the user to specify:

1. A time/temperature profile if the **"4 Specify time/temp. profile"** thermal mode is selected on the **Batch Reactor General Information dialog box**.
2. A time/heat duty profile if the **"6 Specify time/heat duty profile"** thermal mode is selected on the **Batch Reactor General Information dialog box**.

These two dialog boxes are shown below:

The BREA Temperature Profile dialog box:

Time (hr)		Temp C	Time (hr)		Temp C

The BREA Heat Duty Profile dialog box:

Time (hr)		Heat Duty kcal/h	Time (hr)		Heat Duty kcal/h

The following rules apply when completing these screens:

1. Time is always in hours (as indicated).
2. Specified heat duty values are instantaneous values in the indicated engineering units.
3. Values are interpolated (lively) between given points in time.

REACTOR SPECIFICATIONS DIALOG BOX

The purpose of the **Reactor Specifications dialog box** is to specify the geometry, properties for the materials of construction, heat transfer parameters, and initial conditions for the reactor and any jackets or coils which might be integral to it. The **Reactor Specifications dialog box** is flexible and dynamic in its input collection. The number of pages will depend upon prior specifications such as the thermal mode and the number of jackets and/or coils to be used. Page one of the dialog box, the "General" page, is always displayed.

PAGE ONE – GEOMETRY INPUT

Reactor manufacturer:

The user may specify the reactor parameters or choose a commercial reactor from the CC-ReACS reactor vessel library. To select from the library, the vessel manufacturer must first be selected.

Reactor type:

Select a reactor vessel from the displayed manufacturers list.

Reactor size:

For the selected reactor type, choose a commercially available size from the list displayed.

A list of reactor vessels contained in the library is given in Appendix III.

The fields for reactor volume, reactor diameter, wall thickness, wall density, wall cp, wall thermal conductivity, base volume, and base area are automatically filled in if a vessel is selected from the library. The input for and meaning of these fields is explained below.

Reactor volume:

Enter the total volume of the reactor vessel.

Reactor diameter:

Enter the Reactor diameter. The reactor diameter is used in conjunction with the reactor volume to calculate the following values:

- Reactor liquid level
- Heat transfer area
- Inside film heat transfer coefficient

Wall thickness:

Enter the thickness of the vessel wall. This value is used in determining the heat transfer resistance of the wall and the thermal mass of the reactor vessel.

Wall density:

Enter the density of the reactor vessel wall material. This value is used in determining the thermal mass.

Wall Cp:

Enter the heat capacity of the reactor vessel material. This value is used in determining the thermal mass of the reactor vessel.

Wall Thermal Conductivity:

Enter the thermal conductivity of the reactor vessel wall material. This value is used in determining the heat transfer resistance of the reactor wall.

Wall volume

Enter the wall volume. This value is used in determining the heat transfer resistance of the wall and the thermal mass of the reactor vessel.

of jackets and coils: Enter the number of jackets and coils (sum of both). This specification will cause the program to open one additional input tab for each jacket or coil.

Base volume:

The base volume is the volume of material in the base of the reactor, that is, below the straight side of the reactor. This value is used in determining heat transfer and liquid levels.

Base Area:

Enter the area of the base of the reactor.

Other optional inputs are:

Initial wall temperature: Enter the initial vessel wall temperature if desired. The default is the initial charge temperature.

Optional for semibatch – Holdup: Enter the holdup for semi-batch operations. If the liquid volume is greater than this amount, then the excess will go out the bottom stream from the reactor.

PAGE TWO – PROCESS SIDE

Batch Reactor Specifications -

General | **Process side** | Jacket/Coil 1

ID: 1

Process side heat transfer coefficient

Reactor/Jacket $h_{i,j}$ [] Btu/hr-ft²-F
 Reactor/Coil $h_{i,c}$ [] Btu/hr-ft²-F
 Reactor fouling [] hr-ft²-F/Btu

Ambient heat loss

U_{loss} [] Btu/hr-ft²-F
 A_{loss} [] ft²
 Amb. temperature [70] F

Process side mixing

Impeller agitator
 Anchor agitator

Impeller diameter [2] ft
 Impeller speed [2] Hz (1/sec)
 Motor power [2] hp
 Min. volume impeller [] ft³
 Min. volume anchor [] ft³

Seider Tate correlation: $Nu = f \cdot (Re^{0.7}) \cdot (Pr^{0.4}) \cdot (\mu/\mu_w)^{0.14}$

Reactor/Jacket		Reactor/Coil	
Coefficient a	0.66	Coefficient a	0.62
Coefficient b	0.33	Coefficient b	0.33
Coefficient c	0.14	Coefficient c	0.14
Coefficient f	0.36	Coefficient f	0.87

Specify Heat Transfer Coefficients - or - Impeller Details

Help | Cancel | OK

Specify process side heat transfer coefficient:

As discussed above, heat transfer from the reactor is calculated as follows:

$$Q = U \cdot A \cdot \Delta T$$

$$U = \frac{1}{\frac{1}{h_i} + f_i + \frac{x_w}{k_w} + f_o + \frac{1}{h_o}}$$

where

- Q = Heat transfer
- A = Heat transfer area
- ΔT = Temperature of the reaction mass minus bulk temperature of the jacket fluid
- h_i = The film heat transfer coefficient at the inside of the reactor wall
- f_i = The fouling resistance at the inside of the reactor wall
- x_w = Reactor wall thickness
- k_w = Reactor wall thermal conductivity
- f_o = The fouling resistance on the outside (jacket side) of the reactor wall
- h_o = The film heat transfer coefficient at the outside (jacket side) of the reactor wall

h_i may be specified by the user if desired, but in the default condition, it is calculated by the program using the Seider-Tate equation. X_w and k_w are always specified although k_w has a default value of 0.3 Btu/hr-ft²°F (carbon steel).

Reactor /Jacket h_{i-j} :

This is the reactor side film coefficient (h_i above) for heat transferred from the reaction mass to a jacket or outside coil fluid. If the user makes an entry here, the value entered will be used to calculate U and CC-ReACS will not calculate h_{i-j} . If this field is left blank, CC-ReACS will calculate h_{i-j} .

Reactor /Coil h_{i-c} :

This is the reactor side film coefficient (h_i above) for heat transferred from the reaction mass to an inside coil fluid. If the user makes an entry here, the value entered will be used to calculate U and CC-ReACS will not calculate h_{i-c} . If this field is left blank, CC-ReACS will calculate h_{i-c} .

Reactor fouling (reactor side):

This value must be input by the user because the default fouling resistance is 0.

IF h_{i-j} AND h_{i-c} IS NOT INPUT, ENTER THESE FIELDS:**Impeller/Anchor agitator:**

Identify general agitator type.

Impeller diameter:

If the values of h_{i-j} and/or h_{i-c} are to be calculated by the program, data on the impeller/agitator will be required. The impeller diameter is used in determining the Reynolds number at the wall. This in turn is used when calculating the film coefficient.

Impeller speed (Hz):

Enter the speed of the impeller. As explained above in "Impeller diameter" this is needed to calculate the reactor side film coefficient.

Motor power:

Enter the motor power if known. This value is optional but will be included in the heat balance if provided.

Min. volume impeller:/Min. volume anchor: If a reactor vessel is selected from the database, values are displayed in these fields. These values however are not used in any calculations.

Ambient Heat Loss: Coefficients U and A .

If the user enters U_loss (overall heat transfer coefficient from the reactor to the atmosphere) and A_loss (heat transfer area for the loss to the atmosphere) (below), then CC-ReACS will calculate a heat loss from the reactor to the environment and include this in the heat balance.

Ambient temperature:

Enter the ambient temperature for the heat loss calculation ($Q = U_loss \cdot A_loss \cdot \Delta T$). The default is 70°F.

Seider-Tate correlation: The Seider-Tate correlation is used to calculate the heat transfer film coefficient at the reactor wall (in the case of jackets or external coils) or on the process side of an internal coil. Coefficients a , b , c and f must be supplied for the calculation.

FOR JACKETS AND EXTERNAL COILS: The Seider-Tate equation for the reactor side film heat transfer coefficient at the reactor wall is:

$$Nu = f \cdot Re_f^a \cdot Pr^b \cdot \left(\frac{\mu}{\mu_w} \right)^c$$

a, b, c and f are a function of which agitator is used. (See above.) Therefore, to calculate h_{i-j} , these fields must have entries. The default values are, a = 0.66, b = 0.33, c = 0.14, and f = 0.36.

FOR INTERNAL COILS: The Seider-Tate equation for h_{i-c} is exactly the same as for h_{i-j} (See above, but the parameters a, b, c, and f are different.) These parameters are a function of which impeller is used.

JACKET/COILS SPECIFICATIONS DIALOG BOX

The purpose of these pages is to allow the user to specify the relevant geometry and heat transfer parameters for jackets and coils. Since a given vessel may have more than one jacket and/or coil, one page will appear for each jacket or coil.

The **Jacket/Coils** page appears as below:

The dialog box is titled "Jacket/Coil #1 Specifications" and has three tabs: "General", "Process side", and "Jacket/Coil 1". The "Jacket/Coil 1" tab is selected. The dialog is divided into several sections:

- Jacket type:** A dropdown menu set to "Internal coil".
- Geometry:** Four input fields: "Coil total volume" (m3), "Coil height" (m), "Coil diameter" (m), and "Coil tube diameter" (m).
- Initial conditions:** Three input fields: "Pressure" (bar), "Temperature" (C), and "Initial liquid fraction". An "ID:" field contains the value "1".
- Heat transfer specifications:** Two columns of input fields. The first column is "Active area" with "Minimum" and "Maximum" (both m2). The second column is "Reactor volume" with "Minimum" and "Maximum" (both m3).
- Optional heat transfer to ambient:** Two input fields: "Ambient area" (m2) and "Heat transfer coef." (W/m2K).
- Utility stream definition:** Three rows for "Utility stream 1", "Utility stream 2", and "Utility stream 3". Each row has a dropdown menu (all set to "None"), an input field for "Utility origin Stream ID", and an input field for "Optional Heat Transfer Coef." (W/m2K).
- Other parameters:** "Jacket fouling factor" (m2K/W) and "Pressure drop" (bar).

Buttons for "Help", "Cancel", and "OK" are located at the bottom of the dialog.

Jackets are assumed to be well mixed. A jacket may cover the base and walls of the vessel, or just a part of the wall. An external coil is considered to be a type of jacket. Coils are modeled as a series of well mixed sections in which liquid flows from the bottom upwards. Jackets and external coils are attached to the external wall of the reactor. Internal coils are in direct contact with the reaction mass. Each coil is modeled as a series of well mixed sections.

Jacket/Coil type:

This drop-down dialog box is used to identify the Jacket/Coil type. The available choices are Internal coil, Dimpled/Half Pipe/External coil, Unbaffled Jacket, or Jackets with agitating nozzles. This specification tells CHEMCAD which heat transfer equations to use on both the reactor and service side. Each Jacket/Coil type requires specific geometric information to be input by the user.

Internal Coil:	Coil total volume, Coil height, Coil diameter and Coil tube diameter.
Dimpled/Half Pipe/External coil:	Jacket total volume, Jacket height, Flow area and Wetted perimeter.
Unbaffled Jacket:	Jacket total volume, Jacket height, Jacket annulus and Inlet diameter.
Agitating Nozzle	Jacket total volume, jacket height, Jacket annulus, circulating nozzle diameter, number of inlet nozzles, nozzle type.

All jackets and external coils on the reactor have a common wall with the reactor and therefore share the same film heat transfer coefficient inside the reactor. Internal coils are not in contact with the reactor wall and individual heat transfer correlation may be specified for each internal coil.

Heat Transfer area:

Each jacket has a heat transfer area dependent upon the level of fill in the reactor. The jacket may cover the base and walls of the vessel, the base only or the wall only. The user must specify the minimum and maximum heat transfer areas and the minimum and maximum reactor volumes that correspond to these areas for each Jacket/Coil specification.

The area for heat transfer is calculated using:

$$A = \frac{(V - V_{\min})}{(V_{\max} - V_{\min})} \cdot (A_{\max} - A_{\min}) + A_{\min}$$

Where the maximum and minimum heat transfer areas A_{\max} and A_{\min} and the corresponding volumes V_{\max} and V_{\min} are specified. If the level of fill exceeds V_{\max} then the area is limited to A_{\max} . If the level of fill falls below V_{\min} as in a vessel with a dished base, the area is linearized between A_{\min} and zero.

$$\text{for } V < V_{\min} \quad A = \frac{V}{V_{\min}} \cdot A_{\min}$$

Utility Stream definition:

Each jacket or coil may have up to three service fluids passing through it. These service jacket/coil side fluids each originate in a flowsheet stream called the originating (orig.) utility stream (referred to the data entry screen) as the "Origin of utility stream n " (where n is 1, 2 or 3). Normally, this stream will go into a control valve and emerge with a new stream number. This stream then enters a PID controller UnitOp and emerges with yet another stream number. More complex arrangements are also common and permitted. Eventually, the utility fluid enters the jacket/coil via a stream going directly into the jacket/coil which is called the utility inlet stream. On the data entry screen, this is called the "Utility stream n " (where n is 1, 2 or 3).

Jacket side heat transfer coefficient (optional):

CC-ReACS will calculate the service side film heat transfer coefficient unless the user overrides the program by specifying his/her own. Any combination of specified and calculated film coefficients is allowed so whenever a field is left blank, CC-ReACS will calculate the coefficient.

Jacket/Coil fouling:

Jacket/coil fouling resistance.

Pressure drop:

Utility stream pressure drop due to flow through jacket/coil.

Initial Conditions:

The user has the option to define the initial pressure, the initial temperature, and/or the initial liquid fraction in the jacket or coil. If any of these fields are left blank, the following defaults are used:

- i. The pressure of the first utility stream to enter the jacket/coil;
- ii. The temperature of the first utility stream to enter the jacket/coil;
- iii. The initial liquid fraction is taken to be 0.0 if the first utility is a gas and 1.0 if the first utility is a liquid.

For jacket heat loss to ambient (optional):

If entries are made in these fields, then CC-ReACS will calculate the heat loss from the jacket fluid to the atmosphere using the following equation:

$$Q_Loss = U_loss \cdot A_loss \cdot (T_{j,b} - T_a)$$

where

- $T_{j,b}$ = Jacket bulk fluid temperature
- T_a = The ambient temperature entered on the "Reactor Specifications" screen.
Default = 70°F.

EXTERNAL FEED SCHEDULE DIALOG BOX

If there is a feed to the reactor, as there is in semi-batch operation, then the feed rate and timing must be either calculated by the control system, or scheduled by the user. The **External Feed Schedule dialog box** is for the purpose of providing feed schedules. It will not open unless the presence of a feed stream is indicated on the **General Information dialog box**. The composition and thermodynamic condition (as well as an initial flowrate) must be entered in the external feed stream.

It is possible to have multiple feeds, so one feed schedule dialog box per feed will appear.

An alternative way of scheduling a reactor feed is to use a ramp controller.

The screenshot shows a dialog box titled "- BREA Liquid Product Draw Schedule -". At the top left, there is a dropdown menu for "Product rate units" currently set to "Mole rate". To the right of this is an "ID:" field containing the number "1". Below these are two columns of input fields. Each column has a header "Time (hr)" and "Draw rate (lbmol/h)". Each header is followed by a vertical stack of empty input boxes. At the bottom right of the dialog are two buttons: "Cancel" and "OK".

SETTING UP SCHEDULES AND PROFILES IN CC-REACS

The **Batch Reactor UnitOp** enables the user to schedule certain variables. By scheduling a variable, we mean that even though the variable is non-constant, we are going to fix its value at each point in time. A typical example would be a reactor feed, which is shut off three hours into the batch run.

Variables may be scheduled as stepped (constant over a specified period of time) or as ramped (varying linearly over a specified period of time).

The following variables may be scheduled from within the batch reactor UnitOp:

1. Reactor operating temperature
2. Reactor heat duty
3. Reactor feeds
4. Reactor liquid draws
5. Reactor vapor draws

Since the input procedure for all of these is similar, they are all described together even though they appear in different orders on the **Batch Reactor Menu**. First a general description of the CHEMCAD scheduling conventions is given, then input information specific to each variable is discussed.

SCHEDULING INPUT CONVENTIONS AND PROCEDURES

1. The **Schedule Parameters dialog boxes** have a **Flow rate units list** that enables the user to specify the units of a feed or draw stream.

The available options are mole, mass, volume, maintain holdup (for liquid draws only) and draw to keep pressure constant (for vapor draws only). The engineering units used are the same as the global flowsheet units.

2. The **Schedule/Profile dialog boxes** each have a list of "time" fields and "variable". The units for the time and the variable will be consistent with the global engineering units and are displayed on this form.

The scheduling conventions used by the **Schedule/Profile dialog box** are as follows:

- a. The variable value is zero until the time of the first point entered on the schedule.
- b. Between schedule points a linear interpolation of the variable is always performed.
- c. Therefore, if the following points are entered on a schedule;

Time, hr.	Variable Value
1	100
3	50

Then at time equals two hours, the variable equals 75.

Likewise, if the following points are entered on a schedule;

Time, hr.	Variable Value
1	100
3	100
3	50

Then, at time equals 2 hours, the variable value is 100. In addition, from time equals more than 3 hours to the end of the simulated batch run, the variable value will be 50. With 3 hours, the variable value is 100.

SPECIAL POINTS REGARDING INDIVIDUAL SCHEDULE/PROFILE VARIABLE

1. The Temperature Profile parameters dialog box

- To access this dialog box, the thermal mode on the **General Information dialog box** must be set to "4 Specify time/temp. profile."
- The temperature units used will always be the global engineering units for temperature.

2. The Heat Duty Profile Parameters dialog box

- To access this dialog box, the thermal mode on the **General Information dialog box** must be set to "6 Specify time/heat duty profile".
- The heat units used will always be the global engineering units for energy.

3. The External Feed Schedule Parameters dialog box

- To access this dialog box, the flowsheet must have streams going to the process feed inlet points on the batch reactor UnitOp icon.
- The feed flowrate engineering units will be consistent with the global engineering units used for the mole/mass, but will reflect the **Feed rate unit's** section. For example, if lb.-moles have been selected for the global mole/mass engineering units, but the user has selected mass units for the feed schedule, then lbs./unit time will be the units used when specifying the schedule.
- It is not necessary to schedule constant feed. Like any other stream in the flowsheet, a feed stream must be completely specified. Therefore, it will have a flowrate of it's own and this flowrate will be used if no feed schedule is given.
- If the feed stream flowrate and the scheduled feed flowrate are not consistent, the schedule governs.

4. The Liquid Draw Schedule Parameters dialog box

- To access the **Liquid Draw Parameters dialog box**, there must be a process liquid stream coming from the batch reactor icon on the flowsheet.
- The liquid draw flowrate engineering units will be consistent with the global engineering units used for the mole/mass (see EngUnits/Current Units), but will reflect the **Draw Rate Units** selection. For example, if lb.-moles have been selected for the global mole/mass engineering units, but the user has selected mass units for the draw schedule, then lbs./unit time will be the units used when specifying the schedule.
- Liquid draws must always be specified on the **Liquid Draw Schedule dialog box**.

5. The Vapor Draw Schedule Parameters dialog box

- To access the **Vapor Draw Schedule Parameters dialog box** there must be a process vapor stream coming from the batch reactor icon on the flowsheet.
- The vapor draw flowrate engineering units used will be consistent with the global engineering units for the mole/mass (see EngUnits/Current Units), but will reflect the **Draw Rate Units** selection. For instance, if lb.-moles have been selected for the global mole/mass engineering units, but the user has selected mass units for the draw schedule, then lbs./unit time will be units used when specifying the schedule.
- In order to be able to schedule a vapor draw, you must have a vapor vent (outlet). To have a vapor vent, you must have vapor. And in order to have CC-ReACS calculate vapor generation, the **Reaction Mixture Phase Option** on the **General Information dialog box** must be set to **VL two phase, liquid phase reaction**.
- If the vapor draw is scheduled, then the **Pressure** on the **General Information dialog box** must be input. A specified vapor draw means that the vapor generated may not equal the vapor withdrawn. In such a situation, the pressure inside the reactor vessel will fluctuate unless thermal mode 7 (Specify vapor rate and P,calc duty) is selected, then the pressure will remain constant as specified.

- It is not necessary to schedule a vapor draw. If the reactor vessel pressure is fixed by the user, then the **Draw Rate Units** option on the **Vapor Draw Schedule Parameters dialog box** must be set to **Draw to keep P constant**. In this case, the pressure will be fixed and at each time step and the program will flash the contents of the reactor to determine the amount of vapor and liquid present. Any vapor in excess of the calculated available vapor space will exit through the vapor vent.

RELIEF DIALOG BOX

The **Batch Reactor Relief dialog box** enables the user to include the relief device calculations into the batch reactor simulation. If this dialog box is completed, the vent flow calculations will be performed provided relief conditions occur.

The relief calculations are handled differently than are normal vapor product draws. This has the following implications for the batch reactor simulation:

- When the relief analysis is included in the simulation, the fluid entering the vapor vent may be all vapor or it may be two-phase (vapor-liquid). The composition of the two phases are computed and the resulting two-phase vent fluid is subtracted from the material in the reactor. The impact of this vent loss is completely accounted for in the heat and material balance.
- In CC-ReACS, the relief device is in a rating mode (the device may be sized using CHEMCAD, see the CHEMCAD help system documentation for details). This means the relief device must be fully specified. During the simulation, the amount of fluid which will pass through the vent under the prevailing conditions will be computed.
- No fluid will exit through the vent unless vapor is generated. This requires that the **Reaction Mixture phase option** on the **General Information dialog box** must be set to **VL two phase, liquid phase reaction**.

4. Since:
 - a. The vent restricts the amount of material which can exit the vessel; and
 - b. Vapor may be generated continuously; and
 - c. The conditions in the reactor may be changing drastically during the simulation; and
 - d. The volume of vapor generated may not equal the volume of fluid exiting the vessel.

The pressure in the reactor must be variable. In order to permit this in CC-ReACS, the **Pressure** option on the **General Information dialog box** must be left blank.

The relief device methods and required input are described elsewhere in this manual and no attempt is made to reproduce that explanation here.

BATCH REACTOR RUN TIME PLOT OPTIONS DIALOG BOX

The user may select which plots he/she wants to be displayed during the simulation. For instance, the reactor bulk temperature can be plotted on a function of time. These "runtime plots" can be selected at two levels: (1.) from within a unit operation dialog box; or, (2.) from the Dynamics menu. Multiple runtime plots can be displayed during the simulation, but only one per unit operation can be selected from a UnitOp dialog box. The rest must be selected from the Dynamics menu. Up to six runtime plots can be displayed at a time.

Clicking on the **Set screen information** button on the **Batch Reactor Menu** will display the **Batch Reactor Run Time Plot Options dialog box**, like so:

This dialog box will allow you to specify the contents of one of the runtime plot windows displayed.

Time unit:

The time axis of a dynamic plot may be displayed in hours, minutes, or seconds. The user chooses here.

Plot Y scale:

The **Ymin** and **Ymax** fields will limit the range of the plot when they are entered.

Composition:

This window provides a list of component values to be plotted. These include mole fraction, mass fraction, volume fraction, rate of formation, etc.

Enter the components to be plotted:

If a property was selected in the composition window above, then the user must identify which components are to be displayed. These components are identified by position in the stream list. Up to 20 components are allowed. Each component may have its values exaggerated or dampened for display by entering a scaling factor. The default is 1.0 (no exaggeration/dampening).

Other Plots:

The user may also plot any of the items listed on the right hand side of the screen by checking the box next to the desired field. Variable plots may be combined as desired, but it is desirable that units be kept consistent.

DYNAMIC COLUMN MODELS

OVERVIEW

CC-DCOLUMN provides three different dynamic distillation models. Figure 1 provides a pictorial summary of the dynamic columns available:

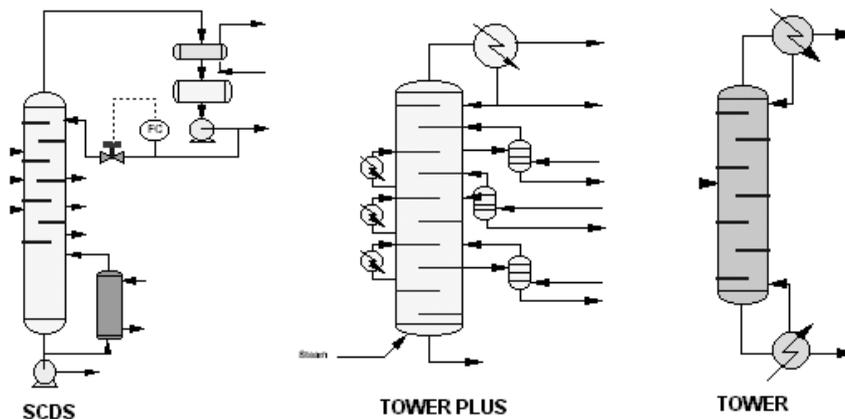


Figure 1

These models can be used in simple simulations without control system (assuming a perfect control scheme) or in more complex studies with control systems.

The dynamic models of SCDS, TPLS and TOWR are extensions of their steady state models. Therefore it is assumed the user is already familiar with the specification, topology, convergence of these models common to CC-STEADY STATE. In this section we will discuss the dynamic features and specifications of the SDCS, TPLS and TOWR models. The SCDS distillation UnitOp can also perform dynamic calculations with mass transfer models.

DYNAMIC COLUMNS INPUT


After inputting or editing steady-state specifications, a dynamic column requires the completion of the following dialog boxes:

- The **General Information** dialog box
- The **Startup Parameters** dialog box
- The Startup Charges dialog box
- The Column Holdups dialog box
- The Specs dialog box
- The Reflux control dialog box
- The Column Metal Heat Transfer dialog box
- The Record stages dialog box
- The Plot Options dialog box

It is not necessary that all of these dialog boxes be completed for every problem. Obviously you do not need to complete the **Startup Charge** dialog box if you are simulating a process from steady-state condition. CC-DCOLUMN will not permit access to those dialog boxes that are not relevant to the current simulation. CC-DCOLUMN "access decisions" are made based upon specifications made in the **General Information** dialog box.

THE DYNAMIC COLUMN MENU


All of the above listed items are accessed through the Dynamic Column Menu, which appears whenever you finish editing steady-state specifications of SCDS, TPLS, TOWR and the dynamic mode of CC-DCOLUMN is turned on. To access a dialog box, you simply click on the appropriate Dynamic Column Menu item. When the dialog box is closed, you will return to this menu.

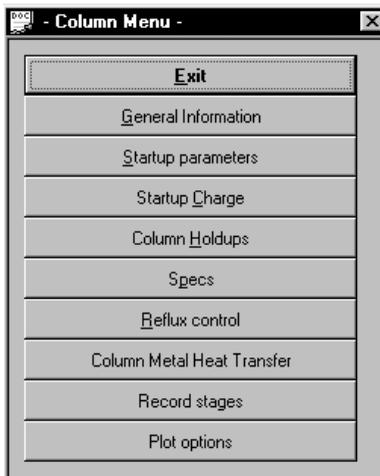

A field description of the input for each of these dialog boxes is provided below:

THE GENERAL INFORMATION DIALOG BOX

The **General Information** dialog box is used to specify whether the simulation begins at startup or steady state condition; if startup is to be wet or dry; and what type of holdup and pressure calculations are to be performed.

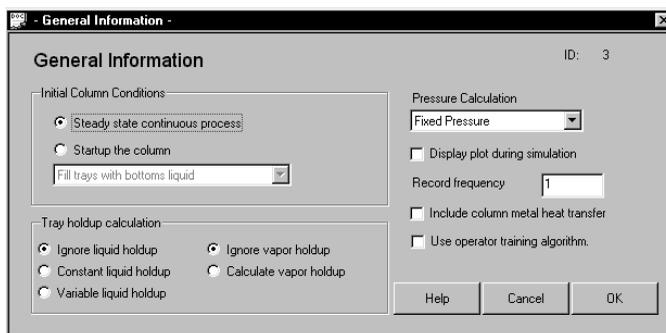

Initial Column Conditions

Specify if the simulation is to begin from steady state or from startup conditions. If it is to begin from startup, the user must also identify whether it is to be a dry or wet startup.

If the simulation is to begin from a steady state condition, a steady state simulation must be run before the dynamic simulation is executed (a license of CC-STEADY STATE is required). The program will take the existing steady state results (and specifications) as starting point for the dynamic simulation.

If the simulation is to begin from startup conditions, then some initial liquid must be defined on the Startup Charge dialog box. This is true for both dry and wet startup. In both cases, this liquid is the initial charge in the bottom of the column. For wet startups the composition, temperature, and pressure of the starting liquid on the trays is assumed to be the same as the charge in the bottom. The amounts are determined from the holdups.

Note that during startup calculations, the column does not have a top or bottoms product.

Tray holdup calculation

These fields are used to define how vapor and liquid holdups are to be determined during the simulation. Vapor holdups can only be calculated calculation if variable holdup is selected for the liquid phase. The default is to ignore the holdups in both phases.

Liquid holdup can be constant, variable, or ignored (assumed to be zero). Variable holdup may be ignored or calculated.

Constant Liquid Holdup

The user must specify the amounts of the holdups if constant holdup is selected. This is done on the Column Holdups dialog box. These amounts can be specified in mass, mole, or volume units and can be different on every stage if desired.

Variable Liquid Holdup

The program calculates variable holdups. This calculation is a function of tray (or packing) type and geometry. Therefore, this information must be specified for the calculation to proceed. These specifications are made under the Column Holdups option of the Dynamic Column menu.

Vapor Holdups

Vapor holdups can be included in the calculation (if variable liquid holdups was selected) or ignored (assumed to be zero). If they are included, they are always assumed to be constant volume. The volume is determined from the column geometry.

Pressure Calculation

The column pressure can be fixed by the user or calculated by the program. If it is to be calculated by the program, then variable liquid holdups must be selected above, and the column geometry must be specified. Column geometry is specified using the **Column Holdups** option of the **Dynamic Column Menu**.

The pressure calculation matches the fluid volumes to the column geometry and includes the tray (or packing) pressure drop. The program calculates tray and packing pressure drops.

Display plot during simulation

To plot results of the simulation on the screen during the simulation, place a check mark in this box. The data to be displayed is chosen in the Plot Options dialog.

Record frequency

This is the number of time steps between saving of the results. If the simulation integration time step is one minute and the record frequency is five, the results will be saved every five (simulated) minutes.

Include Column Metal Heat Transfer

It is possible to include in CC-DCOLUMN's calculations ambient heat losses/gains. If the simulation will take heat transfer into account, then check this option. If you do so, the **Metal Heat Transfer** dialog box will be available on the **Dynamic Column Menu**.

Use Operator Training Algorithm

CC-DCOLUMN as a powerful and flexible dynamic simulation tool can work as a calculation engine for operating training systems and / or realtime models of columns. This option allows OTS systems to interact with CC-DCOLUMN.

THE STARTUP PARAMETERS DIALOG BOX

The **Startup Conditions** dialog box is used to specify startup time and conditions. Obviously this dialog box is used only when a startup is to be simulated.

Startup Conditions ID: 3

For column startup only:

Duration time h

Reboiler heat duty MMBtu/h

Accumulator holdup unit:

Max. accumulator holdup ft3

Initial holdup ft3

Pressure Calculation

Help Cancel OK

The specifications made on this dialog box apply only to the startup period. All fields on this screen are required.

Duration Time

Define the duration of the startup period here.

Reboiler heat duty

During the startup time, the reboiler duty will be fixed at the value provided in the Reboiler heat duty field. If you want to vary this value during startup, you can use the RAMP Controller UnitOp to schedule it.

Accumulator Holdups

The user must also specify the initial and maximum condenser accumulator holdups during startup.

Accumulator holdup unit

Choose the base units for the condenser accumulator holdup specification. Options are mass of holdup, moles of holdup, volume of holdup, or liquid level in the condenser accumulator.

Maximum and Initial holdup

Accumulator liquid will start at the Initial holdup value and rise to the Max accumulator holdup value.

Between these two values there will be no reflux to the column. Once the maximum holdup value has been reached, the reflux to the column is any amount in excess of the maximum holdup. This is the total reflux simulation.

Pressure Calculation

Pressure during the startup period can be fixed or variable. Variable pressure is calculated by CC-DCOLUMN and requires specification of the column geometry.

This specification is independent from whether the pressure is fixed or calculated during the simulation (as per the **General Information** dialog). You may have the pressure calculated during the startup portion of you simulation and fixed at a specified value for the remainder of the simulation. The reverse is also possible. There is no restriction on the combination of methods for the startup pressure calculation and the initial conditions pressure calculation.

STARTUP CHARGE

The column startup charge dialog has the same structure and format as a CC-STEADY STATE stream dialog box. Only the flow units are amounts instead of rates. This dialog box also follows the same input conventions as a stream dialog box, therefore:

1. The composition must always be specified. If it is specified as component amounts, then the total amount is determined by CC-DCOLUMN as the sum of the component amounts. If the composition is specified as component fractions (mole, mass, or volume), then the total amount must be user specified.
2. If the specified component fractions do not sum to one CC-DCOLUMN will normalize them.
3. Two (but only two) of the thermodynamic properties, temperature, vapor pressure and pressure; must be specified by the user. Any combination is acceptable. From these two (plus the composition) the program will initialize the charge (i.e., calculate the third plus enthalpy).
4. A user specified vapor fraction of one (1.0) is taken to mean the dew point. A user specified vapor fraction of zero (0.0) is taken to mean the bubble point.
5. Enthalpy cannot be user specified.

Please refer to the CC-STEADY STATE User's Guide for a detailed description of how to complete stream dialog boxes.

THE COLUMN HOLDUPS DIALOG BOX

The **Column Holdups** dialog box will be only available if the **Constant liquid holdup** or **Variable liquid hold up** option was selected in the **General Information** dialog box. If one of these options was selected, then the **Column Holdups** dialog box must be completed.

If variable liquid holdups are to be used, the column layout must be specified. This is done using a set of dialog boxes constructed for this purpose. Exactly which dialog boxes appear depends on what device is selected for mass transfer; i.e., valve trays, bubble cap trays, or sieve trays. These dialog boxes appear when you close the Specify Column Holdup dialog box. Entries in the Specify Column Holdup dialog box are unnecessary. Just close this dialog box. The program will prompt you through the rest of the input.

Variable liquid holdup can only be used for simulating trayed columns. Packed columns are assumed to have constant liquid holdup.

Dynamic Column Holdup ID: 3

Select holdup unit:

Condenser Holdup ft3

Stage Holdup ft3

Reboiler Holdup ft3

Specify a Holdup Profile

Dead time per stage (optional):
 min.

Help Cancel OK

Select holdup unit

Holdup units can be in mass, mole, or volume units. Selections are made by opening the list in the field and then clicking on the desired option.

Condenser holdup

Condenser holdup is the total amount of liquid in the condenser and its' accumulator.

Stage holdup

Stage holdup is the total amount of liquid on each stage. The number of stages is specified by the user on the column's main specifications dialog. The total stage holdup is this number of stages times the stage holdup value input here.

Reboiler holdup

Reboiler holdup is the amount of liquid in the bottom of the column plus the liquid in the reboiler plus the liquid in the reboiler accumulator vessel (if any).

Specify a Holdup Profile

Stage holdups can be specified stage-by-stage if desired. To do this place a check mark in the **Specify a Holdup Profile** field. When this dialog box is closed, the **Stage Holdup** dialog box will open. On this dialog box specify the key stage numbers and holdup values. Holdups for omitted stages are determined by linear interpolation between those stages provided.

Dead Time per stage (optional)

This option allows the user to directly specify additional stage dead time. The user specifies the duration of the time delay which the stages experience.

THE DYNAMIC COLUMN SPECIFICATIONS DIALOG BOX

The dynamic column specifications dialog box has two pages, which appear below:

The screenshot shows the 'Dynamic Column Specifications' dialog box with the 'Condenser' tab selected. The 'Reboiler' tab is also visible. The 'Condenser Specifications' section is active, showing various input fields and dropdown menus. The 'Condenser holdup option' is set to 'Constant Holdup'. The 'Reflux specification' section includes a 'Liquid reflux mole rate' dropdown and a 'Reflux rate' input field. The 'Liquid distillate specification' section includes a 'Liquid distillate mole rate' dropdown, a 'Distillate rate' input field, and a 'Distillate Control Valve ID #' input field. The 'Optional level specifications' section includes 'Orientation' (Horizontal), 'Head type' (Ellipsoidal), 'Radius/depth head ratio', 'Diameter', 'Cylinder length', and 'Initial liquid level' input fields. The 'For a condenser with a UA specification' section includes 'Utility stream inlet ID #', 'Utility stream outlet ID #', 'Utility control valve ID #', 'Utility pressure drop', 'Condenser U', and 'Condenser A' input fields. The dialog box has 'Help', 'Cancel', and 'OK' buttons at the bottom.

The screenshot shows the 'Dynamic Column Specifications' dialog box with the 'Reboiler Specifications' tab selected. The 'Reboiler holdup option' is set to 'Constant Holdup'. The 'Bottoms rate specification' is set to 'Liquid bottoms mole rate'. The 'Optional level specifications' section includes fields for Orientation (Vertical), Head type (Ellipsoidal), Radius/depth head ratio, Diameter, Cylinder length, and Initial liquid level. The 'For a reboiler with a UA specification' section includes fields for Utility option (Steam), Utility stream inlet/outlet valve IDs, and various heat transfer coefficients.

CONDENSER INPUT

Condenser holdup option

Condenser holdup can be variable even if **tray holdup** is constant.

If condenser holdup is constant, then the condenser is assumed to operate according to the condenser specification from the steady state column **specifications** page. At each time step, reflux and distillate are (instantly) recalculated to match the condenser specification.

For example, if:

- A distillate purity specification is made on the Specifications page of the Distillation Column (SCDS, TPLS, TOWR) dialog box, and
- Constant condenser holdup is specified on the Condenser page of the **Dynamic Column Specifications** dialog box, then

During the dynamic simulation, the program will hold the distillate purity constant at the value specified in **item a**, above. The reflux flowrate will be adjusted at each time step to maintain this purity, and the constant holdup.

For Variable Condenser holdup, the specifications on this screen (reflux and distillate) will control the condenser. The steady state column **specifications** page condenser spec will be ignored. For example: if the user specifies a top purity in the steady state column, variable holdup for the condenser, and a reflux rate and distillate rate...the purity specification will be ignored.

Condenser holdup liquid is considered to be in a vessel. The dimensions of this vessel may be specified in the **Optional level specifications** fields shown at the bottom right of the dialog box. For variable holdup, entering the vessel geometry allows calculation of liquid level in the condenser (based on holdup).

Reflux specification

For constant condenser holdup, the program calculates reflux to maintain holdup.

For variable condenser holdup, the reflux rate may be either fixed or controlled. The user must either specify a fixed reflux flowrate or set up a control system to adjust it dynamically.

A fixed reflux flowrate can be specified in mass, mole, or volume units. The selection is made from the list in the **Reflux specification** field. The numerical value of the reflux flowrate is given in the Reflux rate field.

Select *by control valve* to use controlled reflux. The reflux control valve and PID controller are then specified in the Reflux Control dialog.

Liquid distillate specification

For *constant condenser holdup*, the liquid distillate is calculated according to the specifications for the condenser operation (see above Condenser holdup option...).

For *variable condenser holdup*, the flow rate of liquid distillates must be either *fixed* or set *by control valve*. That is, the user must either specify a fixed flowrate or use a control valve (and control system) to adjust distillate flow dynamically.

A fixed distillate flowrate can be specified in mass, mole, or volume units. The selection is made from the list in the Liquid distillate specification field. The numerical value of the reflux flowrate is given in the Distillate rate field.

Distillate control is performed using an external control system. The control system is specified and calculated outside the dynamic column UnitOp using the PID Controller and the Control Valve UnitOp modules. The flowsheet ID number of the liquid distillate **control valve** must be entered in the *Distillate Control Valve ID Number* field of the current dialog box. *Note: the distillate control valve UnitOp can be run without use of a PID Controller.*

For a condenser with a UA specification (optional specification)

If a condenser control system is being used, the user has the option of simulating the condenser operations using UA specifications and a utility control system. Those specifications are made in this set of fields.

The utility stream inlet and outlet ID numbers and the **utility stream control valve ID number** must be specified. The program uses these to determine the utility flowrate and properties.

The **utility pressure drop** specification is optional. If entered the utility outlet pressure will be set to its inlet pressure minus this value.

The **condenser U** is the overall heat transfer coefficient. It must be specified by the user.

The **condenser A** is the heat transfer surface. It also must be specified by the user.

Optional level specifications

If variable condenser holdup is to be used, these fields may be entered. Variable condenser holdup is treated as if all the condenser liquid is kept in a vessel.

These specifications only describe the vessel dimensions and liquid level. The level specifications are only useful when used in conjunction with a level control system.

Orientation – The vessel may be horizontal or vertical. This specification will impact when the accumulated condenser liquid exceeds its level specification.

Head type – Vessel heads can be ellipsoidal, hemispherical, bumped, or flat. This will affect when the level specification is exceeded.

Radius/depth head ratio – The head ratio will determine the amount of liquid held by the vessel head. This will influence the vessel liquid level. If this field is left blank, the program will use default values.

Diameter – This is the inside diameter of the vessel.

Cylinder length – This is the tangent to tangent length of the vessel.

Initial liquid level – This is the liquid level at the start of the simulation. This is from the bottom of the head, for a vertical vessel.

REBOILER INPUT

Reboiler holdup can be variable even if **tray holdup** is constant.

If reboiler holdup is constant, then the reboiler is assumed to operate according the reboiler specification from the steady state column **specifications** page. At each time step, bottoms flowrate (instantly) recalculated to match the reboiler specification.

For example, if;

- a. A bottoms purity specification is made on the Specifications page of the Distillation Column (SCDS, TPLS, TOWR) dialog box, and
- b. Constant reboiler holdup is specified on the Reboiler page of the Column Specifications dialog box, then

During the dynamic simulation, the program will hold the bottoms purity constant at the value specified in **item a**, above. The bottoms flowrate will be adjusted at each time step to maintain this purity, and the constant holdup.

For Variable reboiler holdup, the specifications on this screen (reflux and distillate) will control the reboiler. The steady state column **specifications** page reboiler spec will be ignored. For example: if the user specifies a bottom purity in the steady state column and variable holdup for the reboiler...the purity specification will be ignored.

Variable reboiler holdup is treated as if all the liquid is kept in a vessel. This is similar to reality, since the bulk of the "reboiler accumulator" liquid is held in the bottom of the column vessel. The dimensions of this vessel may be specified in the **optional level specifications** fields. For variable holdup, entering the vessel geometry allows calculation of liquid level in the reboiler (based on holdup).

Bottoms rate specification

For variable reboiler holdup, the bottoms rate may be either fixed or controlled. The user must either specify a fixed bottoms flowrate or set up a control system to adjust it dynamically.

A fixed bottoms flowrate can be specified in mass, mole, or volume units. The selection is made from the list in the **Bottoms rate specification** field. The numerical value of the bottoms flowrate is given in the Bottoms rate field.

Bottoms flowrate control is performed using an external control system. The control system is specified and calculated outside the dynamic column using PID Controller and the Control Valve UnitOp modules. The flowsheet ID number of the bottoms control valve must be entered in the Bottoms Control Valve ID # field of the current dialog box. *Note: the bottoms control valve UnitOp can be run without use of a PID Controller.*

For a reboiler with a UA specification

If a reboiler control system is being used, the user has the option of simulating the reboiler operations using UA specifications and a utility control system. Those specifications are made in this set of fields.

The **utility stream inlet and outlet ID** numbers and the **utility stream control valve ID** number must be specified. The program uses these to determine the utility flowrate and properties.

If a thermosyphon reboiler is to be simulated, the recirculation rate must be specified in the **Thermosyphon Recirculation Rate** field.

The **utility pressure drop** specification is optional. If entered the utility outlet pressure will be set to its inlet pressure minus this value.

The **reboiler U** is the overall heat transfer coefficient. It must be specified by the user.

The **reboiler A** is the heat transfer surface. It also must be specified by the user.

Optional level specifications

If variable reboiler holdup is to be used, these fields must be entered. Variable reboiler holdup is treated as if all the reboiler liquid is kept in a vessel.

These specifications only describe the vessel dimensions. The level specifications are only useful when used in conjunction with a level control system.

Orientation – The vessel may be horizontal or vertical. This specification will impact when the accumulated condenser liquid exceeds its level specification.

Head type – Vessel heads can be ellipsoidal, hemispherical, bumped, or flat. This will affect when the level specification is exceeded.

Radius/depth head ratio – The head ratio will determine the amount of liquid held by the vessel head. This will influence the vessel liquid level. If this field is left blank, the program will use default values.

Diameter – This is the inside diameter of the vessel.

Cylinder length – This is the tangent to tangent length of the vessel.

Initial liquid level – This is the liquid level at the start of the simulation. This is from the bottom of the head, for a vertical vessel.

THE REFLUX CONTROL DIALOG BOX

This page is used to describe the Reflux control valve. The input is similar to that for the Control Valve unit operation (CVAL) and is described below.

The control valve calculates the flowrate through the valve based on the input signal it receives from a controller. The control valve can handle compressible and incompressible flow as well as critical and sub-critical flow. The control valve calculates the following variables at each time step:

1. The valve position.
2. The flow through the valve.

The flowrate of the inlet and outlet streams will be reset to the control valve calculated flow.

The Reflux Control dialog box will be only available if following specifications were made:


1. The **Variable Holdup** option was selected on the **Condenser Specifications** page of the Dynamic **Column Specifications** dialog box.
2. The **By Control Valve** option was selected for the Reflux specifications on the **Condenser Specifications** page of the Dynamic **Column Specifications** dialog box.

The **Reflux control** dialog box has two pages, shown below:

The screenshot shows the 'Reflux Control Valve and Controller' dialog box. It is divided into two tabs: 'Valve' and 'Controller'. The 'Valve' tab is selected. The dialog contains the following fields and sections:

- Valve type:**
 - Equal percentage valve
 - Linear valve
- Valve parameters:**
 - Critical flow factor: 0.98
 - Supply pressure: 2000 mmHg
 - Valve position %: []
- Controller / Valve Position:**
 - Valve time constant: 0.15
 - Valve Av: 0.0625
 - Valve Bv: -0.25
- Calculated Results:**
 - Calc. flow rate: [] lb/h
 - Controller output: []
 - Steady state position: []
 - Controller output SS: []
- Other parameters:**
 - Valve flow coefficient: 300
 - Rangeability: 10

At the bottom of the dialog, there are three buttons: 'Help', 'Cancel', and 'OK'.

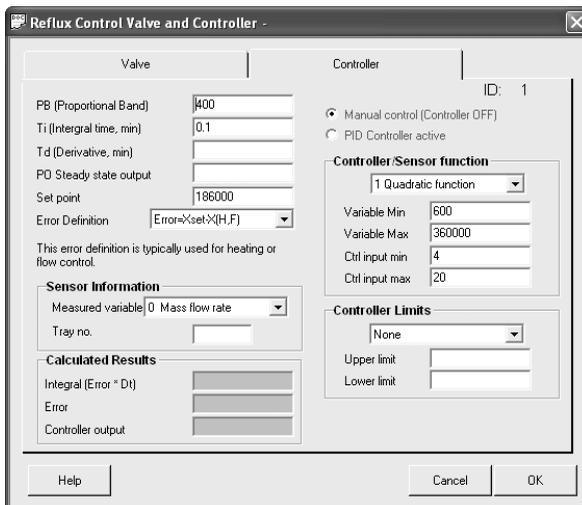

VALVE INPUT

Valve type

Choose from either linear or equal percentage valves.

Linear valves relate the actual valve flow to the capacity valve flow by the following relation:

$$\text{Actual Flow} = \frac{U}{100} \left(1 - \frac{1}{R} \right) (\text{Valve Capacity})$$

Equal percentage valves relate actual flow to capacity valve flow as follows:

$$\text{Actual Flow} = R \left(\frac{U}{100} - 1 \right) (\text{Valve Capacity})$$

Valve flow coefficient

This is the valve Cv. This field must be entered. If you do not know a good value for Cv, use the valve sizing option under the **Sizing** menu. This option will calculate a good value for this field.

The definition of the flow coefficient is defined as follows:

$$C_v = Q \left(\frac{SG_f}{\Delta P_s} \right)^{0.5}$$

Rangeability

Rangeability is the ratio of the maximum to minimum controllable flow. This value is most important for equal percentage valves because the relationship of R to U is non-linear. The default is 10.

Critical Flow Factor

The critical flow factor, C_f , is used to determine if the flow through the valve is above or below critical velocity. If flow is subcritical, the valve position determines the flow. If critical flow conditions exist, then flow is calculated as follows:

Non-compressible critical flow:

$$Q = \frac{C_v \cdot C_f}{\sqrt{\frac{SG_f}{\Delta P_s}}}$$

$$\Delta P_s = P_1 - \left[0.96 - 0.28 \left(\frac{P_v}{P_c} \right)^{0.5} \right] P_v$$

Compressible Critical Flow:

$$Q = \frac{834 \cdot C_f \cdot P_1}{\sqrt{SG_f \cdot T}}$$

where

Q	=	Flow, US gpm for liquids; SCFH for gases
C_v	=	Valve flow coefficient
C_f	=	Critical flow factor
P_1	=	Inlet pressure in psia
P_c	=	Critical pressure of the fluid
SG_f	=	Specific gravity of fluid; liquids referred to water at standard conditions; gases referred to air at standard conditions
T	=	Flow temperature, R

Valve time constant

The time constant, T_v , is used in the time position calculation below:

$$T_v \left(\frac{dU}{dt} \right) + U = A_v \cdot P + B_v$$

T_v must be positive; therefore, the term $T_v \left(\frac{dU}{dt} \right)$ tends to slow down the valve response to the controller signal. The larger the value of this term, the more it slows down the response.

Valve Av

This is the Av term in the control valve position equation above. In the default condition, the controller output is assumed to be between 4 and 20 milliamps and the term $T_v \left(\frac{dU}{dt} \right) = 0$ (zero). Since at the minimum position, the valve is closed and $u = 0$ and at the maximum position, the valve is fully open and $u = 1$, then,

$$\begin{aligned} 0 &= Av * 4 + Bv \\ 1 &= Av * 20 + Bv \end{aligned}$$

therefore

$$\begin{aligned} Av &= 0.0625 \\ Bv &= 0.25 \end{aligned}$$

These are the program default values for Av and Bv.

CALCULATED RESULTS

Calc. flow rate

The value displayed in this field is the current instantaneous flowrate through the valve.

Controller output

This is the value currently being received from the controller.

Steady state position

This is the steady state valve position determined from the steady state controller output, Po.

Controller output SS

This is the output signal from the controller at steady state. CC-DCOLUMN calculates this at the initial valve position, assumed to be closed.

CONTROLLER INPUT

The PID Controller continuously measures a user-specified variable and, based upon the specified setpoint for that variable, sends a controller output signal (in milliamps) to the control valve. The controller can include proportional, derivative, and/or integral action in its signal computation. Cascade controllers are permitted. The user may specify the control loop and controller limits if so desired. Also, the controller time step may be set to a smaller value than the flowsheet integration time step.

PB (proportional band)

The proportional band (PB) helps determine the speed of the controller output signal according to the following equation:

$$P_{out} = P + I + D + P_0$$

where

P_{out} = Controller output signal in milliamps

$$P = \frac{100}{PB} \cdot \text{error} = \text{proportional action}$$

$$I = \frac{100}{PB} \cdot \left(\frac{1}{T_i} \right) \cdot \int (\text{error}) dt = \text{integral action}$$

$$D = \frac{100}{PB} \cdot T_d \cdot \frac{d(\text{error})}{dt} = \text{derivative action}$$

and

P_0 = Controller signal at steady state

PB = Proportional band

T_i = Integral time constant in minutes

T_d = Derivative time constant in minutes

error = Current controller input - the controller input at steady state

Ti (integral time, min)

This is the integral time constant defined above in the proportional band explanation. The smaller T_i is, the faster the controller will respond. T_i must be 0 or positive. If $T = 0$ or $T_i > 1010$, no integral action will be taken.

Integral control removes the offset produced by proportional control alone. Decreasing T_i gives a faster controller response but introduces a tendency to overshoot the setpoint producing oscillations.

Td (derivative, min)

T_d is the derivative time constant in minutes. Derivative control anticipates the convergence on the setpoint so that any overshooting on oscillation is minimized. Derivative control is not frequently used because sensor signal noise makes measurement of the derivative difficult.

Po (steady state output)

P_0 is the value of the controller signal (in milliamps) at the steady state. If this field is left blank, P_0 will be calculated by the program based upon the initial state of the process.

The steady state output term allows the controller to function linearly on either side of the setpoint. Setting $U_{ss} = 100\%$ will fully open the control valve as soon as the controller is activated, whereas $U_{ss} = 0$ starts the system with the valve closed and the controller will open the valve slowly in response to the error signal.

Errors Definition

At the user's option, the error may be defined in one of two ways:

1. Error = $X - X_{set}$
2. Error = $X_{set} - X$

where X = Controller input (in milliamps) at the current value of the measured variable.

X_{set} = Controller input (in milliamps) at the setpoint value of the measured variable.

Equation (1) above should be used when the function being controlled is for cooling, pressure control, or level control.

Equation (2) above should be used when the function being controlled is for heating or flowrate control.

These are guidelines. The general rule is as follows. The user should select the error function, which ensures that the control variable will move toward the setpoint if an error exists. For instance, if the service being controlled is steam flowrate to the jacket and the setpoint is the reactor main temperature, the function "Error = $X_{set} - X$ " should be selected. This is true because when the reactor main temperature is below the setpoint, the error will be positive and the steam valve will open. If in the same situation, Error = $X - X_{set}$ was chosen, the error would be negative and the steam valve would close, thus moving away from our target - not closer to it.

Setpoint

Enter the setpoint for the controller. This input is required, and the value must be non-zero.

SENSOR INFORMATION

Measured Variable

The measured variable is the variable we are trying to control. For instance, if we want to control the mass flowrate of the reflux at 10,000 lbs. per hour, then the measured variable is mass flowrate and the set point is 10,000 lbs. per hour.

The available options are:

- mass flow rate of the reflux
- molar flow rate of the reflux
- volume flow rate of the liquid reflux
- accumulator liquid level
- temperature of a specified tray

Tray No.

If the measured variable is the temperature of a specified tray, then the tray (stage) number must be entered in this field.

Controller/Sensor Function:

The functional relationship between the controller input and the output from the sensor is as follows:

$$C_{in} = A_c + B_c * X + C_c * X^2$$

C_{in} = Controller input in milliamps

X = Value of the measured variable in the user specified engineering units

The coefficients A_c , B_c , C_c are calculated by the program using the function type and variables shown below Controller/sensor function:

The user may specify whether the sensor function is linear or quadratic. The default is linear. The quadratic form should be selected if the measured variable is flowrate. Otherwise, linear can be used.

The user must specify the minimum and maximum values of the measured variable.

The minimum and maximum sensor output values may be specified by the user if desired. The default values are 4 and 20 milliamps, respectively.

Control limit

Indicate whether the controller limits specified are relative to the setpoint or to the limits. If no limits are specified, "None" should be specified here.

Upper limit and Lower limit

The upper and lower limits put "dead bands" in the controller response. For instance, if the setpoint = 200°F and the lower limit is 195°F, the cooling water controller will shut the control valve off once the temperature falls below 195°F.

CALCULATED RESULTS

Measured Variable**Integral:**

If integral action is specified (i.e., if T_i is specified), the integral contribution to the controller output function will be shown here.

Error

The last computed error is displayed here.

Controller output

This is the last output signal from the controller.

THE COLUMN METAL HEAT TRANSFER DIALOG BOX

The **Column Metal Heat Transfer** dialog box will be only available if the **include column metal heat transfer** option on the General Information dialog box was checked. All items of this dialog box must be completed. The **Column Metal Heat Transfer** dialog box is shown below:

The dialog box is titled "- Metal Heat Transfer -" and contains the following fields:

- Metal heat capacity: Btu/lb-F
- Average metal mass per stage: lb
- Metal/Fluid Coefficient: Btu/hr-ft2-F
- Metal/Ambient Coefficient: Btu/hr-ft2-F
- Metal/Fluid transfer area: ft2 / stage
- Metal/Ambient transfer area: ft2 / stage
- Initial metal temperature: F

Buttons: Help, Cancel, OK

Metal Heat Capacity – Input the metal heat capacity in this field.

Average metal mass per stage – Input the average metal mass per stage.

Metal/Ambient Coefficient – Input the heat transfer coefficient between metal and the ambient.


Metal/Fluid Coefficient – Input the heat transfer coefficient between metal and the fluid.

Metal/Ambient transfer area – Input the heat transfer area per stage between metal and the fluid.

Initial metal temperature – Input the initial metal temperature.

THE RECORD STAGES DIALOG BOX

CC-DCOLUMN does not save all of the results from a dynamic column simulation. The data for time histories are too large to record all history by default. The user must identify which output is to be saved. For stage results this is done with the **Record Stages** dialog box.

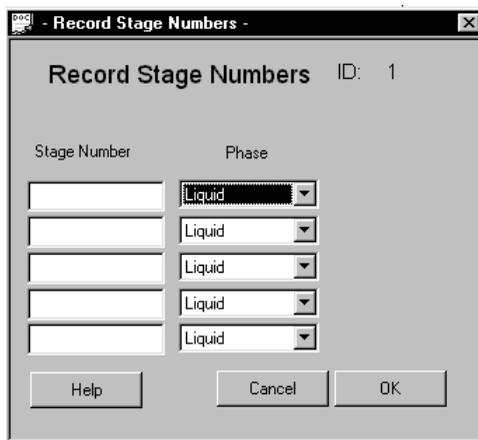

Record Stage Numbers ID: 1

Stage Number	Phase
<input type="text"/>	Liquid

Buttons: Help, Cancel, OK

The stage number and the phase must be specified. CC-DCOLUMN numbers stages from the top down with the condenser (if present) being stage number one and the reboiler (if present) being the last stage. Only five stages can be saved (recorded).


A stage must be recorded before it can be plotted or printed out.

Recorded stage information includes:

- Composition.
- Flow rates.
- Temperature.
- Pressure.

THE PLOT OPTIONS DIALOG BOX

The **Dynamic Column Plot** dialog box is shown below:

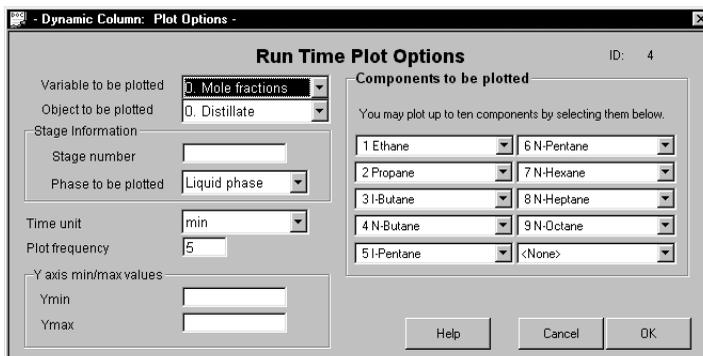

Dynamic Column: Plot Options ID: 4

Run Time Plot Options

Variable to be plotted: 0. Mole fractions

Object to be plotted: 0. Distillate

Stage Information

Stage number:

Phase to be plotted: Liquid phase

Time unit: min

Plot frequency: 5

Y axis min/max values

Ymin:

Ymax:

Components to be plotted

You may plot up to ten components by selecting them below.

1 Ethane	6 N-Pentane
2 Propane	7 N-Hexane
3 1-Butane	8 N-Heptane
4 N-Butane	9 N-Octane
5 1-Pentane	<None>

Buttons: Help, Cancel, OK

Variable to be plotted

Define the variable to be plotted on the y-axis. Select one from the pull-down list.

Object to be plotted

Select one of the following. This field may not be needed if the variable specified above does not require a location (e.g., Reflux Ratio).

- Distillate
- Bottom
- Stage

Stage Information

If a plot for one of the stages in the column is desired, specify the following:

- Stage No. – Enter the stage number for which the properties will be plotted.
- Phase – Indicate whether you are plotting data for the liquid or vapor phase.
- Time Unit / Frequency

Time Unit

Specify what time unit you want to use for the x-axis and the frequency you want plotted (hr, min, sec).

Plot Frequency

This is the number of time steps between plotting results. If the simulation integration time step is one minute and the plot frequency is five, the results will be plotted every five (simulated) minutes.

Y-axis min/max values

CC-DCOLUMN allows tuning up the range for the plot of a recorded variable. Specify a minimum and maximum for the y-axis of your plot

Components to be plotted

You may plot up to ten components by selecting them in this section. If the plot you select is any related to flow or concentration (i.e. mole/mass/mass frac/ etc) you may want to select the component(s) to be plotted. Select components from the pull-down list.

THE PID CONTROLLER/CONTROL VALVE MODEL (CC-DYNAMICS)

Control valves and PID controllers are present in both batch reactor and dynamic column simulations. Because the PID Controller and the valve(s) it controls (Control Valve) always work together, they have been described together in this one section. This makes the overall logic of the control system easier to understand. If it were not for the need to model cascade control/ systems (where master controllers control slave controllers), the PID Controller UnitOp and the Control Valve UnitOp could be combined into a single module.

The standard control system (not cascade) consists of three conceptual parts;

- Sensor- The sensor monitors or measures the set point variable and converts its measurement into an electrical (milliamp) signal, which it transmits to the PID controller.
- PID Controller- The PID Controller uses this signal to compute an error. The error is the difference between the set point milliamp equivalent and the electrical signal coming from the sensor. The PID Controller then uses this error to generate a controller signal, also in milliamps, which controls the valve.
- Control Valve- The control valve actuator uses the controller signal to open and close the valve. The amount of the valve movement is a function of the amplitude of the PID control signal. As the valve opens and closes, the flow rate through it changes.

Computationally, this system proceeds as follows:

1. Determine the actual value of the set point variable. For instance, determine the reactor temperature in degrees F.
2. Calculate the sensor function (signal) in milliamps.
3. Calculate the error from the set point and the sensor signal.
4. Using the error compute the PID Controller output (signal) in milliamps.
5. Using the PID Controller signal, calculate the new valve position (present open or shut).
6. Based on the valve position, calculate the flow through the valve.

This is how CC-DYNAMICS models a PID Control system.

This process must be repeated many times per time step to accurately represent the action of real systems.

The details of these steps are described below.

DETERMINE THE VALUE OF THE MEASURED VARIABLE & COMPARE TO SET POINT

Measured variables are the quantities that you want to control. For instance, if you want to keep the reactor pressure as close to a desired value as possible by adjusting its vapor draw rate, the reactor pressure is your set point variable. The program calculates the current value of the measured variable, and compares it to the set point.

You may use almost any parameter in the flowsheet to be a set point variable, it is specified in the PID controller dialog box.

CALCULATE THE SENSOR OUTPUT SIGNAL

The sensor output function is:

$$S = A + B \cdot X + C \cdot X^2$$

where

S is the sensor output signal in milliamps. A, B, C are coefficients of the sensor function, x is the current value of the measured (set point) variable in flowsheet engineering units.

The coefficients A, B, and C are calculated by the program from the maximum and minimum input and output of the sensor. This calculation is made below:

1. The user must specify the following items:
 - a. Whether the sensor function is linear or quadratic. If linear is chosen, C will be set to 0 by the program.
 - b. The maximum and minimum sensor output signal (in milliamps). Default values are 20 and 4 milliamps.
 - c. The values of the measured variable at the sensor maximum and minimum output signal. Described in another way:
 - The "maximum" value of the measured variable generates the maximum sensor output signal. If the measured variable rises above this "maximum", the sensor output remains at the same upper boundary value.
 - The "minimum" value of the measured variable generates the minimum sensor output signal. If the measured variable falls below this "minimum", the sensor output remains at the same lower boundary value.
2. If the sensor function is to be linear, the coefficients A and B are determined from the specified maximums and minimums.
3. If the sensor function is to be quadratic, then the coefficients B and C are computed from the specified maximums and minimum.

THE PID CONTROL FUNCTION

The PID control function is:

$$P_{out} = P + I + D + P_0$$

where

P_{out} = Controller output signal in milliamps

$P = \frac{100}{PB} \cdot \text{error}$ = proportional action

$I = \frac{100}{PB} \cdot \left(\frac{1}{T_i} \right) \cdot \int (\text{error}) dt$ = integral action

$D = \frac{100}{PB} \cdot T_d \cdot \frac{d(\text{error})}{dt}$ = derivative action

and

P_0	=	Controller signal at steady state
PB	=	Proportional band
T_i	=	Integral time constant in minutes
T_d	=	Derivative time constant in minutes
error	=	Current controller input - the controller input at steady state

At the user's option, the error may be defined in one of two ways:

$$\text{error} = X - X_{\text{set}}$$

or

$$\text{Error} = X_{\text{set}} - X$$

where

X	=	Controller input (in milliamps) at the current value of the measured variable.
X_{set}	=	Controller input (in milliamps) at the set point value of the measured variable.

Equation (1) above should be used when the function being controlled is for cooling, pressure control or level control.

Equation (2) above should be used when the function being controlled is for heating or flow rate control.

These are merely guidelines. The user should select the error function which ensures that the control variable will move toward the set point if an error exists. If the service being controlled is steam flow rate to the jacket and the set point is the reactor temperature, the function **Error = X set - X** should be selected. This is true because when the reactor temperature is below the set point, the error will be positive and the steam valve will open. If in the same situation, $\text{Error} = X - X_{\text{set}}$ was chosen, the error would be negative and the steam valve would close, thus moving away from our target, not closer to it.

P_0 is the value of the controller signal (in milliamps) at the steady state. If this field is left blank, P_0 will be calculated by the program based upon the initial state of the process.

The steady state output term allows the controller to function linearly on either side of the set point. Setting $P_0 = 4$ (the minimum signal) starts the system with the valve closed and the controller will open the valve slowly in response to the error signal.

THE VALVE POSITION EQUATION

The valve position is determined using the following equation:

$$T_v \left(\frac{dU}{dt} \right) + U = A_v \cdot P + B_v$$

where

- T_v = The valve time constant (default = 0)
- U = The valve position (in fractions)
- P = The PID Controller output signal in milliamps
- A_v, B_v = The valve constants (Defaults are $A_v = 0.0625$ and $B_v = -0.25$)

The user specifies T_v . The default is $T_v = 0$.

The program uses the following information to calculate A_v and B_v :

- The value of T_v
- The value of the PID controller signal when the valve is completely closed (the "minimum" PID Controller signal)
- The value of the PID Controller signal when the valve is fully opens (the "maximum" PID Control signal).

For example, typical maximum and minimum PID Control signals are 20 milliamps (valve fully open) and 4 milliamps (valve fully closed) respectively. If T_v is zero (the default condition), then:

$$\text{At } U = 1.0_g \quad 1.0 = A_v \cdot (20) + B_v$$

$$\text{At } U = 0.0_g \quad 0.0 = A_v \cdot (4) + B_v$$

$$A_v = 0.0625 \text{ and } B_v = -0.25$$

These are the defaults.

If, however, $P_{\max} = 110$, $P_{\min} = 10$ and we keep $T_v = 0$, then:

$$\text{At } U = 1.0, \quad 1.0 = A_v \cdot (110) + B_v$$

$$\text{At } U = 0.0, \quad 0.0 = A_v \cdot (10) + B_v$$

$$A_v = 0.01 \text{ and } B_v = -0.10$$

THE CONTROL VALVE FLOWRATE CALCULATION

The valve position is related to the valve flow rate by the following equations:

For Subcritical Non-Compressible Flow:

$$\text{Linear Valves : Flow} = 500 \cdot \frac{U}{100} \cdot \left[1 - \frac{1}{R} \right] \cdot C_v \cdot SG_f \cdot \Delta P$$

$$\text{Equal Percentage Valves : Flow} = 500 \cdot R \cdot \left(\frac{U}{100} - 1 \right) \cdot C_v \cdot SG_f \cdot \Delta P$$

where

- R = Rangeability (ratio of maximum to minimum controllable flow)
- C_v = Valve flow coefficient
- SG_f = Specific gravity of flowing fluid
- ΔP = Pressure drop across the valve

For Subcritical Compressible Flow:

$$\text{Linear Valves : Flow} = 3.22 \cdot \frac{U}{100} \cdot \left[1 - \frac{1}{R} \right] \cdot C_v \cdot (\Delta P (P_1 + P_2) SG_f)^{0.5}$$

$$\text{Equal Percentage Valves : Flow} = 3.22 \cdot R \cdot \left(\frac{U}{100} - 1 \right) \cdot C_v \cdot (\Delta P (P_1 + P_2) SG_f)^{0.5}$$

where

- P_1 and P_2 = Upstream and downstream pressure, respectively

For Critical Non-Compressible Flow:

$$\text{Flow} = 500 \cdot C_v \cdot C_f \left(\frac{SG_f}{\Delta P_s} \right)^{0.5}$$

where

- C_f = Critical flow factor, usually supplied by the user; default = 0.98

$$\Delta P_s = P_1 - \left[0.96 - 0.28 \left(\frac{P_v}{P_c} \right)^{0.5} \right] P_v$$

- P_v = Vapor pressure of liquid at flowing temperature
- P_c = Thermodynamic critical pressure of fluid


For Critical Compressible Flow:

$$\text{Flow} = 2.8 \cdot C_v \cdot C_f \cdot P_1 \cdot SG_f^{0.5}$$

The above describes the typical set up for a PID Control system in CC-DYNAMICS. There are certain important variations and expressions of the PID control system, which should be noted:

1. CASCADE CONTROL SYSTEMS

In a cascade control system, the valve is controlled by a slave controller which is in turn controlled by a master controller. In this setup, there are two set point variables, one for each controller. The master controller influences the behavior of the slave by changing its set point value. This changes the magnitude (and sometimes the sign) of the error. This effect “cascades” to the control valve.

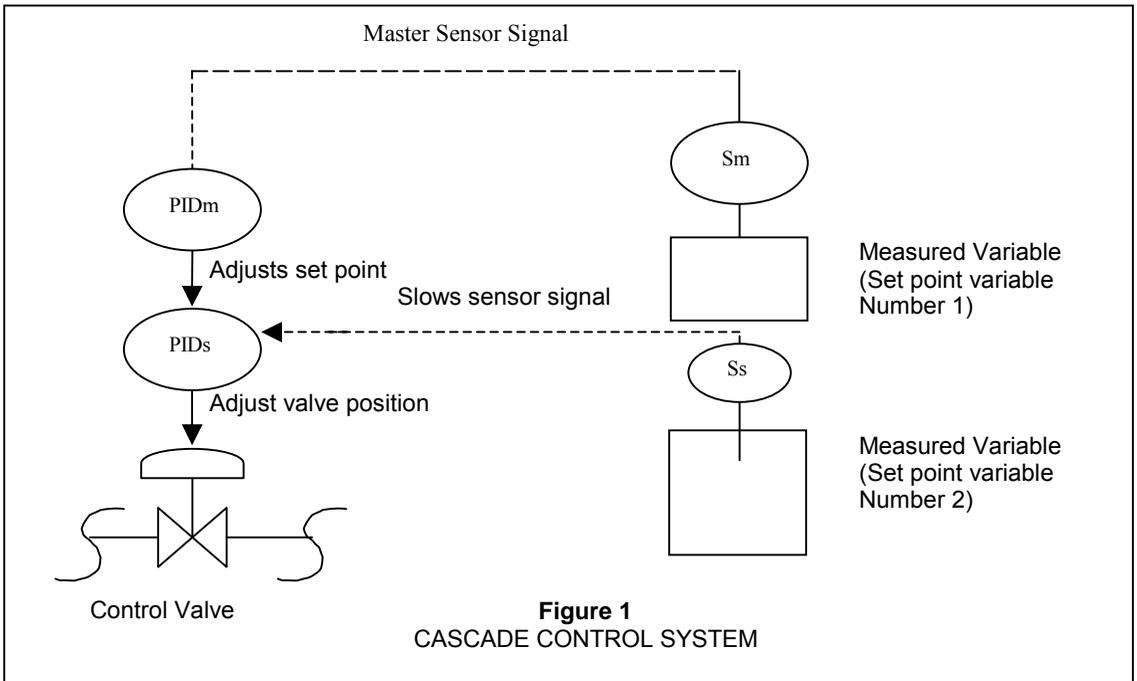

This system is illustrated in the figure below:

The sequence is:

- a. The master sensor, Sm, reads the current value of measured variable number one (the “master” measured variable) and generate a signal to the master PID Controller, PIDm.

- b. The master controller uses this signal to compute the error and a controller output signal. This signal will be in milliamps and will be between the maximum and minimum allowable controller output signals.
- c. The slave controller, PIDs, will use the signal from PIDm to determine what its new set point should be. This is done by interpolating:

$$\frac{P - P_{\min}}{P_{\max} - P_{\min}} = \frac{S - S_{\min}}{S_{\max} - S_{\min}}$$


where

- P = The current signal from PIDm
- P_{max} = *The maximum signal from PIDm*
- P_{min} = The minimum signal from PIDm
- S = The new set point value of measured variable No. 2
- S_{ma} = The maximum set point value of measured variable No. 2
- S_{min} = The minimum set point value of measured variable No. 2

- d. The slave controller then generates a new PID controller signal to the control valve.
- e. The control valve adjusts its position and therefore the flow through the valve.

2. SPLIT RANGE CONTROLLERS

Split range controllers are PID Controllers that control two valves over two mutually exclusive ranges. To illustrate, consider the following batch reactor and its control system.

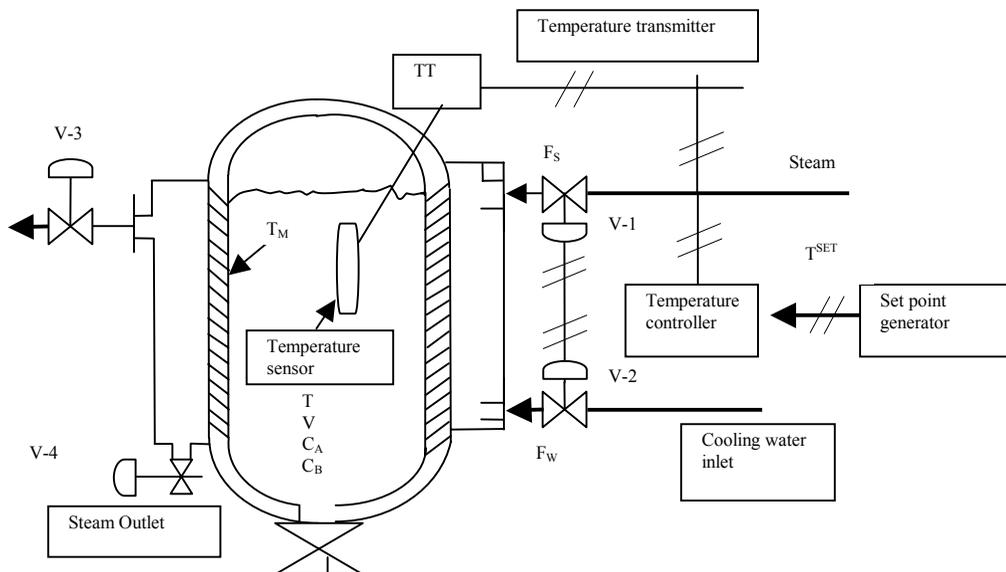

Steam is initially fed into the jacket to heat up the system to temperatures at which the consecutive reactions begin. Then cooling water must be used in the jacket to remove the exothermic heats of the reactions.

The output signal of the temperature controller goes to two split-ranged valves, a steam and a water valve. The valves will be adjusted so that the steam valve is wide open when the controller output signal, P , equals 20 milliamps and is closed at $P = 12$ milliamps (i.e., half the full range of the controller output). The water valve will be closed at $P = 12$ milliamps and wide open at $P = 4$ milliamps. The reason for hooking up the valves in this manner is to have the correct fail-safe action in the event of an instrument failure. The steam valve will be set to fail closed and the cooling water valve will be set to fail open.

In CC-ReACS, split range control systems are set up in the following way:

- Identify the two valves to be controlled by the PID controller in the PID Controller dialog box (for input). Now both control valves will receive the controller output signal.
- Select the valve coefficients, A_v and B_v , so that the valve opens mutually exclusive ranges.

Continuing the above example, we would proceed as follows:

- Specify the steam control valve, V-1, and the cooling water control valve, V-2, as the two valves to be controlled by the PID Controller, TC-1. This done on the **PID Controller dialog box**.
- Compute A_v and B_v for the steam valve:
 - At $P = 20$ milliamps, the valve is 100% open.

- At $P = 12$ milliamps, the valve is 0% open.

where

P is the PID Controller output signal thus, using the valve equation:

$$1.0 = 20 A_v + B_v$$

$$0.0 = 12 A_v + B_v$$

solving these equations we get $A_v = 0.125$ and $B_v = -1.5$.

- iii. Compute A_v and B_v for the cooling water valve:

- At $P = 12$ milliamps, the valve is 0% open
- At $P = 4$ milliamps, the valve is 100% open

then

$$0.0 = 12 A_v + B_v$$

$$1.0 = 4 A_v + B_v$$

solving

$$A_v = -0.125 \text{ and } B_v = 1.5$$

3. Enter these A_v and B_v values in the appropriate input fields for the two valves. This done in the **Control Valve dialog boxes**.
4. Complete the remaining input for the PID Controller and the Control Valves in the usual manner.
5. Controller Limits

Specified limits can be placed on the PID Controller output if so desired. These limits create “dead bands”. Dead bands are regions where the controller instructs the valve not to take action even though controller output signal would indicate otherwise.

For example, let's assume the following situation. For an exothermic reaction, it is desirable to turn off heating fluid supply to the jacket before the desired operating temperature is attained and use the exotherm to raise the temperature further. An upper operating limit for heating of -5°C relative to set point would be appropriate.

Cooling would commence when the set point temperature was reached. If a small temperature overshoot is acceptable, setting a coolant lower operating limit of $+3^\circ \text{C}$ relative to set point would retard the cooling until set point was exceeded by 3°C .

The same system could be set up using absolute controller ranges. If absolute ranges are used, then they may need to be reset if the operating set point is changed.

CONTROL VALVE DIALOG BOX

The control valve calculates the flow rate through the valve based on the output signal it receives from a controller. Each control valve, therefore, must have a designated controller ID as part of its input. The module can handle compressible and incompressible flow as well as critical and sub-critical flow. The control valve calculates the following variables at each time step:

1. The valve position.
2. The flow through the valve.

The flow rate of the inlet and outlet streams will be reset to the control valve calculated flow.

The output from the controller is used by the control valve to determine the valve position, that is, how far open (in percentages) the valve is at any point in time. The valve position, U , is determined as follows:

$$T_v \left(\frac{dU}{dt} \right) + U = A_v \cdot P + B_v$$

where

- T_v = Valve time constant; default = 0
- U = Valve position (in fractions); must be between 0 and 1
- P = Controller output signal in milliamps
- A_v, B_v = Valve constants; defaults: $A_v = 0.0625$ and $B_v = 0.25$

Normally the controller output, P , is between 4 and 20 milliamperes. The valve position, U , varies between 0 and 1.

The valve position is related to the valve flow rate by the following equations:

- C_f = Critical flow factor, usually supplied by the user; default = 0.98

$$\Delta P_s = P_1 - \left[0.96 - 0.28 \left(\frac{P_v}{P_c} \right)^{0.5} \right] P_v$$

- P_v = Vapor pressure of liquid at flowing temperature
- P_c = Thermodynamic critical pressure of fluid

For Critical Compressible Flow:

$$\text{Flow} = 2.8 \cdot C_v \cdot C_f \cdot P_1 \cdot SG_f^{0.5}$$

PARAMETER DEFINITIONS

Valve Flow Coefficient:

The definition of the flow coefficient is defined as follows:

$$C_v = Q \left(\frac{SG_f}{\Delta P_s} \right)^{0.5}$$

This is the valve C_v . This field must be entered. If you do not know a reasonable value for C_v , use the valve sizing C_v tool. Typical C_v 's for single seat control valves are shown below:

Flow Coefficient, C_v		
Size, inches	Single Seat	Double Seat
3/4	-	8
1	9	12
1-1/4	14	18
1-1/2	21	28
2	36	48
2-1/2	54	72
3	75	110
4	124	195
6	270	450
8	480	750
10	750	1160
12	1080	1620
14	1470	2000
16	1920	2560

Rangeability:

Rangeability is the ratio of the maximum to minimum controllable flow. This value is most important for equal percentage valves because the relationship of R to U is non-linear (see the equations under "Valve Type" for more information). The default is 10.

Controller ID:

Enter the equipment ID number of the controller (PIDC) which controls this valve. If no controller ID is specified, the program will assume the valve is manual and the valve position will be set to valve position entered in the field below.

Valve Position (%):

The valve position ranges from 0 (closed) to 100 (fully open). If the valve is controlled by a controller, the value is determined by the controller signal. If no controller is specified, the valve is assumed to be manual and the user must enter a value here. Units are percentages.

CONTROLLER/VALVE POSITION**Valve Time Constant:**

The time constant, T_v , is used in the time position calculation below:

$$T_v \left(\frac{dU}{dt} \right) + U = A_v \cdot P + B_v$$

T_v must be positive; therefore, the term $T_v \left(\frac{dU}{dt} \right)$ tends to slow down the valve response to the controller signal. The larger the value of this term, the more it slows down the response.

Valve A_v and B_v :

These are the A_v and B_v terms in the control valve position equation above. In the default condition, the controller output is assumed to be between 4 and 20 milliamps and the term $T_v \left(\frac{dU}{dt} \right) = 0$ (zero). Since at the minimum position, the valve is closed and $U = 0$ and at the maximum position the valve is fully open and $U = 1$, then the defaults are determined as:

$$\begin{aligned} 0 &= A_v \cdot 4 + B_v \\ 1 &= A_v \cdot 20 + B_v \end{aligned}$$

therefore

$$\begin{aligned} A_v &= 0.0625 \\ B_v &= 0.25 \end{aligned}$$

Valve Mode:

The control valve may be manually controlled, i.e., the valve position, instead of being set by a PID controller, may be specifically fixed by the user using any of the following options:

- i. Fix the flowrate through the valve and have the program calculate the required valve position. If this option is chosen, the flowrate through the valve is set equal to the inlet stream flowrate.
- ii. Fix the valve position, and have CC-ReACS calculate the flow through the valve. If this option is selected, the valve position must be specified in the **Valve Position** field described above.
- iii. Fix both the flowrate through the valve and the valve position and have the program calculate the valve outlet pressure. If this option is selected, the fixed flowrate is taken to be the inlet stream flowrate and the valve position must be specified in the **Valve Position** field described above.

Please note the following:

1. These valves may be fixed at a single valve or scheduled using the RAMP Controller.

If both manual control and PID control are set up or "turned on" for a control valve, the PID control is ignored and the manual control valves are the ones used.

Valve Type:

Choose from either linear or equal percentage valves.

Linear valves relate the actual valve flow to the capacity valve flow by the following relation:

$$\text{Actual Flow} = \frac{U}{100} \left(1 - \frac{1}{R} \right) (\text{Valve Capacity})$$

Equal percentage valves relate actual flow to capacity valve flow as follows:

$$\text{Actual Flow} = R \left(\frac{U}{100} - 1 \right) (\text{Valve Capacity})$$

Valve Operation:

This combo box makes it possible to select different options to simulate malfunctions and manually operated valves. Each option allows the user or an operator training system such as CC-OTS to simulate malfunctions and manual operations of CVAL:

Normal: CVAL will operate properly and will set the flow rate according to the simulation parameters.

Power failure: CVAL will set flow rate to zero regardless of other simulation parameters.

Manually close: CVAL will set flow rate to zero regardless of other simulation parameters.

Manually open: CVAL will calculate flow rates at 100% open valve position regardless of other simulation parameters such as PID controllers.

Manually set valve position: CVAL will allow the user to input a specified valve position and calculate the flow rate, overriding any other simulation parameter.

Critical Flow Factor:

The critical flow factor, C_f , is used to determine if the flow through the valve is above or below critical velocity. If flow is subcritical, the valve position determines the flow. If critical flow conditions exist, then flow is calculated as follows:

Non-compressible critical flow:

$$Q = \frac{C_v \cdot C_f}{\sqrt{\frac{SG_f}{\Delta P_s}}}$$

$$\Delta P_s = P_1 - \left[0.96 - 0.28 \left(\frac{P_v}{P_c} \right)^{0.5} \right] P_v$$

Compressible Critical Flow:

$$Q = \frac{834 \cdot C_f \cdot P_1}{\sqrt{SG_f \cdot T}}$$

where

Q	=	Flow, US gpm for liquids; SCFH for gases
C _v	=	Valve flow coefficient
C _f	=	Critical flow factor
P ₁	=	Inlet pressure in psia
P _c	=	Critical pressure of the fluid
SG _f	=	Specific gravity of fluid; liquids referred to water at standard conditions; gases referred to air at standard conditions
T	=	Flow temperature, R

Downstream Pressure:

The control valve downstream pressure can be specified here. If downstream pressure is not specified, the output pressure of the valve will be determined by the pressure of the downstream unit operation which is specified in the field labeled **Destination ID** or by the jacket pressure (if so specified in the **PID Controller** input).

Supply Pressure:

Enter the control valve supply pressure. If not specified, the pressure of the inlet stream will be used.

IF DOWNSTREAM PRESURE NOT IDENTIFIED

Destination ID:

If the downstream pressure is not specified, the output pressure of the valve will be determined by the pressure of the downstream unit operation specified in this field.

Variable:

If the control valve outlet is going to a batch reactor, it will be necessary to identify which batch reactor pressure (jacket, coil, or process) is to be used. This is done by specifying the downstream UnitOp ID and selecting the appropriate variable in the **Variable** field.

Forward flow only Option: Flow in a piping network can go forward or backward. Checking this option will ensure the flow will go forward. In this case if backward flow is detected the flow rate will be set to zero.

Non-flashing liquid option:

The flow through the valve can be compressible or non-compressible. If the flow is compressible, select the **Vapor or two-phase flow** option. If the flow is non-compressible, select the **Non-flash liquid** option. Selecting non-flash liquid can greatly increase the speed of calculations.

Static head:

If an elevation change is to be included in the flow calculation, enter this value in this field. The elevation change will affect the available pressure drop across the valve, and therefore it will affect the flow rate as well.

Bias option:

The actual input of the CVAL will set the output signal from the PID Controller + Bias

OPTIONAL MASS FLOWRATE TRANSFER

These fields can be used to pass the control valve flow rate into another unit operation variable.

Equip ID:

Specify the unit operation ID number of the UnitOp that the flow rate is to be passed to.

Variable:

Specify the variable number of the parameter that the flow rate is to be passed into.

CALCULATED RESULTS**Calc. Flow Rate:**

The value displayed in this field is the current instantaneous flow rate through the valve.

Controller Output:

This is the value currently being received from the controller.

Steady State Position:

This is the steady state valve position determined from the steady state controller output, P_o . (See the "PID Controller Field Descriptions".)

Controller Output At Steady State:

This is the output signal from the controller at steady state. CC-DYNAMICS calculates this at the initial valve position, assumed to be closed.

TOPOLOGY

A control valve has one input and up to two outlets. If two outlets are present, the first outlet is vapor and the second outlet is liquid.

PID CONTROLLER DIALOG BOX

The PID Controller continuously measures the user specified variable, and based upon the specified set point for that variable, sends a controller output signal (in milliamps) to the control valve. The controller can include proportional, derivative, and/or integral action in its signal computation. Cascade and split range controllers are permitted. The user may specify the control loop and controller limits if so desired. Also, the controller time step may be set to a smaller value than the flowsheet integration time step.

The controller UnitOp is actually a sensor and controller, i.e., it measures its own input as well as calculating its output. The controller measures some variables in the flowsheet (generally a batch reactor variable) and from this computes the controller input in milliamps. From this input and the user-defined set point, the controller calculates its output, which is subsequently used by the control valve.

The specific logic is as follows:

1. The unit reads the current value of the user identified measured variable.
2. The controller input is calculated using the following expression:

$$C_{in} = A_c + B_c \cdot X + C_c \cdot X^2$$

where

- C_{in} = Controller input in milliamps
 X = Current value of the measured variable
 $A_c, B_c,$ = Coefficients calculated by CC-ReACS
 C_c

3. The control error (in milliamps) is then calculated as:

- Error = $C_{in} - C_{in @ \text{setpoint}}$; used for cooling, pressure, and level control
 Error = $C_{in @ \text{setpoint}} - C_{in}$; used for flow and heat control

4. From the above error, the controller output is calculated as follows:

$$P_{out} = P + I + D + P_0$$

where P_{out} = Controller output signal in milliamps

$$P = \frac{100}{PB} \cdot \text{error} = \text{proportional action}$$

$$I = \frac{100}{PB} \cdot \left(\frac{1}{T_i} \right) \cdot \int (\text{error}) dt = \text{integral action}$$

$$D = \frac{100}{PB} \cdot T_d \cdot \frac{d(\text{error})}{dt} = \text{derivative action}$$

P_0 = controller signal at steady state

and

- PB = Proportional band
 T_i = Integral time constant in minutes
 T_d = Derivative time constant in minutes

Error = Current controller input - the controller input at steady state

PARAMETER DEFINITIONS PAGE ONE

Activate Controller:

This choice box turns the control on and off while the simulation is running.

Set Point:

The value of the set point of measured variable is entered in this field. The engineering units for this entry are taken from the flowsheet global engineering units and are displayed to the right of the field.

Steady State Output (P_0):

P_0 is the value of the controller signal (in milliamps) at the steady state. If this field is left blank, P_0 will be calculated by the program based upon the initial state of the process.

The steady state output term allows the controller to function linearly on either side of the set point. Setting $P_0 = 0$ starts the system with the valve closed and the controller will open the valve slowly in response to the error signal.

Proportional Band (PB):

The proportional band (PB) helps determine the speed of the controller output signal according to the above controller output equation.

Increasing PB will decrease the sensitivity of the controller and give a slower response. PB must be positive.

Proportional action alone is normally insufficient to control a process.

Integral Time (T_i):

This is the integral time constant defined above in the controller output equation. The smaller T_i is, the faster the controller will respond. T_i must be 0 or positive. If $T_i = 0$ or $T_i > 1010$, no integral action will be taken.

Integral control removes the offset produced by proportional control alone. Decreasing T_i gives a faster controller response but introduces a tendency to overshoot the set point producing oscillations.

Derivative Time (T_d):

T_d is the derivative time constant in minutes. Derivative control anticipates the convergence on the setpoint so that any overshooting on oscillation is minimized. Derivative control is not frequently used because sensor signal noise makes measurement of the derivative difficult.

Control Valve ID:

The PID Controller must know which control valve or which cascade controller it is controlling. If this controller is controlling a control valve, enter the UnitOp ID of the control valve in this field.

Cascade ID:

If this controller is controlling another controller in a cascade control scheme, enter the UnitOp ID number of the slave controller in this field.

Primary ID:

If this controller is the slave to another controller in a cascade control scheme, enter the UnitOp ID number of the master controller, which is controlling this controller in this field.

CONTROLLER/SENSOR FUNCTION

The functional relationship between the controller input and the output from the sensor is as follows:

$$C_{in} = A_c + B_c \cdot X + C_c \cdot X^2$$

$$C_{in} = \text{Controller input in milliamps}$$

$$X = \text{Value of the measured variable in the user specified engineering units}$$

The coefficients A_c , B_c , C_c are calculated by the program using the function type and variables shown below. If the sensor function is to be linear, then A_c and B_c are calculated. If the sensor function is to be quadratic, then B_c and C_c are calculated.

Controller/Sensor Function:

The user may specify whether the sensor function is linear or quadratic. The default is linear. The quadratic form should be selected if the measured variable is flow rate. Otherwise, linear can be used.

Variable Min and Variable Max:

The user may specify the minimum and maximum sensor output values if desired. The default values are 4 and 20 milliamps, respectively.

Ctrl Input Min and Ctrl Input Max:

The user must specify the minimum and maximum values of the measured variable. This is done in these two fields. The program will then determine the coefficients for the above sensor equation.

Error Definition:

At the user's option, the error may be defined in one of two ways:

$$\text{Error} = X - X_{\text{set}}$$

$$\text{Error} = X_{\text{set}} - X$$

where

X = Controller input (in milliamps) at the current value of the measured variable.

X_{set} = Controller input (in milliamps) at the set point value of the measured variable.

Equation (1) above should be used when the function being controlled is for cooling, pressure control, or level control.

Equation (2) above should be used when the function being controlled is for heating or flow rate control.

These are guidelines. The general rule is as follows. The user should select the error function which ensures that the control variable will move toward the set point if an error exists. For instance, if the service being controlled is steam flow rate to the jacket and the set point is the reactor temperature, the function $\text{Error} = X_{\text{set}} - X$ should be selected. This is true because when the reactor temperature is below the set point, the error will be positive and the steam valve will open. If in the same situation, $\text{Error} = X - X_{\text{set}}$ was chosen, the error would be negative and the steam valve would close, thus moving away from our target, not closer to it.

MEASURED OBJECT

The measured object is the set point variable. The set point is the condition which must be achieved by the control system. In other words, the measured variable must equal the set point before the controller will stop resetting the control valve.

To let CC-DYNAMICS know which variable is to be measured, the user must do the following:

1. Identify whether the variable is contained in a stream or unit operation.
2. Identify which stream or unit operation is involved. This is the UnitOp or Stream ID.
3. Specify the variable or parameter of the stream or unit operation.
4. Specify the type of engineering units the variable uses.
5. Specify which component the measured variable applies to (if applicable).

The procedure is as follows:

1. Identify whether the variable is a stream or a unit operation variable by clicking the appropriate circle at the field labeled "Stream" or "Equipment".
2. In the "Measured Object ID" field, enter either the stream number or the equipment number in which the measured variable is located.

3. In the "Variable" field select the variable from the list provided by:
 - Clicking on the field to open the list;
 - Scrolling to the desired selection;
 - Clicking on the desired selection.
4. Specify the type of engineering units to be used by making the appropriate selection in the "Variable unit" field. Do this by:
 - Clicking on the field to open the list;
 - Scrolling to the desired selection;
 - Clicking on the desired selection.
5. If the measured variable is a selection which requires component identification, such as "mole fraction" or "reaction rate", you must identify the relevant component in the "Comp" field. The procedure is:
 - Click on the field to open the component list;
 - Scroll to the relevant components;
 - Click on the component to select it.

Stream or Equipment:

The user must identify if the measured variable is a stream variable or an equipment parameter. This is done by clicking on the appropriate circle in this field.

ID Number:

The user must specify the ID number of the stream or piece of equipment that the measured object is associated with.

Variable:

Each UnitOp or Stream has a list of variables, which can be used as set point variables. This list is contained in this field and can be displayed by clicking on it. From this list, locate the desired variable and click on it.

Component:

This field contained a list of all the components in the current flowsheet. If a component variable, such as mole fraction or mass flow rate is selected as the "Measured variable" above, then the user must identify which component from this "Measured component" list.

To display the list, click anywhere on the field. Then locate the relevant component by scrolling. To select the component, click on it.

Variable unit:

Use this field to identify the type of engineering units that apply to the measured variable. In other words, if the measured variable is the reactor temperature, selected "2 Temperature" from the list. This will instruct the program to apply the global flowsheet engineering units to the measured variable. Otherwise, internal engineering units will be used.

PARAMETER DEFINITIONS PAGE TWO

Controller Limit:

- None
- Relative to set point
- Actual limit

Specify whether the controller limits specified below are relative to the set point or actual limits. If no limits are specified below, "None" should be specified here.

Upper Limit and Lower Limit:

The upper and lower limits put "dead bands" in the controller response. For instance, if the set point is equal to 200 °F and the lower limit is 195 °F, the cooling water controller will output a minimum signal below 195 °F.

Use special flow control integrator:

This option is used to turn the flow control integrator on and off.

OPTIONAL ACTIVE TIME SPECS

Act. from time (min) and Act. to time (min):

These fields are used to schedule the controller activity; that is to say, to turn it on at one time and off at another. For instance, if the simulation runs for five hours (simulated time), and the controller is only to be active (turned on) between hours two and four, then a value of "120" (minutes) should be entered in the "Act. From time (min)" field and a value of "240" (minutes) should be entered in the "Act. to time (min)" field.

FOR SPLIT RANGE CONTROL**Optional second control valve****2nd valve ID:**

Enter the ID number for the second valve in a split range control scheme.

CALCULATED RESULTS**Integral (Error * Dt):**

If integral action is specified (i.e., if T_i is specified), the integral contribution to the controller output function will be shown here.

Error:

The last computed error is displayed here.

$$\text{Error} = X - X_{\text{set}}; \text{ or } \text{Error} = X_{\text{set}} - X$$

$$X = \text{Current sensor input in milliamps}$$

$$X_{\text{set}} = \text{Sensor input at the set point in milliamps.}$$

Control Output:

The last calculated controller output (P_{out} in milliamps) is displayed here.

IAE:

This field contains the integral average error.

ISE:


This field displays the integral squared error.

Process Value:

This field contains the current value of the measured variable.

THE DYNAMIC VESSEL MODEL

The dynamic vessel unit operations module is a dynamic phase separator and/or accumulator. It is basically a dynamic flash tank with holdups. It is illustrated in figure 2 below.

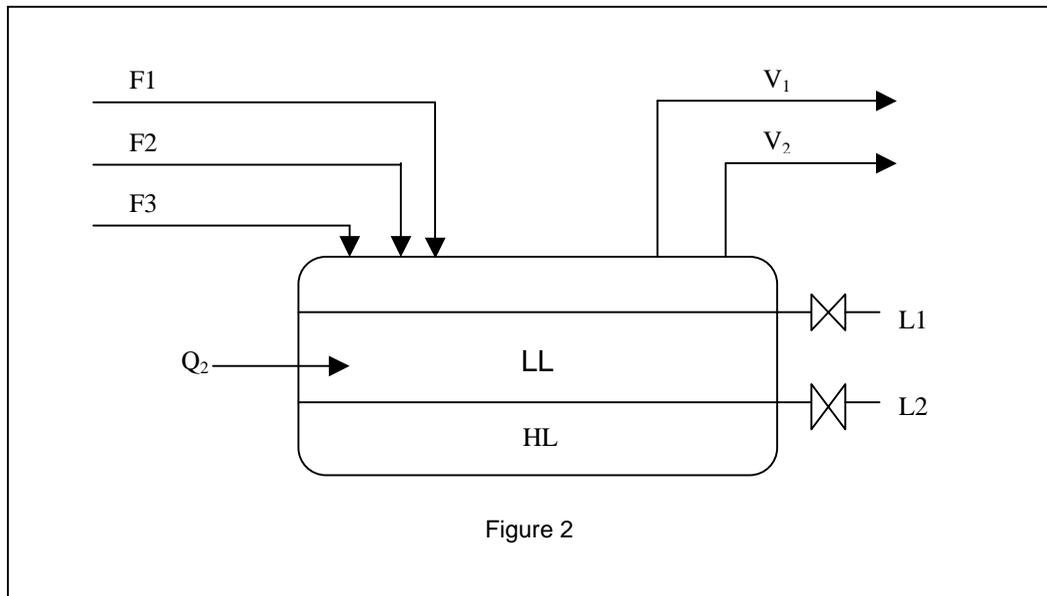

The features and capabilities of the dynamic vessel model are summarized below:

1. Up to three feed streams, two vapor outlet streams and two liquid outlet streams, including utilities.
2. Vapor-liquid and Vapor-liquid-liquid phase calculations are available.
3. Light and heavy liquid phases can be accumulated up to user specified level limits.
4. The vessel operating pressure can be specified or calculated. In other words, pressure can be fixed or dynamic.
5. Four calculation modes are available.
6. The amount of vapor leaving the vessel can be fixed, controlled, or determined by a venting calculation.
7. The amount of liquid exiting the vessel can be a fixed valve or set to the amount of the liquid overflowing a specified liquid level.
8. Multiple vessel geometries can be specified.
9. Safety relief valve performance can be simulated.
10. May be included as a larger part of a pipe network. This includes the static head of the liquid level above the inlet nozzle (for piping networks upstream) and the static head in a liquid outlet stream.

The following major features of the dynamic vessel model are described below:

1. The pressure calculations
2. The calculation modes
3. Maintaining liquid levels by decanting

4. The vapor flow modes
5. Relief device simulation

THE PRESSURE CALCULATIONS

The vessel pressure is calculated by doing a constant volume flash under the current conditions. The program holds the vessel volume constant and varies the vessel pressure until the sum of the vapor and liquid volumes equals the vessel volume. As the conditions change the pressure changes.

The following points should be noted regarding the pressure calculation:

1. If the pressure is to be calculated, the flowrate of the vapor vent or outlet stream must be specified. If it is not, the problem is under specified. However, this specification can be made explicitly by the user by scheduling the vapor flowrate, or it can be made implicitly using a PID Control system. An example of this would be a pressure control system where the vapor flowrate is adjusted to maintain a desired vessel pressure.
2. Specification of an initial charge is optional, but if done can produce certain problems the user needs to be aware of. Frequently, the initial charge specifications will produce volumes that do not match the vessel volume. If the pressure is to be calculated, this can produce unwanted results unless certain conventions are adopted to manage this situation. In CC-DYNAMICS the following conventions are adopted:
 - a. If the liquid present exceeds the vessel capacity, an error message is issued and the simulation will not proceed.
 - b. If the initial charge is subcooled, then the program will do an adiabatic flash to reset the temperature and pressure to values, which fill the vessel. A warning message will be issued.
 - c. If the initial charge is two-phase at the specified temperature and pressure, and the sum of the vapor and liquid volume is not equal to the vessel volume, a warning message will be issued. If the user chooses to go ahead with the simulation, then the program proceeds as follows:
 - The vapor and liquid amounts and compositions are determined.
 - The available vapor space is determined by subtracting the liquid volume from the vessel volume.

$$AVS = RV - LV$$

where

AVS = Available vapor space

RV = Vessel volume

LV = Liquid volume

- The "excess" vapor is calculated as:

$$EV = VV - AVS$$

where

EV = Excess vapor

VV = Vapor volume of the initial charge

The excess vapor is negative if the initial charge does not fill the vessel.

- The excess vapor is removed from the initial charge so that the vapor space equals the available space (AVS). If the excess volume is negative, this means adding enough vapor (of the same composition as the initial vapor) to fill the available vapor space.
- The end result is the composition of any volatile component may change slightly from what was specified. If you receive a warning message saying the initial charge has been scaled to fit the available volume, please be sure to check your initial charge

THE CALCULATION MODES

The dynamic vessel module requires the user to specify both a thermal mode and a pressure mode for calculation. The available thermal modes are adiabatic, flash with heat duty, flash with UA & utility and isothermal. The pressure mode options are fixed pressure or calculated pressure. The user must specify which option is to be used in both calculation modes for the calculation to proceed. If no specification is made, defaults are assumed.

The Thermal Mode:

Note: The pressure used in the calculations for any of the following thermal modes depends on the pressure calculation mode selected.


The thermal mode options are:

- **Adiabatic** – This mode assumes that no heat passes through the walls of the vessel. At each time step a flash is performed using the inlet stream(s) composition and enthalpy.
- **Flash with heat duty** – This mode assumes a constant, user specified heat duty on the vessel. At each time step a flash is performed using the inlet stream(s) composition and enthalpy plus the specified duty.
- **Flash with UA and Utility** – In this mode you must enter the dynamic vessel U (overall heat transfer coefficient) and area. The heat duty is calculated using the equation,

$$Q = U \cdot A \cdot \Delta T$$

The program calculates the temperature, vapor fraction and enthalpy.

If this mode is used, the dynamic vessel must be set up with a utility stream on the flowsheet. In other words, it must have two inlet streams one of which is the utility stream, and an outlet utility stream must also be provided. To specify a utility stream, use a DVSL icon drawn with coil, and do not enter any liquid outlet spec for the utility outlet stream.

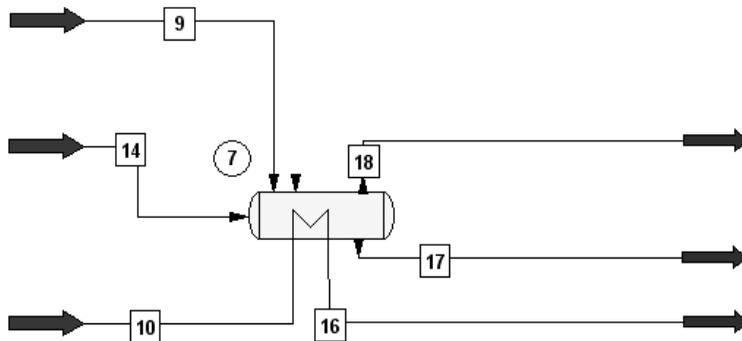

In this example, Stream 10 is the utility inlet, stream 16 is the utility outlet.

At each time step a flash is performed using the inlet stream(s) composition and enthalpy plus the computed heat transfer determined from the above equation.

- **Isothermal** – In this mode the temperature is fixed. At each time step a flash is performed using the inlet stream(s) composition and the specified temperature. A required heat duty is computed.

The Pressure Modes:

- **Fixed pressure** – Using this option, the user specifies the vessel operating pressure. This pressure is then the one used in the flashes mentioned above in the thermal modes.

During fixed pressure simulation if the vapor is in excess of the available vapor space, the excess vapor is vented. If the computed vapor does not fill the available vapor space, the difference is ignored.

- **Calculated pressure** – If the pressure is to be calculated, the flow through the vapor vent must be specified (it may be zero, but it must be specified). The pressure is then varied until the sum of the vapor volume and the liquid volume equals the vessel volume.

MAINTAINING LIQUID LEVELS BY DECANTING

The flow rate of the liquid outlet streams can be determined in a number of ways. One of these is by decanting a liquid in excess of a specified liquid level. Since the dynamic vessel model can handle two liquid phases if requested, it is important to know the decanting model in order to use it correctly.

The model can be summarized in the following way:

If $HL > HLL$; then $HLF = HL - HLL$, and

If $TL > LLL$; then $LLF = LL + HLL - LLL$

where

- HL = The amount of heavy liquid present before decanting
- LL = The amount of light liquid present before decanting
- TL = The amount of total liquid present before decanting: $TL = HL + LL$
- HLL = The volume of the vessel made available for accumulating heavy liquid

For flat head cylinders this would be:

$$HLL = L_h \cdot \pi r^2$$

where

- L_h = The specified heavy liquid level
- π = pi
- r = The radius of the vessel
- LLL = The volume which must be filled before any decanting of light liquid can occur

For flat head cylinder this would be:

$$LLL = L_L \cdot \pi r^2$$

where


- L_L = The specified light liquid level

The following should be noted:

1. The specified levels are from the bottom of the vessel
2. Liquid levels are calculated:
 - a. Using the full inside diameter for vertical vessels and using the full tangent-to-tangent length for horizontal vessels.
 - b. Including the volume of the heads.
3. The excess of heavy liquid is decanted before the light liquid. In other words, the amount of heavy liquid to be decanted is subtracted from the total liquid present before determining how much (if any) light liquid is to be decanted.
4. If the heavy liquid level is below the specified level, then the amount of light liquid present must fill this heavy liquid deficit before any decanting of the light liquid can take place.
5. If we let HLF = the heavy liquid decanted and LLF = the light liquid decanted, four decanting situations can occur:
 - a. $HL > HLL$ and $(LL + HLL) > LLL$, then
 $HLF = HL - HLL$ and $LLF = LL + HLL - LLL$

- b. $HL > HLL$ and $(LL + HLL) < LLL$, then
 $HLF = HL - HLL$ and $LLF = 0$.
- c. $HL < HLL$ and $TL > LLL$, then
 $HLF = 0$ and $LLF = TL - LLL$
- d. $HL < HLL$ and $TL < LLL$, then
 $HLF = 0$ and $LLF = 0$

Their situations are illustrated below:

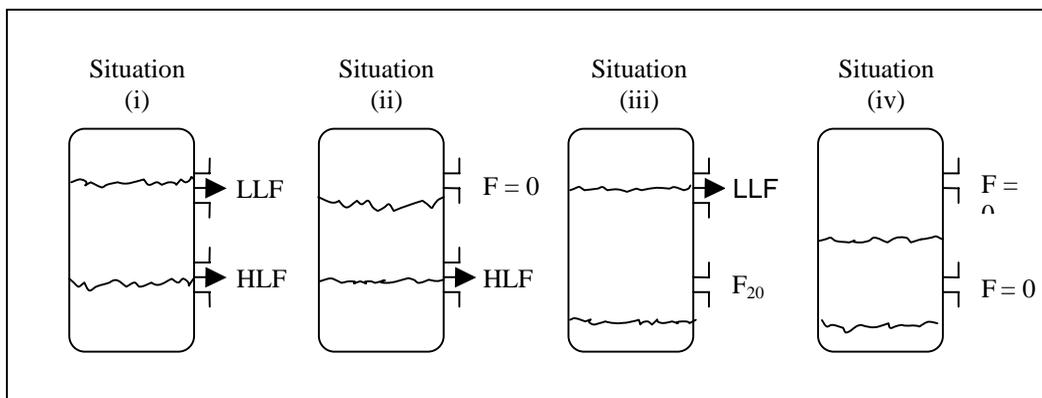

THE VAPOR FLOW MODELS

The dynamic vessel model requires that a vapor outlet or vent be provided even if it is not used. This means you must draw one on the flowsheet.

In addition, the method for determining the flow through this vent must also be specified. The following options are available:

1. The flow rate can be fixed at a specified valve throughout the simulation.
2. The flowrate can be adjusted by a PID control system.
3. The flowrate can be reset at each time step using a RAMP controller.
4. The flowrate can be calculated using relief vent methods. The flow through the vapor vent would be that amount that the safety relief valve (or rupture disk) can pass.
5. The flowrate can be set to the amount of vapor generation in excess of the available vapor space. In this mode the pressure must be specified.

The following rules apply:

1. If the pressure is to be dynamically calculated during the simulation, then the vapor flowrate must be specified, set by some form of controller, or determined using relief vent geometry.
2. Flow through the vapor vent can be two-phase if using relief geometry.

3. If the calculation mode is set to the fixed pressure mode, the vapor flow mode is ignored and relief vent rating cannot be used.

RELIEF VENT CALCULATIONS

The CHEMCAD relief vent model is explained in detail in the on-line help system. No effort is made to repeat that information here. The following points, however, are specific to CC-DYNAMICS and should be noted.

1. Only the relief vent rating calculations can be performed in CC-DYNAMICS. In other words, the size of the relief valve and/or rupture disk must be specified. CC-DYNAMICS will then calculate the amount and composition, and vapor quality of the material, which passes through the vent. This material is then removed from the heat and material balance.
2. Only the vent pressure is determined dynamically. The valve (disk) backpressure must be specified by the user and is fixed throughout the simulation.
3. If a fire model is selected for the relief vent calculation, then the fire heat input is in addition to any other specified heat input.
4. Relief vent calculation cannot be done if the calculation mode is fixed pressure or isothermal.

THE DYNAMIC VESSEL DIALOG BOX

The **Dynamic Vessel** enables the user to model vessel holdups in a dynamic fashion. Features of the dynamic vessel model include:

- Horizontal or vertical vessels
- Ellipsoidal, F & D, Flat, or hemispherical
- Fixed pressure or calculated pressure modes
- Isothermal or non-isothermal modes
- Multiple liquid phases
- Level control
- Specified flow options
- Relief vent rating

PARAMETERS DEFINITIONS – PAGE 1 (GENERAL)

The screenshot shows the 'Dynamic Vessel' dialog box with the following settings:

- General Tab:**
 - Vessel Geometry:**
 - Vertical Vessel (ID: -1)
 - Horizontal Vessel
 - Diameter: 5 ft
 - Cylinder height: 200 ft
 - Head type: Flat
 - Vessel Thermal Mode:**
 - Adiabatic at fixed pressure
 - Fix Pressure: 14.7 psia
 - Initial conditions:**
 - Initial Charge Option: From outlet stream composition
 - Initial liquid level 1: 50 ft
 - Initial liquid level 2: (empty)
 - Initial utility outlet T: (empty)
 - Optional Input:**
 - Inlet nozzle position from top: 200 ft
 - Include liquid static head in output streams
 - Three phase flash (vapor liquid liquid)
 - Include compression / expansion effect
 - Recorder on

GEOMETRY

Enter the diameter and length of the vessel. Length is defined as the tangent-to-tangent cylinder length. The diameter of the vessel is measured at 90 degrees to the long axis.

Vessel Type:

Specify whether the vessel is horizontal or vertical. This is required input. The default is vertical.

Diameter:

Enter the inside diameter of the vessel measured at 90 degrees to the long axis.

Cylinder height:

Enter the cylinder length defined as the distance between the vessel heads.

Vessel Head Type:

Select the vessel head type. Available options are:

- Ellipsoidal (default)
- Bumped F & D (flange and dish)
- Flat
- Hemispherical

Head Ratio:

Enter the head ratio defined as:

$$HR = \frac{\text{overall vessel length} - \text{cylinder length}}{\text{vessel diameter}}$$

The head ratio must be between 0.0 and 1.0.

VESSEL THERMAL MODE:

Upon selection of the desired thermal mode, additional input fields will open up. These fields will be appropriate to the selected mode and must be filled in for the thermal mode to operate.

The dynamic vessel module requires the user to specify both a thermal mode and a pressure mode for calculation. The available thermal modes are: adiabatic, flash with heat duty, flash with UA and utility and isothermal. The pressure mode options are fixed pressure or calculated pressure. The user must specify which option is to be used in both calculation modes for the calculation to proceed. If no specification is made, defaults are assumed.

Note: The pressure used in the calculations for any of the following thermal modes depends on the pressure calculation mode selected.

The thermal mode options are:

- **Adiabatic** – This mode assumes that no heat passes through the walls of the vessel. At each time step a flash is performed using the inlet stream(s) composition and enthalpy.
- **Flash with heat duty** – This mode assumes a constant, user specified heat duty on the vessel. At each time step a flash is performed using the inlet stream(s) composition and enthalpy plus the specified duty.
Flash with UA and Utility – In this mode you must enter the dynamic vessel U (overall heat transfer coefficient) and the **Area** field provided.
- **Isothermal** – In this mode the temperature is fixed. At each time step a flash is performed using the inlet stream(s) composition and the specified temperature. A required heat duty is computed.

The Pressure Modes:

- **Fixed pressure** – Using this option, the user specifies the vessel operating pressure. This pressure is then the one used in the flashes mentioned above in the thermal modes.

During fixed pressure simulation if the vapor is in excess of the available vapor space, the excess vapor is vented. If the computed vapor does not fill the available vapor space, the difference is ignored.

- **Calculated pressure** – If the pressure is to be calculated, the flow through the vapor vent must be specified (it may be zero, but it must be specified). The pressure is then varied until the sum of the vapor volume and the liquid volume equals the vessel volume.

Pressure modes are specified using the **Fix Pressure** box at the left of the dialog box. If this box is left blank, then the program assumes the pressure is to be calculated. If a checkmark is placed in this box (by clicking on it), then an additional input field will open up. The pressure must be specified in this field.

It is mandatory to use the **Fix Pressure** option when the dynamic vessel is part of a piping network. In such a case, the dynamic vessel is computed as a node with fixed pressure.

INITIAL CONDITIONS:

Initial Charge Options

- From outlet Stream Composition: Default mode. Specify an initial liquid level. Specify composition of an attached outlet stream on the flowsheet. During the first time step the vessel will be filled with material based on the composition of the outlet stream. The program assumes that the vessel is well mixed and that the outlet at time zero represents the overall composition of material in the vessel.
- Specify composition & liquid level: This mode activates an initial charge dialog when the user presses OK. Specify the overall composition of the initial charge. CC-DYNAMICS will adjust the total flowrate to reach the specified liquid level, based on the specified overall composition. Specify an initial liquid level.
- Specify mass, calculate liquid level: This mode activates an initial charge dialog when the user presses OK. Specify the composition of the initial charge. Specify a total flow, which represents the total material for the initial charge. During the first time step the program will calculate the liquid level.

Initial Liquid level 1: Specify the initial liquid level in the vessel. If there are two liquid phases, this is the light phase. For use with initial charge mode 0 from outlet stream and 1 specify composition & liquid level of charge. Default is zero.

Initial liquid level 2: If there are two liquid phases this is the heavy phase. Specify the level of the second liquid phase (if present). Default is zero.

Initial utility outlet Temperature: If a utility stream is connected (for vessel mode 2 Flash with UA & Utility) specify the outlet temperature of the utility. The default initial utility stream outlet temperature is the utility stream inlet temperature with the assumption that the heat transfer is from latent heat.

OPTIONAL INPUTS:

Inlet nozzle position from top:

Default is 0 (inlet at top of vessel). Specify vertical location for the inlet nozzle. Only if you check the liquid static head is option for this vessel, the height of liquid above the inlet nozzle will exert pressure head on the inlet stream. This is useful if the dynamic vessel is part of an equation-based-network with inlet flowrate based on backpressure from the vessel.

Include static head in output streams:

If outlets liquid streams of the vessel are connected to piping networks, checking this option will add the static head of the liquid level in the vessel to the specified pressure in the vessel. This feature allows performing more realistic piping network simulations in dynamic mode.

Three phase flash:

Checkmark this field to allow three phase (vapor-liquid- liquid) calculations for the dynamic vessel. A light and heavy liquid level will be calculated. If two liquid outlets are connected, the liquid phases will separate at the outlets. The Global K Value setting (**ThermoPhysical** menu > **K-Values**) for vapor – liquid – liquid must be checked for this setting to apply.

Include Compression/Expansion Effect:

Checkmark this box to include work of compression/expansion in the energy balance for the vessel. This will affect the calculated pressure in the vessel. If checked, a First Law energy balance and the Maxwell relation $H=U-PV$ will be used to calculate the pressure effect based on internal energy change of compression / expansion.

Recorder On:

No time history data for the dynamic vessel will be saved (to disk) unless this option is switched on. If the data is not saved, then it is lost once you leave the **DYNAMICS MENU**. This means it will not be available for plotting and printing.

PARAMETER DEFINITIONS – PAGE 2 (OUTLET FLOW)**Liquid Flow Specifications:**

Note that a RAMP controller can change the specified value at specified time(s) for all modes except Control valve. This allows setpoint changes without use of a control valve and controller.

- **Mole Flow Rate:** Specify a molar flow rate for the liquid outlet. Liquid level will be calculated based on remaining liquid.
- **Mass Flow Rate:** Specify a mass flow rate for the liquid outlet. Liquid level will be calculated based on remaining liquid.
- **Actual Volume Flow Rate:** Specify a volumetric flow rate for the liquid outlet. Calculated liquid volume will be used to determine the mass of liquid. Liquid level will be calculated based on remaining liquid.
- **Control Valve or Unitop:** Specify the control valve (CVAL) UnitOp, which controls the outlet flow. A PID controller can be used with the control valve to model a control system. This mode is particularly useful to model a dynamic column with external reflux drum. You may specify a pump, pipe, or compressor UnitOp if the dynamic vessel is part of a Node network.
- **Constant Level:** Specify a liquid level. During each time step excess liquid will be removed to maintain the specified level. If liquid level is below the specification no liquid will be removed.
- **Constant Mole Holdup:** Specify a liquid holdup in molar units. During each time step excess liquid will be removed to maintain the specified holdup. If holdup is less than the specification no liquid will be removed.
- **Constant Mass Holdup:** Specify a liquid holdup in molar units. During each time step excess liquid will be removed to maintain the specified holdup. If holdup is less than the specification no liquid will be removed.

Vapor Flow Specifications:

If the program is to calculate the vessel pressure and a vapor outlet stream is present, then the flow rate of that stream must be fixed at each time step. In CC-DYNAMICS there are two ways of fixing this flow rate:

1. The user may specify the flow rate as constant throughout the simulation; or
2. The flow rate can be reset at each time step by either a PID or a RAMP controller.

In this “pressure calculated” case, you must specify the following:

1. If the vapor flow rate is to be fixed at a constant value for the entire simulation, then select one of options 0, 1 or 2 for the **Mode** (mole, mass, or volume flow units) and enter the flow specification in the **Flow rate** field. The engineering units will be those set as the flowsheet global engineering units.
2. If the vapor flow rate is to be set by a PID controller, then select the “**Set by control valve**” option as the **Mode** and enter the initial flow value in the **Specification** field (in global units for total flow rate).
3. If the vapor flow rate is to be set by a RAMP controller, then select one of options 0, 1, or 2 for the **Mode**, and enter the initial flow rate in the **Specification** field (using the corresponding global units). Then schedule the vapor flows in the RAMP controller input.

If the total amount of material present in the vessel is less than the specified vapor flow rate, then the pressure calculation will fail and issue an error message, but the simulation will continue.

Specify Liquid Levels

Minimum Level:

This optional input will prevent the liquid level from going below a specified mark input by the user. If the level goes below this mark DVSL will stop emptying the vessel until the specified liquid level is reached again. This level is measured from the bottom of the vessel, therefore the default value is zero.

PARAMETER DEFINITION – PAGE 3 (RELIEF DEVICE)

DIERS Relief Valve Specifications

The dynamic vessel may be fitted with a relief valve which is simulated by the methods and practices established by the Design Institute for Emergency Relief Systems (DIERS). This description is intended to describe to users how to use the relief device rating portion of CC-DYNAMICS. It is not intended as a course on relief valve sizing. It is assumed that the user is already familiar with relief valve sizing techniques and terms.

The screenshot shows the 'Dynamic Vessel - Relief Device' configuration window. The 'Relief Device' tab is active. The 'DIERS Relief Device Specifications' section includes the following fields and values:

- Nozzle area: 0.111111 ft²
- Vessel model: Bubbly
- Device type: Relief valve
- CO: 1.2
- Discharge coeff: 0.9
- Above ground: 1 ft
- Pressure Data:
 - Set pressure: 30 psia
 - Back pressure: 14.7 psia
 - Max pressure: (empty) psia
- Stream ID: 6
- Vent Flow Model: HEM (Homogeneous Equilibrium)
- Adequate fire facilities exist:
- Fire model: 0 No fire
- F factor: (empty)
- Ignore top head area in exposed area calculations:
- For vapor relief only:
 - Kb: (empty)
- For liquid relief only:
 - Kp: (empty)
 - Kw: (empty)
 - Kv: (empty)

Buttons at the bottom include Help, Cancel, and OK.

Vessel Model:

The fluid characterization of the vessel under relief conditions, options are as follows:

- Bubbly
- Churn-Turbulent
- Homogenous

The Bubbly vessel model assumes uniform vapor generation in the liquid phase with vapor/liquid disengagement within vessel. The Churn-Turbulent model assumes uniform vapor generation; however, with Churn-Turbulent, there is greater vapor/liquid disengagement. The Homogenous vessel model assumes there is no vapor/liquid disengagement and is useful for viscous fluids or short venting times.

The "Non-boiling height" modification of the Churn-Turbulent vessel model has not been included in this program.

Device Type:

The device type can be a relief valve, a rupture disk, or a relief valve followed by a rupture disk.

C0:

C0 is a data correlation parameter for Bubbly and Churn-Turbulent models. Normal values range from 1.0 to 1.5. Generally speaking, the greater C0, the less likely two-phase venting will occur. Default is 1.2.

Nozzle Area:

The cross sectional area of the relief system nozzle.

Discharge Coefficient:

This is the roughness factor of the relief device. For relief valves, this has a value of 0.975. For rupture discs, this is typically 0.625.

Above Ground:

Please enter the elevation of the vessel above the pad level.

PRESSURE DATA**Set Pressure:**

The "lift" or opening pressure of the relief system. Typically this number is within 10% of the maximum design pressure for the vessel.

Back Pressure:

The flare or relief system pressure on the backside of the valve. When the vent is connected to a NODE UnitOp, this field will be the backpressure for the relief device until the relief device opens. In such a case backpressure will then be calculated by the piping network.

Max pressure:

Pressure rating of the vessel.

Vent Flow Model:

The vent flow model may be selected from the following list (see DIERS Handbook for full descriptions):

- HEM (Homogenous Equilibrium Model)
- ERM (Equilibrium Rate Model)

Henry-Fauske HNE
 Non_Flashing Liquid
 Single Phase Vapor

Adequate fire facilities exist:

This is used in the API 520/521 fire model. Select from options: Adequate fire and drainage facilities exist or adequate fire and drainage facilities do not exist.

Fire Model:

Select one of the following fire models:

- 0 No Fire
- 1 API-520/521
- 2 API-2000
- 3 OSHA 1910.106
- 4 NFPA-30

F Factor:

This factor is for adjusting the fire heat load for the environment. Below is a list of standard values:

<u>Vessel configuration</u>	<u>F Factor</u>
Bare Vessel	1.0
Insulated Vessel	0.3
Sprinkler System	0.3
Both Insulation and Sprinklers	0.15

Ignore top head in exposed area calculations:

This check box is used to specify whether or not to exclude the area of the top of the vessel for the exposed area calculations.

FOR VAPOR RELIEF ONLY

Kb:

For vapor relief systems, enter the Kb. Kb is defined as the backpressure correction factor for vapor relief.

FOR LIQUID RELIEF ONLY

Kp:

For liquid relief systems, this is the capacity correction factor for overpressure.

Kw:

For liquid relief systems, this is the capacity correction factor for backpressure.

Kv:

For liquid relief systems, this is the viscosity correction factor. $K_v = 1$ for non-viscous fluid.

PARAMETER DEFINITIONS – PAGE 4 (CALCULATED RESULTS)**Vessel Temperature****Vessel Pressure****Liquid Level 1**

This is the liquid level for the light phase liquid. If there is only one phase of liquid, this is the total liquid level.

Liquid Level 2

This is the liquid level for the heavy phase liquid.

Vessel Volume

This is the calculated volume of the vessel.

Liquid1 Volume

This is the liquid volume for the light liquid phase. If there is only one liquid phase, this is the total liquid volume.

Liquid 2 Volume

This is the liquid volume for the heavy liquid phase. If there is only one liquid phase, this is shown as zero.

Vapor Volume

This is the vapor headspace volume.

Overall heat duty

This is the total heat transferred to/from the vessel.

TOPOLOGY

The dynamic vessel may have up to 3 inputs and 3 outlets; the inlets may be in any order. The outlets are listed with the vapor outlet first, followed by the heavy liquid outlet, and then the light liquid outlet. In the event there is only a single liquid phase, all liquid flows out the bottom outlet. Utility streams are connected to the utility coil section of the symbol.

OTHER UNIT OPERATIONS

Other unit operations modules are also provided with a CC-DYNAMICS, CC-ReACS, or CC-DCOLUMN license.

These include:

- The RAMP Controller
- The Time Delay
- The Time Switch
- Commonly used steady state unit operation

THE RAMP CONTROLLER

The Ramp controller unit is used to change various operating parameters with respect to time. In dynamic simulations, the scheduling ramp may be used to simulate operator functions such as opening a valve at time = t.

Each scheduled ramp can only act on a single parameter.

PARAMETER DEFINITIONS

Controller Type RAMP can control both: inlet streams and UnitOp parameters:

1. **Stream:** This mode causes the RAMP to adjust an inlet stream variable during simulation.
2. **UnitOp:** This mode causes the RAMP to adjust a unit operations parameter during the simulation.

Stream/UnitOp ID:

Enter the ID number for the stream or UnitOp, which has the variable to be reset by the RAMP.

Variable Number:

This field is used to identify the variable, which is to be continuously reset by the RAMP. If this variable is from a dynamic UnitOp or from a stream, a list of the available variables will be displayed and the user may click on the desired item to select it. If the variable is from a steady state UnitOp then you must type in the Variable Number (Variable Numbers can be found in the on-line manual) Time (Min) And

Value:

This is a spreadsheet style chart of how the value of the parameter changes in time. CHEMCAD automatically interpolates between values to determine the value for each time slice in the dynamic simulation.


Controller Mode:

There are four different ways of simulating disturbances. Each one has its own options.


- Use table below: The user can input a table of variable values vs. time directly.




- Random disturbance: The user can input a minimum and maximum value for RAMP to set the variable value randomly.

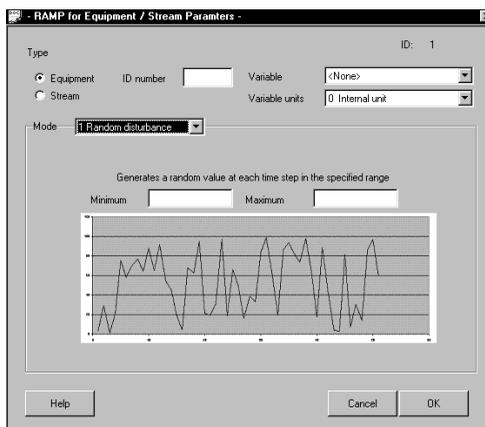

- Sine wave: The user can input the parameters to simulate a sine wave disturbance.

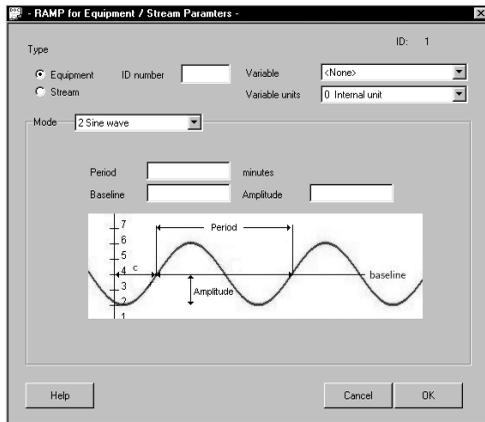


- Disable ramp control: Using this option will disable the RAMP, and the variable will not be adjusted.

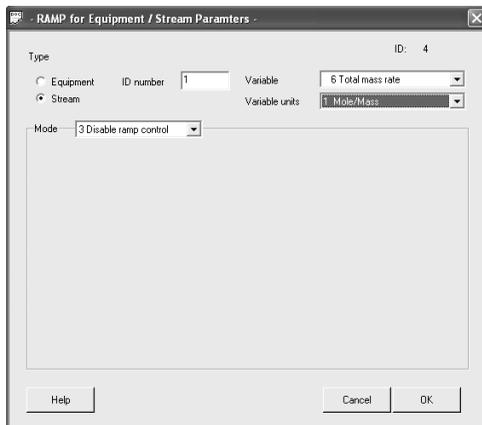

THE TIME DELAY UNIT OPERATION

The Time Delay unit is used to simulate delays in dynamic simulation, such as pipe delays.

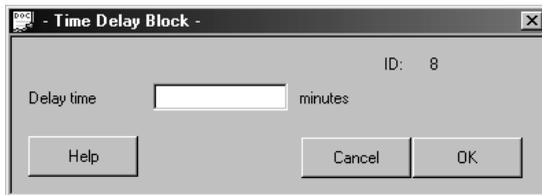

Delay time:


The user specifies the duration of the time delay which the stream experiences.

TOPOLOGY

Time delays have only one inlet and one outlet.

THE TIME SWITCH UNIT OPERATION

The Time Switch UnitOp is a process flow scheduling tool. It provides a time schedule for the direction of these flows.

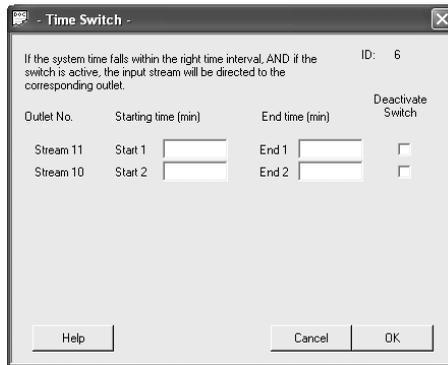

The dialog box will contain one row of fields for each outlet stream coming from the time switch. This now will enable the user to direct all process input (to the time switch) through the outlet stream during the times specified.

There are four fields for each row. These are:

1. Outlet No.
2. Starting time
3. End time
4. Deactivate switch

These are described below:

Outlet No.: Within the Time switch, streams are identified by position number. Positions are numbered from the outside in. In other words, the outlet position located the farthest from the inlet position is position number one. In the above example dialog box, this position is labeled "Stream 1". The outlet position located closest to the inlet position will receive the highest position number. In the above example dialog box, this position is labeled "Stream 3". All other positions are relative to these positions. These statements apply only to the standard Time Switch icon (the icon supplied as part of the CC-ReACS program). The user can create his/her own icon, which follows different valves.

Starting time: This field designates when flow through this outlet will begin. Starting time is specified in minutes from time zero.

End time: This field designates when flow through this outlet is to cease. End time is specified in minutes from time zero.

Deactivate Switch: This checkbox turns the schedule for the outlet off.

TOPOLOGY

The Time Switch UnitOp has one inlet stream and up to eight outlet streams.

STEADY STATE UNIT OPERATIONS

In addition to the unit operations modules already described, your CC-DYNAMICS, CC-ReACS, or CC-DCOLUMN license entitles you to use other unit operations modules within the CHEMCAD system. The one restriction on the use of these modules is that they can only be used in dynamic mode.

The following unit operations in the CHEMCAD library are available for use with CC-ReACS, CC-DCOLUMN, or CC-DYNAMICS without an additional license:

- Calculator
- Component Separator
- Compressor
- Controller
- Divider
- Excel Unit
- Fired heater
- Flash vessel
- Heat exchanger
- LLV flash
- Mixer
- Node
- Phase generator
- Pump
- Stream Reference
- Valve
- User-Added
- Subflowsheet

In addition to this list, the following unit operations in the CHEMCAD library are available for use with CC-DCOLUMN without an additional license:

- SCDS distillation
- Tower distillation
- Tower Plus distillation

Whenever a steady state unit operation is used in a dynamic flowsheet, the user is making the implicit assumption that the dynamics of that unit operation are very, very fast. Technically, they are assumed to be instantaneous. If this is not a reasonable approximation, consider using the tank and time delay UnitOps to build in some of the dynamic effects of these modules.

DYNAMIC TECHNIQUES

This section is intended to help you with doing dynamic simulation work. Dynamic simulation involves activities much more complex than those encountered in steady state calculations. The user must gather more information about the process under consideration, and knowledge about control systems and instrumentation is advantageous.

Before any complex control system of a technology is installed, a dynamic simulator can be used to analyze the system, to assess its future performance, and to detect possible problems or infeasible schemes. Dynamic simulation can also help during process start-up and in the tuning of the control system.

Dynamic simulation of industrial technologies requires dynamic mathematical models of unit operations as well as a special dynamic “engine” or a solver, and reporting subsystem.

CC-ReACS was the first implemented dynamic module of the CHEMCAD Suite. This engineering software tool was designed to simulate the behavior of batch and semi-batch vessel reactors. CC-ReACS contains all fundamental dynamic units and the solver for general dynamic simulation.

CC-DCOLUMN is a software tool that involves generalized dynamic simulation distillation columns. It can be a powerful tool for studies of batch or semi-batch distillation units, and it can be equally well used for studies of continuous distillation, including complete distillation train of many columns.

The CC-STEADY STATE and CC-DCOLUMN combination is perfect for the design of continuous distillation systems, where CC-STEADY STATE provides theoretical solution of the problem and prepares the initial data for dynamic simulation. Similarly, the combination of CC-BATCH and CC-DCOLUMN is ideal in solving batch and semi-batch distillation systems, as CC-BATCH allows you to understand behavior of the column before control systems are introduced. CC-BATCH is a CHEMCAD Suite module for batch and semi-batch distillation.)

The mathematical models of CC-DCOLUMN are extensions to the steady state distillation models (SCDS, TPLS, TOWER) by a set of differential equations describing the mass, component and heat balances of a dynamic column. Only the extended dynamic SCDS model can make use of the component mass transfer model as well.

CC-DCOLUMN follows the general philosophy of the CHEMCAD Suite, that is, the program should be easy to use. From this point of view, it can be used as a multipurpose and multifunctional unit operation with a set of built-in process equipment pieces and with a set of built-in control algorithms.

"Easy to use" does not necessarily mean that the program would be successfully operated by users of no experience with dynamic simulation, or those who do not know the special dynamic simulation techniques of the CHEMCAD Suite. This section helps the user to gain this experience.

This section consists of two parts. The first part is a detailed overview of the fundamental techniques of dynamic simulation using the CHEMCAD Suite. The usage of CC-DCOLUMN is discussed in the second part. With continuous and batch distillation examples, we will explain the solution of theoretical and practical problems that can be solved using dynamic simulation.

FUNDAMENTAL TECHNIQUES

THE CONTROL VALVE, CVAL

The control valve (CVAL) calculates the flow rate through the valve. The terms "the control valve" and CVAL are used interchangeably in this manual.

HOW THE CONTROL VALVE MODIFIES THE FLOW RATE

Rule 1.


The Control valve has no volume and has no dynamic property, so the mass flow rate at the outlet is always equal to the mass flow rate at the inlet.

Rule 2.


The user who works with the flowsheet should make use of the calculated flow rate.

Techniques:

1. Place a control valve at inlet stream of a flowsheet. The control valve should directly follow the feed arrow in the stream. In this case, the flow rate of the inlet and outlet streams will be reset to the flow calculated by the control valve.

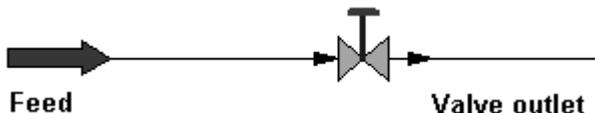

2. Use the "optional mass flow rate transfer" option of CVAL if the source of the inlet stream is a passive unit. A unit is passive if it cannot take over the calculated flow rate from the control valve. Typical passive stream source units are stream divider and stream reference models. The following example shows the technique that uses the stream divider.

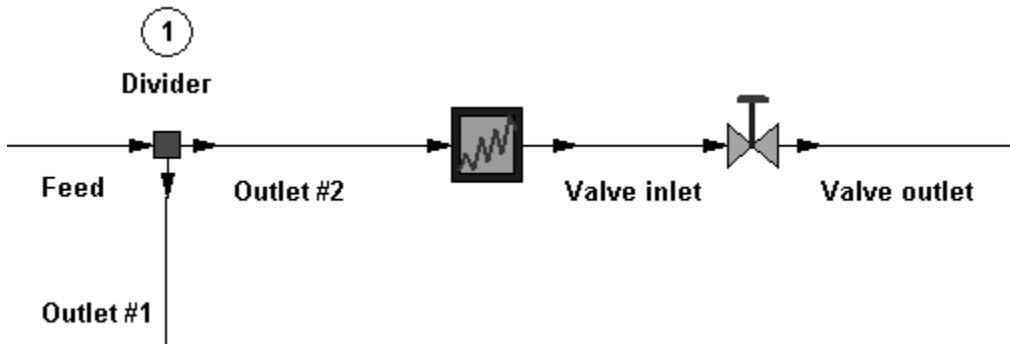

The setting of control valve:

Optional mass flowrate transfer:


Equip. ID

Variable

The setting of stream divider:

Split based on	Flow rate kg/h
<input type="text" value="3 Mass flowrate"/>	<input type="text" value=""/>
Output stream ID 5	<input type="text" value=""/>
Output stream ID 4	<input type="text" value="3041.8"/>

The state of the system at time point (k)

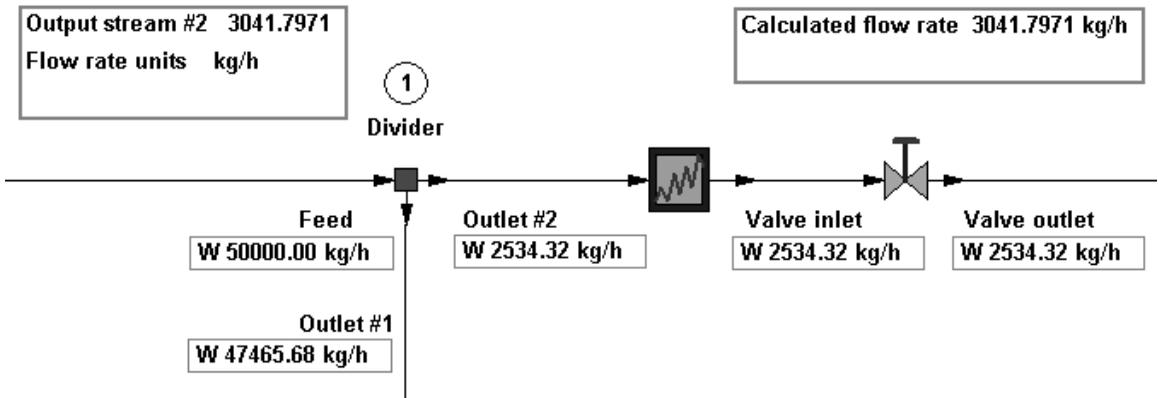

This solution means that at every time point (k) the streams – from the source point through the valve - have identical flow rate values as calculated by the control valve at time point ($k-1$). The unit operations have specifications identical to the flow rate calculated by the control valve at time point (k) and transferred to the divider unit. (The large difference between stream values calculated at step $k-1$ and unit operation specifications set at time k results from quick opening of the control valve in this example.)

3. The next technique demonstrates application of the stream reference model.

The settings for stream reference model are:

Scale/Adjust flow rate

Scale

Flow units:

Fixed flow rate

The setting for the control valve is:

Optional mass flowrate transfer:

Equip. ID


Variable

where

Calculated results:


Calc. flow rate kg/h

Results at time point (*k*) are the following:

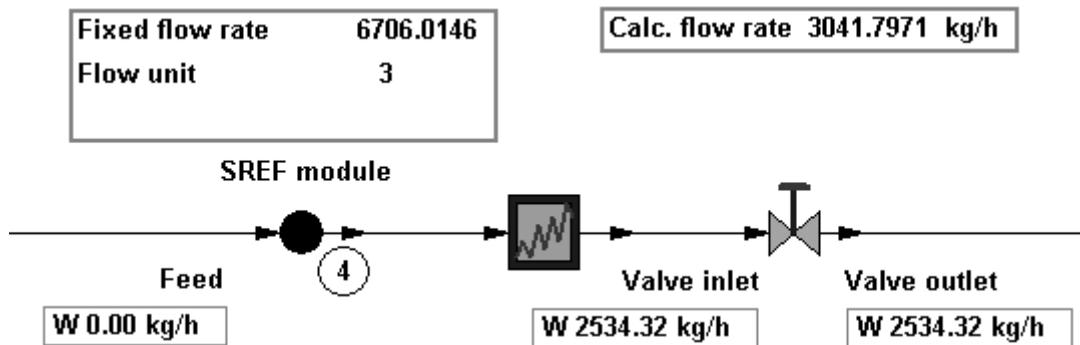

Note: With the stream reference model, you should consider conversion of engineering units. The actual mass flow rate unit of the example above is kg/h, but the SREF defaults to lb/h. CC-DCOLUMN will copy the internal stored value of mass flow rate = $3041.7971 \times 2.20462 = 6706.0146$ lb/h from the control valve to the stream reference model. Because of this specific behavior, you should select lb/h as flow unit in stream reference model.

4. Use the mass flow rate transfer option of active units. A unit is active if it can take over the calculated flow rate from the control valve. Typical active stream source units are the dynamic vessel and the dynamic column models. In this case, you should always specify the ID of the control valve that will calculate the flow rate for the active unit. The next example shows this technique using a dynamic tower model with controlled bottoms flow rate.

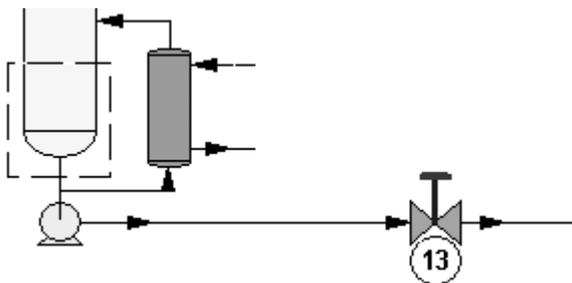

Note: A horizontal vessel is assumed in the dashed box. This is a part of the dynamic tower model and it is handled by built-in algorithms. (Unit ID of column is 10)

The setting of the “vessel” is:

Bottoms rate specification

By control valve

Bottoms rate

Bottoms control valve ID # 13

This information is sufficient for the model; the actual value of flow rate will always be transferred from unit 13. In this case, there is no need to specify “flow rate transfer” option in the dialog box of the control valve.

You are allowed, however, to apply the passive unit approach, even if you are working with an active unit. To do that, you would refrain from applying the “By control valve” method of the active unit. The “vessel” specification is now:

Bottoms rate specification

Liquid bottoms mass rate

Bottoms rate 6850 kg/h

Bottoms control valve ID # 13

The control valve specification is now:


Optional mass flowrate transfer:

Equip. ID 10

Variable 111 Bottoms mass rate

In the example above, you tell CC-DCOLUMN to fix the flow rate of the bottoms stream to some value. Then, you instruct CVAL to copy the calculated flow rate directly to the equipment (unit operation) specification. Both techniques, that is, the active and the passive approach, can be applied interchangeably with active unit operations of CC-DCOLUMN dynamic modules. (Note: The active unit operations are: Dynamic Columns, Batch Reactor, and Dynamic Vessel.)

5. The next technique is similar to the previous one. Here we used a separate (discrete) reboiler system: heat exchanger and vessel. In the picture you can see the column bottom and the vessel with a liquid level control loop combined together.

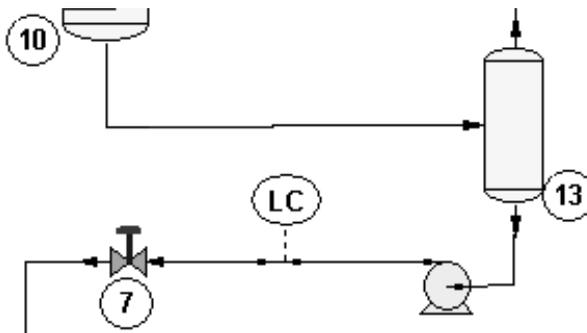

The specification for the vessel is:

Liquid flow specifications	
Mode	Specification
1 Mass flow rate	81076.4 kg/h
0 Mole flow rate	kmol/h
0 Mole flow rate	kmol/h

and for the control valve it is:

Optional mass flowrate transfer:	
Equip. ID	13
Variable	29 Liq flow 1 spec.

It is usually much simpler to apply the active unit approach because only one specification is needed. The following picture demonstrates this approach for the vessel:

Liquid flow specifications	
Mode	Specification
3 Control valve	7 Controller ID

HOW TO MODIFY THE VALVE POSITION

The flow rate through the valve is based on the valve position. The actual value of valve position is stored in the control valve dialog box.

Valve position %	64.997
------------------	--------

Rule 1.


If a control valve is not related to a controller, then the user should define a method to set the valve position. Note that CC-DCOLUMN always displays a warning message when a controller ID is not defined. From the viewpoint of dynamic simulation, this message can be ignored.

Rule 2.

If the output signal of a PID controller is used to determine the valve position, the control valve must have a designated controller ID as part of its input.

Techniques:

1. The simplest technique is to set a constant valve position as defined by the user before the start of a dynamic simulation. This solution is not very typical, because the user cannot modify the valve position during the simulation.
2. A good and frequently used technique is to define a valve position sequence using RAMP model. You can see below the flowsheet that makes use of this technique, where the Control Valve ID number is 3 and the RAMP ID number is 2:

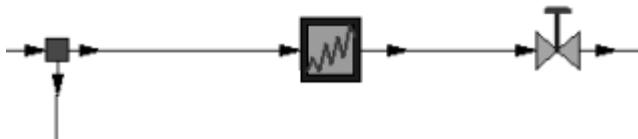



The RAMP specifications are:

<input checked="" type="radio"/> Equipment	ID number	<input type="text" value="3"/>	Variable	<input type="text" value="11 Valve position %"/>
<input type="radio"/> Stream			Variable units	<input type="text" value="0 Internal unit"/>

The RAMP schedule is:

Time (min)	Value
	1e-006
10	50
15	50
25	80
30	80
40	70
50	25
60	25


The RAMP model sets the valve position (Parameter ID = 11) of the control valve (Unit ID = 3) by the predefined curve. The time point – value data pairs represent the break points of the continuous curve. CC-DCOLUMN makes a linear interpolation between these points. With a study of batch technologies, we can define special control sequences using 0 % and 100 % valve positions (On / Off or Open / Closed). It is also possible to define special control sequences using the Valve operation option available on the CVAL dialog (see picture below).

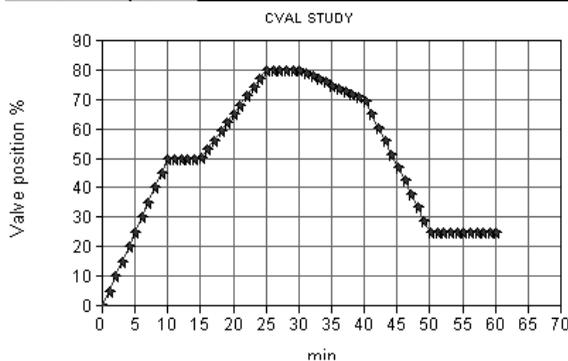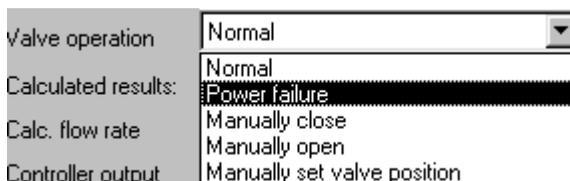


Linear valve

★ Valve position %

Equal percentage valve

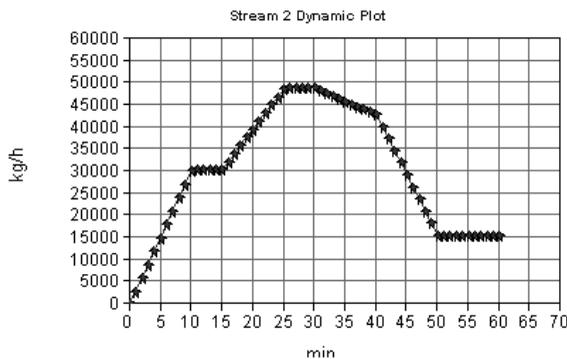

★ Tot. mass rate

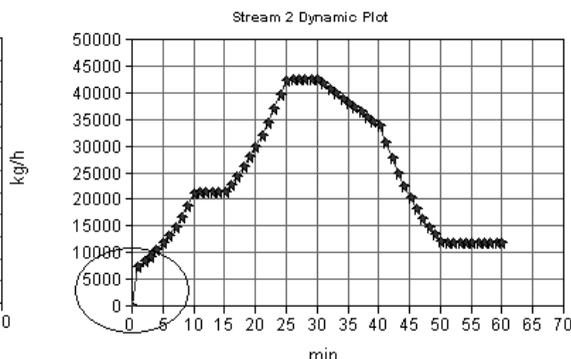

★ Tot. mass rate

The first picture shows the valve position manipulated by RAMP model. The bottom-left picture shows the actual flow rate for linear valves and the bottom-right one shows it for an equal percentage valves.

A circle indicates the critical regime for an equal percentage valve. Detecting this regime, CC-DCOLUMN displays a warning message suggesting, either that the user select a linear valve or to use equal percentage valve of smaller size. From a practical viewpoint, equal percentage valves are recommended for continuous processes and the suggested working range of these valves is in the range of 60% -70% opening. For batch technologies or for valves that would be able to close completely, linear valves should be used, and the maximum flow rate should be matched with the valve for 100% opening.

3. It is possible to use CONT (the steady state controller) model in FF (Feed Forward) mode to set valve position. This enables the program to calculate the desired valve position by a simple algorithm.
4. Another technique is to directly determine the valve position by a signal from PID controller. The elements found in the next picture form a typical simple control loop. In the technique presented, the RAMP model generates the current values of the set point. Let's study the relationship between the control valve and the PID controller.

CC-DCOLUMN uses cross-linking to define the relationship. In the control valve dialog box, you should define the controller ID number, and in the PID controller dialog box you should specify the ID number of the control valve.


This is a portion of the control valve dialog box:

Controller ID

And this is a portion of the PID controller dialog box:

Control valve ID.

For instance, the control loop can be organized similar to this one:

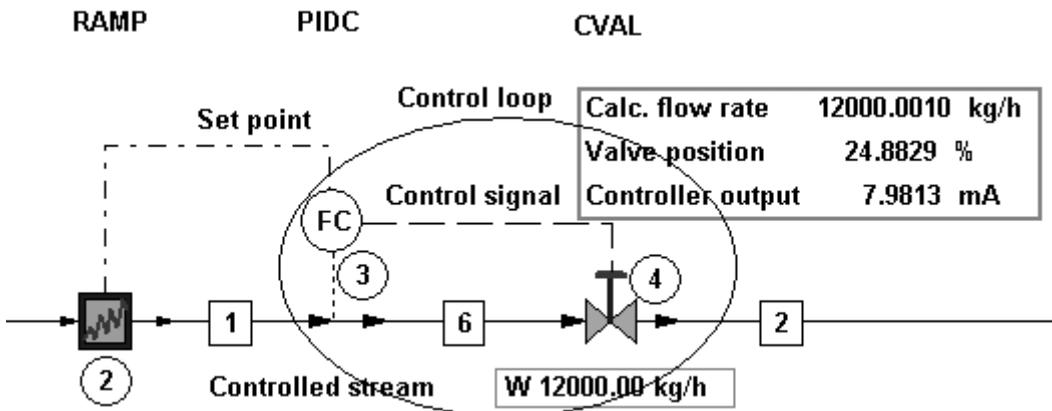

Note:

CC-DCOLUMN uses a signal expressed in milliamperes to transfer information between elements of a control loop. The default range is 4 – 20 mA. The user can modify this by selecting signal expressed in volts, in range of –10 – +10 V for example. In such case, the user should be sure to recalculate the parameters correctly.

The maximum control signal refers to a totally open valve, only in cases where the valve has been defined as NC (Normally Closed). NC valve is the default valve type in CC-DCOLUMN. To redefine a valve as Normally Opened (NO), it is necessary to enter different values for the Av and Bv parameters of the valve. If the 4 –20 mA signal range is used, then these parameters should take values of Av = - 0.0625 and Bv = 1.25. In this case, the maximum control signal refers to a totally closed valve.


The Control valve has several special parameters. These are:

Critical flow factor	<input type="text" value="0.98"/>	
Downstream pressure	<input type="text" value="1200"/>	mmHg
Supply pressure	<input type="text"/>	mmHg
If downstream P not specified		
Destination ID	<input type="text"/>	
Variable	<input type="text" value="<None>"/>	
<input type="checkbox"/>	Forward flow only	
<input type="checkbox"/>	Check here for non-flashing liquid	
Static head	<input type="text"/>	ft
Bias	<input type="text"/>	mA


If the downstream is going to pressurized equipment, and the program is to calculate the actual pressure of this unit, use downstream specification (Destination ID). In this case, the downstream pressure specification refers to the initial value only. However, in this case it is required to specify initial downstream pressure.

The static head is a similar additive variable, and it can be constant or variable (when modified by a FF controller).

The next picture displays signals taken from the above example loop. It is apparent that an equal percentage NC valve has been used (as the signal grows, then the opening grows; this valve never closes completely.)

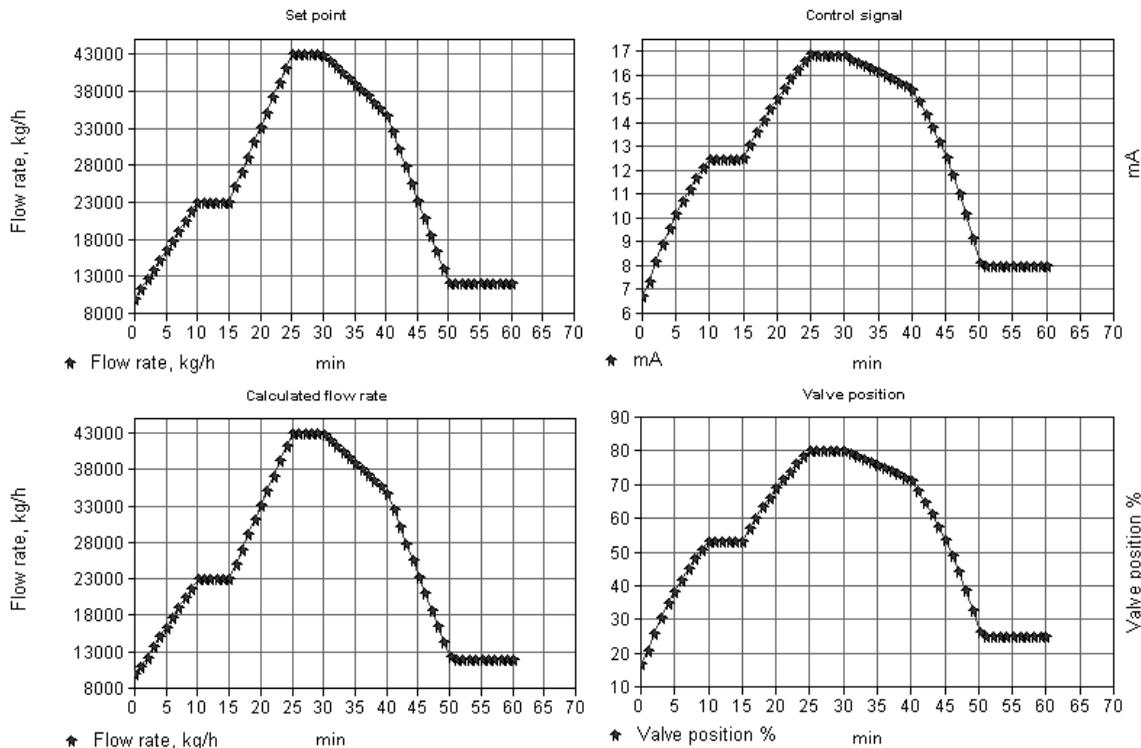

The control signal and valve position for NO linear valve follow:

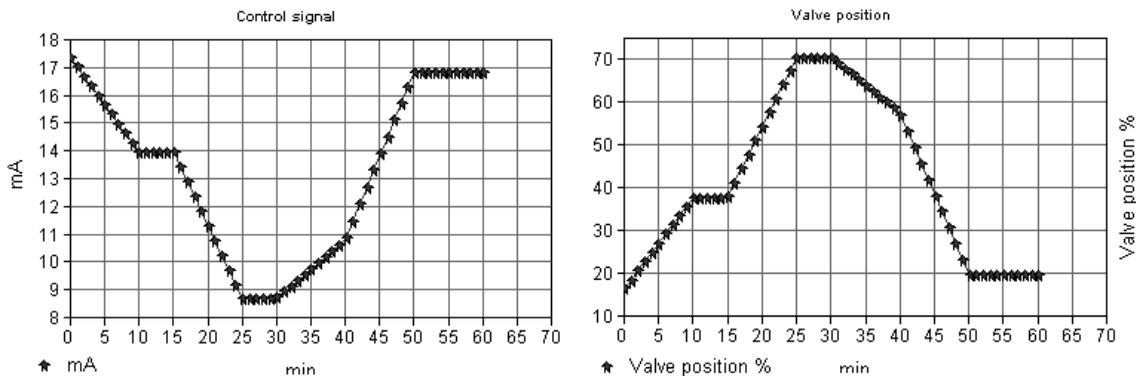

It must be pointed out that applying a Normally Opened valve requires re-defining the PID controller parameters as well. It will be described in the section "How to specify error function".

-sizing, initial state of control valve, troubleshooting

The size of a valve is defined by valve flow coefficient (C_v). This value can be determined from existing valve specifications or it can be defined by the user. CC-DCOLUMN conveniently provides the user with a control valve sizing tool. The C_v depends on the physical properties of the stream and on the pressure drop of the valve. Recommended steps in CC-DCOLUMN are:

Switch to steady state simulation mode

Specify the inlet stream of valve (set the flow rate to the maximum possible value)

Estimate the pressure drop

Run the sizing option

Verify the calculated variables (CC-DCOLUMN writes them into the parameter list of the CVAL automatically)

Calculate control valve only (that is, "run" it with "selected units" option)


Verify calculated valve position

Repeat these steps until you can accept the valve size

Note: *The value of $C_v = 9$ has been set in CC-DCOLUMN. If you are working with very small stream flow rates, then this valve size may be too large. In such a case, follow these rules: For a good range of control, the calculated flow coefficient (C_{vc} – actual valve flow coefficient ratio) should fall between 0.5 – 0.8. Because the sizing routine gives the C_{vc} value, then you can estimate the value of C_v , too. You can try finding optimum ranges for linear and equal percentage valves independently. The estimated C_v value should be entered **manually** into the CVAL dialog box, to replace the standard minimum value of 9.*

At the end of the sizing procedure (and possibly after entering the correct value of C_v by hand) you will want to get the initial state of the valve. Calculating the flowsheet in steady state is then the best way of getting initial parameters for future dynamic simulations.

Troubleshooting: An oversized control valve can be a source of oscillation in a controlled system. The following plots show examples of "valve chattering" caused by using an excessively large valve. The solution here is to decrease the valve size.

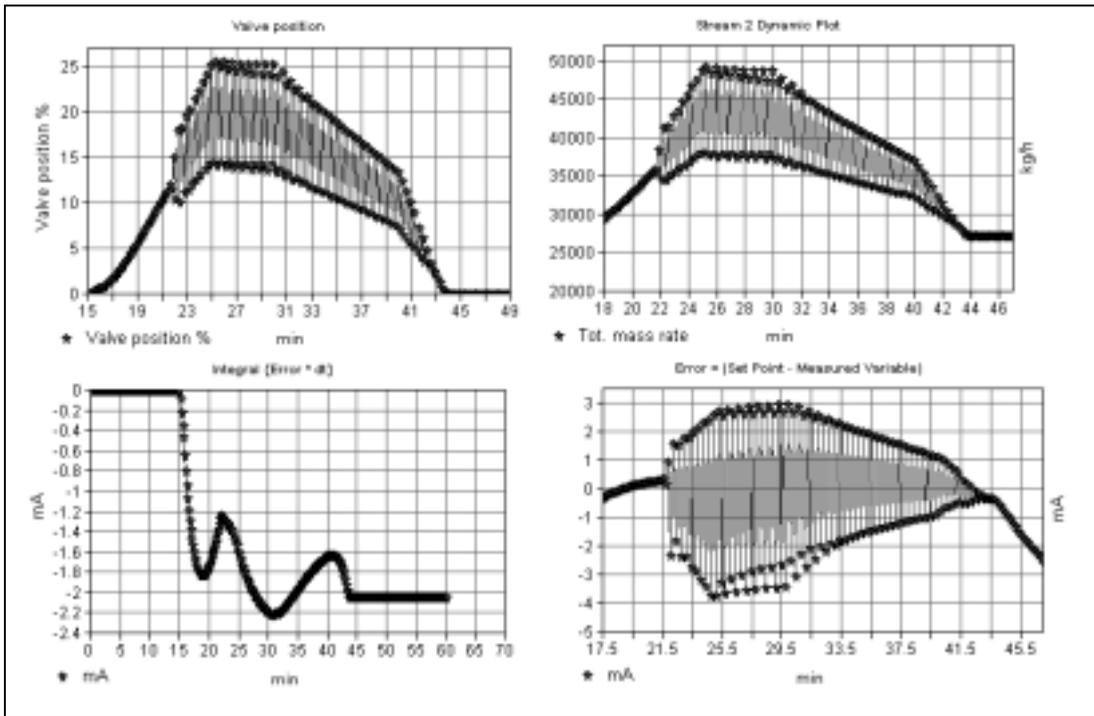


The PID Controller, PIDC


The PID Controller continuously measures the user specified variable, and based upon the specified set point for that variable, sends a controller output signal to a control valve.

WHAT IS A CONTROL LOOP?

A schematic diagram of one possible local control loop is shown below:

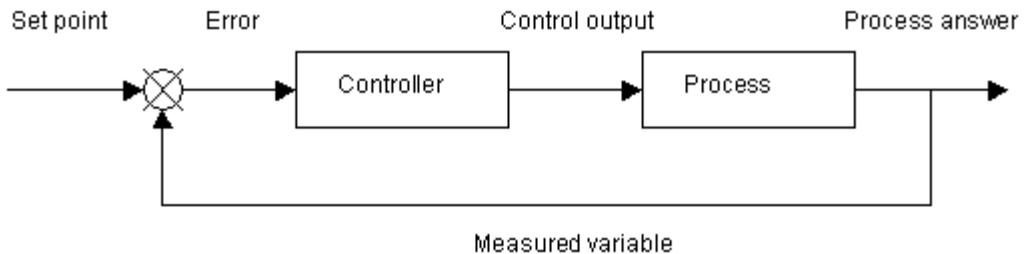

The structure of the loop using CC-DCOLUMN models is a little bit different:

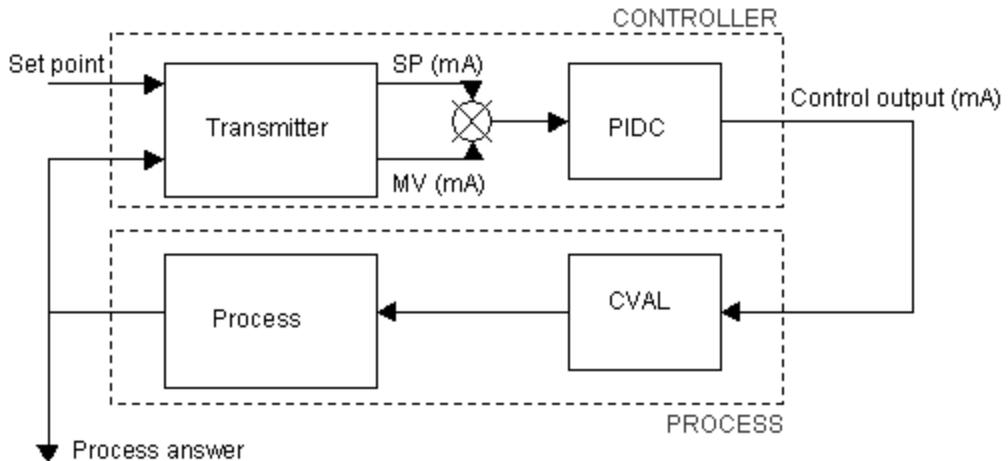

We would like to point out that the transmitter (or sensor) is a part of the CC-DCOLUMN PID controller module and the CC-DCOLUMN control valve is a part of the process. Any change in the setting of these units will require tuning of parameters of the PID algorithm. We have already discussed the control valve settings. The specification of the transmitter is related to the specification of the PID parameters in the PIDC model. From now on we will use the word “transmitter” and not the word “sensor” here, because we will be concentrating on the 4 – 20 mA signal produced by transmitter. The working method of a sensor is not important from this standpoint.

HOW TO SPECIFY A TRANSMITTER

You need to understand how the parameters of a transmitter in the PIDC dialog box should be specified. The measured variable definition and the range of the measured variable are involved. If problems in operation of any control loop occur, then we recommend inspecting the range definition first.

Notes: Any modification of range will influence the sensitivity of the controller, so tuning the PID parameters will be necessary. Apply the quadratic type equation for mass flow rate control, and the linear equation otherwise.

Linear

Quadratic

Controller / Sensor Function

Quadratic function

Variable Min 5000

Variable Max 50000

Ctrl input min 4

Ctrl input max 20

Range

Measured Object

Stream Equipment

ID number 1


Variable 6 Total mass rate

Component <None>

Variable unit 1 Mole/Mass

HOW TO SPECIFY ERROR FUNCTION

The control error is defined as the difference between the current value of the measured variable and the desired value (the set point). The desired value can be either a constant or a time dependant variable. A graphical explanation of the error function is given below:

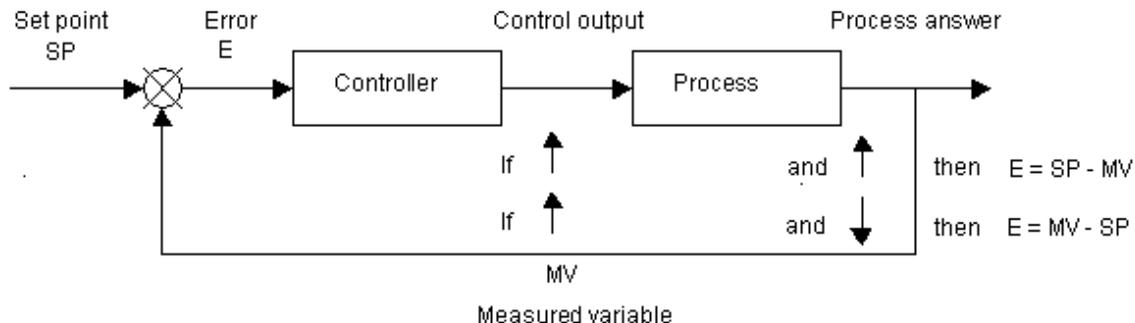

So, if the measured variable increases and the process response increases, then the error function is defined as the difference between the set point and the measured value (definition 1); If measured value increases and the process response decreases, then the error function is defined as the difference between the measured value and the set point (definition 2).

Note: The error function is calculated in milliamps (or volts).

Examples:

Assume you are measuring the temperature at the process outlet of a heat exchanger and regulating that temperature by controlling the heating agent flow rate at the utility inlet, and the control output is to close the NC valve causing the measured temperature to decrease (the answer decreases), then you should apply definition (1).

Assume you are regulating the liquid level in a vessel by controlling the liquid outflow from the bottom of the vessel. The control valve is located at the liquid outflow stream, and you measure the liquid level in the vessel. If the NC valve opens (control output increases), then the measured variable (the level as the process answer) decreases. Your error definition should be (2).

Now, you would like to control the level in the vessel, but you prefer to locate the valve at the feed inlet to the vessel; the NC valve opens (control output increases) and the measured variable (the level as the process answer) increases too. You would apply definition (1).

HOW TO SPECIFY PARAMETERS OF PID

You have to keep in mind the working sequence of a controller:

- It reads the measured value and transforms it to mA by the sensor / transmitter function
- It reads the set point value and transforms it to mA by the sensor / transmitter function
- It calculates the error using the error function selected by user

The calculation a PID algorithm means

calculate the P term as:

$$P = \frac{100}{PB} \cdot \text{error}$$

PB is the gain of the process defined by:

$$(\Delta(\text{process_answer}) / \Delta(\text{control_output})) \cdot 100$$

calculate the I term as:

$$I = \frac{100}{PB} \cdot \frac{1}{T_I} \cdot \int \text{error} \cdot dt$$

TI is the integral time constant in minutes (the time unit is minutes in the dynamic simulation)

calculate the D term as:

$$D = \frac{100}{PB} \cdot T_d \cdot \frac{d(\text{error})}{dt}$$

Td is the derivative time constant in minutes.

calculate the control output signal as

$$C_{\text{output}} = P + I + D + C_{\text{output}}^0$$

C_{output}^0 is the output at steady state, calculated at the initialization of the simulation.

- in the equations above P,I,D and the calculated control outputs have mA as the unit of measure

Example: calculations for a P I (proportional, integral) controller:

Control valve is NC, linear, range 4 – 20 mA

Transmitter of measured temperature is linear, range 20 – 80 C : 4 – 20 mA

10 % opening on the control valve decreases the temperature by 1.5 °C

What is the value of PB?

The controller output is 66% at the steady state working point (at the set point for example)

If the current temperature is higher than the set point by 0.1 °C, then

- what is the new control output, and
- what is the new valve position?

Solution:

$$\Delta(\text{control_output}) = (20 - 4) * 10 / 100 = 1.6 \text{ mA}$$

From the equation of transmitter we get

$$\Delta(\text{process_answer}) = 1.5 * (20 - 4) / (80 - 20) = 0.4 \text{ mA}$$

$$PB = 100 * 0.4 / 1.6 = 25$$

$$C_{\text{output}}^0 = (20 - 4) * 66 / 100 = 10.56 \text{ mA}$$

If the current temperature readout is higher than the set point by 0.1 C, then

$$\text{Error} = (MV - SP) = 0.1 * (20 - 4) / (80 - 20) = 0.0267 \text{ mA}$$

The current control output (with simplified I-term calculation) is:

$$C_{\text{output}}^0 = 100 / 25 * 0.0267 + 10.56 = 10.67 \text{ mA}$$

The new valve position is $10.67 * 100 / (20 - 4) = 66.67 \%$

In most situations, it is enough to apply the PI algorithm. The overall rules of PI tuning are:

- Estimate time constant as part of the time (typically, 60% – 65%) needed to move the system from a steady state point to another steady state (in the example above, this is the time for the experiment to reach final temperature after a change of cooling stream)
- If you observe slow response of the control loop then decrease the time constant

- If you experience oscillation during the simulation then increase the time constant

Guidelines for advanced parameter tuning can be found in handbooks for control engineers. It must be pointed out that a simulation performed in steady state can help you find several valuable parameters. It is also important to run steady state simulations to determine the initial state for the dynamic calculations.

SPECIAL PARAMETERS OF THE PIDC MODEL

You can find these parameters in the second tab of the PIDC dialog box. It is important to understand that CC-DCOLUMN PIDC is a model of an analog controller or, in other words, the model models an analog valve actuation. This kind of actuator does not keep the valve at its last position, but eventually moves it to its final position. This final position is fully closed (NC valve) or fully opened (NO valve).

The screenshot shows a dialog box titled "Controller Limit". It contains three radio button options: "None" (selected), "Relative to set point", and "Actual limit". To the right of these options are two input fields labeled "Upper limit" and "Lower limit". To the right of the entire dialog box is a section titled "Optional active time specs:" which contains two input fields labeled "Act. from time (min)" and "Act. to time (min)".

The special options can be used in batch or semi-batch technologies. If a controller goes into the limited area or it is out of active time then its output gets the minimal value and it will close or open very quickly.

This working mode can have a lot of benefits but it can also cause oscillation. The use of these parameters strongly depends on the technology and on the concept of control.

CONTROL STRUCTURES

We have discussed the schematic diagram of an easy control structure. This is the local control loop. The operators of a process control system should define the set point for any local loop. The set point can be constant over a period of time, or the operator can modify it from time to time.

Applying a constant set point in dynamic simulation is easy. It is enough to define the set point value in the dialog box of PID controller model.

<input checked="" type="checkbox"/> Activate controller	ID: 3
Set point	10000
Steady state output (P0)	6.71437
Proportional band (PB)	100
Integral time (Ti)	0.1 min
Derivative time (Td)	min
Control valve ID.	4 or
Cascade ID	Primary ID
Controller / Sensor Function	
1 Quadratic function	
Variable Min	5000
Variable Max	50000
Ctrl input min	4
Ctrl input max	20
Error Definition	
<input type="radio"/> Error = X - Xset (C,P,L)	
<input checked="" type="radio"/> Error = Xset - X (H,F)	
Measured Object	
<input checked="" type="radio"/> Stream	ID number 1
<input type="radio"/> Equipment	
Variable	6 Total mass rate
Component	<None>
Variable unit	1 Mole/Mass

WHAT IS THE LOCATION OF THE PID CONTROLLER IN THE FLOWSHEET

The first rule in CC-DCOLUMN is that the PID controller is a unit operation and it should be connected to other unit operations with process streams. The second important rule is that the layout of the control loop should always be carefully analyzed. You have to consider both location of the control valve and the location of the PID controller.

In most cases, you insert the controller and the control valve into an existing flowsheet. Therefore, you need to analyze the flowsheet itself. Check for the following points:

- What are the practical rules of control engineering
- Where is the measured variable (is it a stream, or is it a unit operation variable)
- Where is the adjusted point (location of control valve in the flowsheet)
- What unit operations are between the adjusted and measured points
- What is the actual and / or possible calculation sequence
- What is the time step of the dynamic simulation


The selection of location is easy if the controlled variable is the flow rate of a process stream. You just insert the controller into the appropriate stream and this stream becomes the inlet stream of the controller. The location of the control valve can be before or after the controller.



In all other situations, you should take into account that the measured object is defined in the control model. Therefore, you are free to locate the controller anywhere in the flowsheet. For practical reasons, it is the best to locate controller and control valve together on the same stream. So, under optimal conditions, you would locate the controller at the stream where the control valve has been placed to adjust the process.

The intention of the examples of this manual is to demonstrate good schemes for the control systems of distillation columns. You can follow this logic when you apply more powerful control structures than a local loop.

In the next example you will see three different solutions for the control of column pressure. All of them work:

- The locations of the control elements resemble the classical way of thinking in the first solution.
- The second solution follows the logic described above as “use controller and control valve together in the same stream”.
- In the last solution, we made a little change in the sequence of unit operations, but the solution handles the calculation sequence (unit 1, unit 2, unit 3, ...) much better than two preceding solutions.

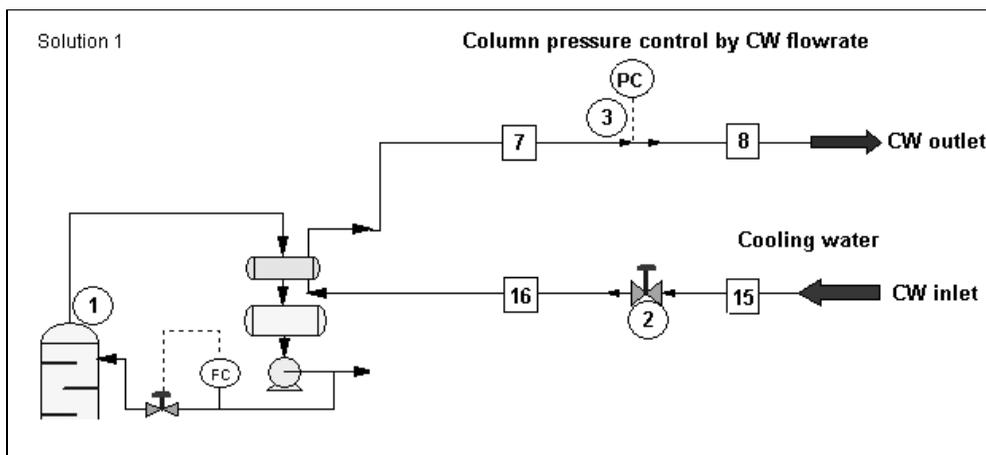

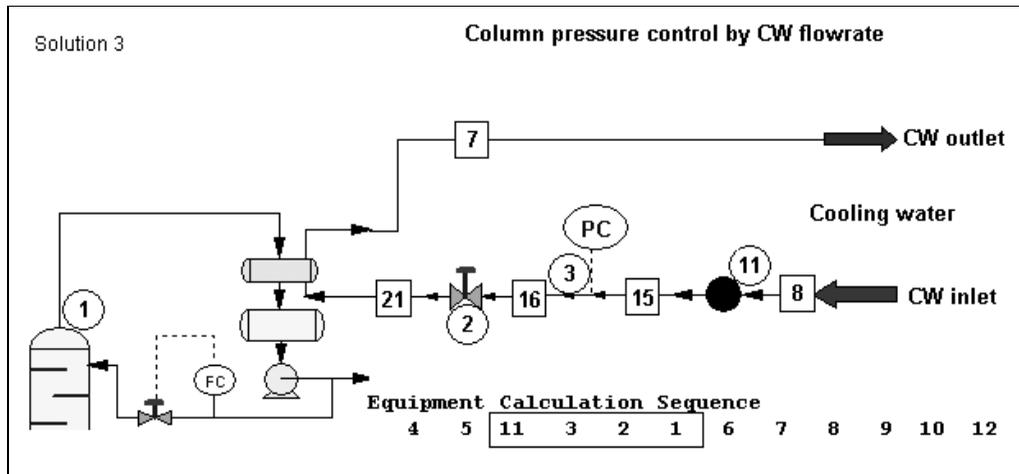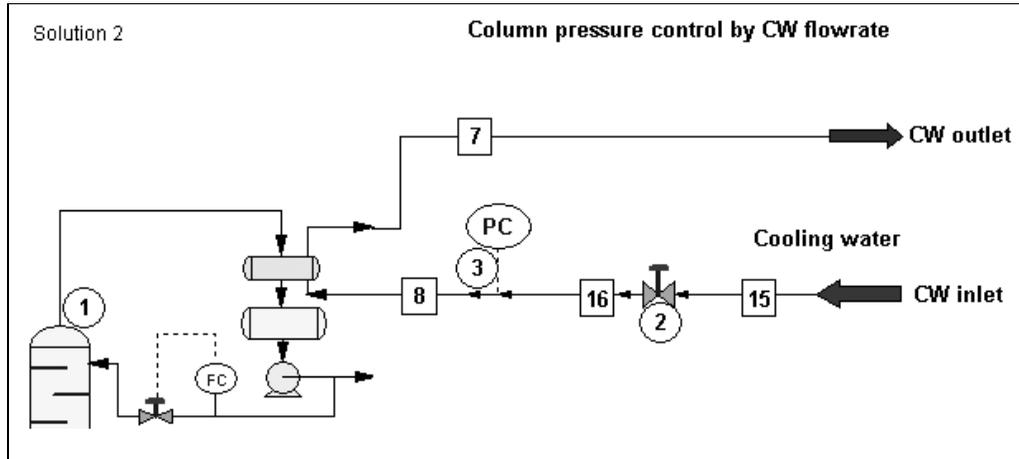

CC-DCOLUMN provides complex control structures as follows:

- Cascade control system
- Set point tracking control system
- Set point control system


HOW TO USE CASCADE CONTROL SYSTEM

The PIDC model of CC-DCOLUMN includes all parameters needed for a cascade control structure. We will explain the parameters by example of a typical control solution.

The picture below shows a section of this technology. The objective is to maintain the temperature of a tray in the bottom section of a distillation column when the concentration of the feed changes.

We have defined a pseudo side stream [14]. This stream has nearly zero mass flowrate but it transfers the temperature, pressure and concentration data of the tray to this dummy stream. Primary controller [9] has been inserted into this stream. The measured variable is the temperature of the stream, which is equal to the tray temperature.

The adjusted variable is the set point of the slave controller [16]. We then manipulate the steam flow rate of the reboiler [15] by adjusting the slave controller set point.

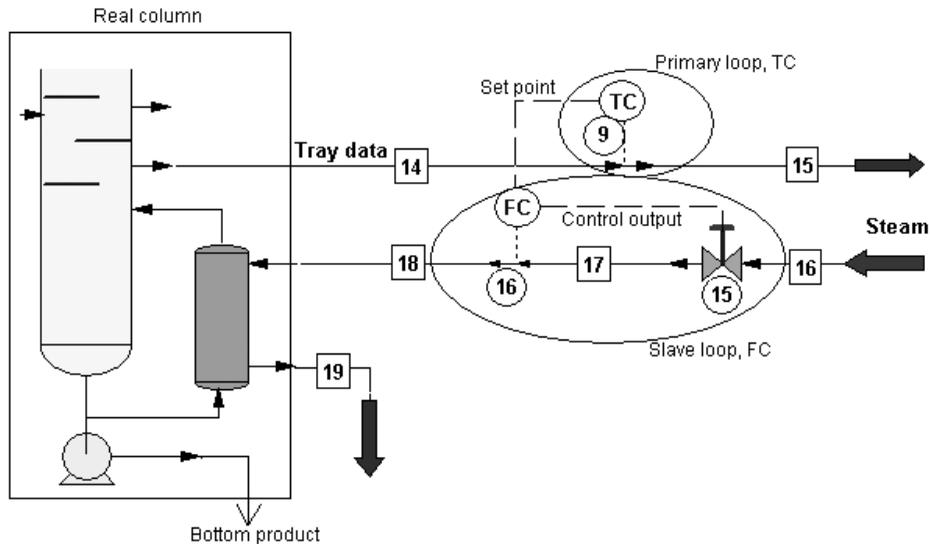

The CC-DCOLUMN dialog box defines the relationships between the units.



For the primary loop the only special definition is the slave identification:

<input checked="" type="checkbox"/> Activate controller	ID: 9
Set point	137
Steady state output (P0)	8.18286
Proportional band (PB)	250
Integral time (Ti)	25 min
Derivative time (Td)	min
Control valve ID	or
Cascade ID	16 Primary ID
Identify the slave	
Measured Object	
<input checked="" type="radio"/> Stream	ID number 14
<input type="radio"/> Equipment	
Variable	1 Temperature
Component	<None>
Variable unit	2 Temperature
Controller / Sensor Function	0 Linear function
Variable Min	120
Variable Max	160
Ctrl input min	4
Ctrl input max	20
Error Definition:	
<input type="radio"/> Error = X - Xset (C,P,L)	
<input checked="" type="radio"/> Error = Xset - X (H,F)	

For the slave loop, the only special definition is the master or primary loop identification:


<input checked="" type="checkbox"/> Activate controller	ID: 16
Set point	10300
Steady state output (P0)	15.5955
Proportional band (PB)	250
Integral time (Ti)	0.25 min
Derivative time (Td)	min
Control valve ID	15 or
Cascade ID	Primary ID 9
Identify the master	
Measured Object	
<input checked="" type="radio"/> Stream	ID number 17
<input type="radio"/> Equipment	
Variable	6 Total mass rate
Component	<None>
Variable unit	1 Mole/Mass
Controller / Sensor Function	1 Quadratic function
Variable Min	8000
Variable Max	15000
Ctrl input min	4
Ctrl input max	20
Error Definition:	
<input type="radio"/> Error = X - Xset (C,P,L)	
<input checked="" type="radio"/> Error = Xset - X (H,F)	

The units mutually communicate with analog signal expressed in milliamperes. The actual temperature and mass flowrate profiles can be seen below:

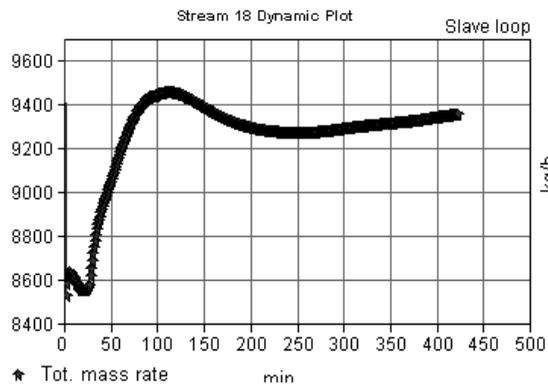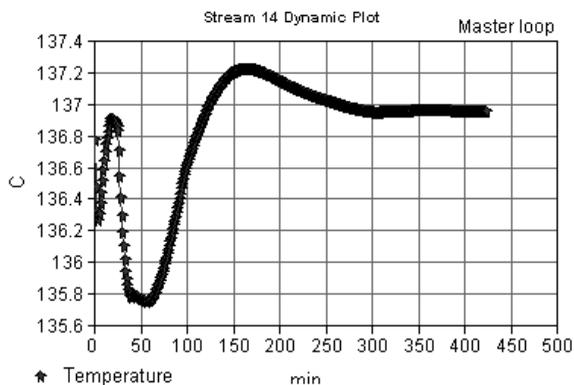

HOW TO DEFINE A SET POINT TRACKING SYSTEM

Using the RAMP model of CC-DCOLUMN, you can define time dependent profiles for any variable in the flowsheet. A RAMP can be used to change the set point of a controller. The following simple example demonstrates position setting at the valve:

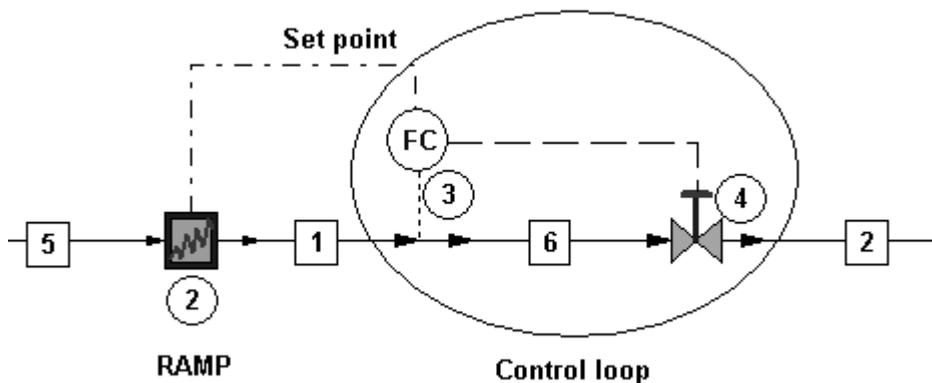

The RAMP model has the following parameters in mode 0 (Use the table below):

Type

Equipment ID number Variable


Stream Variable units

Time (min)	Value
<input type="text"/>	<input type="text" value="10000"/>
<input type="text" value="10"/>	<input type="text" value="23000"/>
<input type="text" value="15"/>	<input type="text" value="23000"/>
<input type="text" value="25"/>	<input type="text" value="43000"/>
<input type="text" value="30"/>	<input type="text" value="43000"/>
<input type="text" value="40"/>	<input type="text" value="35000"/>
<input type="text" value="50"/>	<input type="text" value="12000"/>
<input type="text" value="60"/>	<input type="text" value="12000"/>

HOW TO DEFINE A SET POINT CONTROL SYSTEM

Set point control can be achieved by inserting a new unit into the control structure to calculate the real time set points using online process data. In the manual, we will demonstrate a simple example only. Advanced users can change the calculator model with Excel unit operation or with special, user-written calculation algorithms.

This example uses a batch technology. We used the set point controller of the local control loop to control the reflux flowrate. A pictorial of a section of the technology follows:

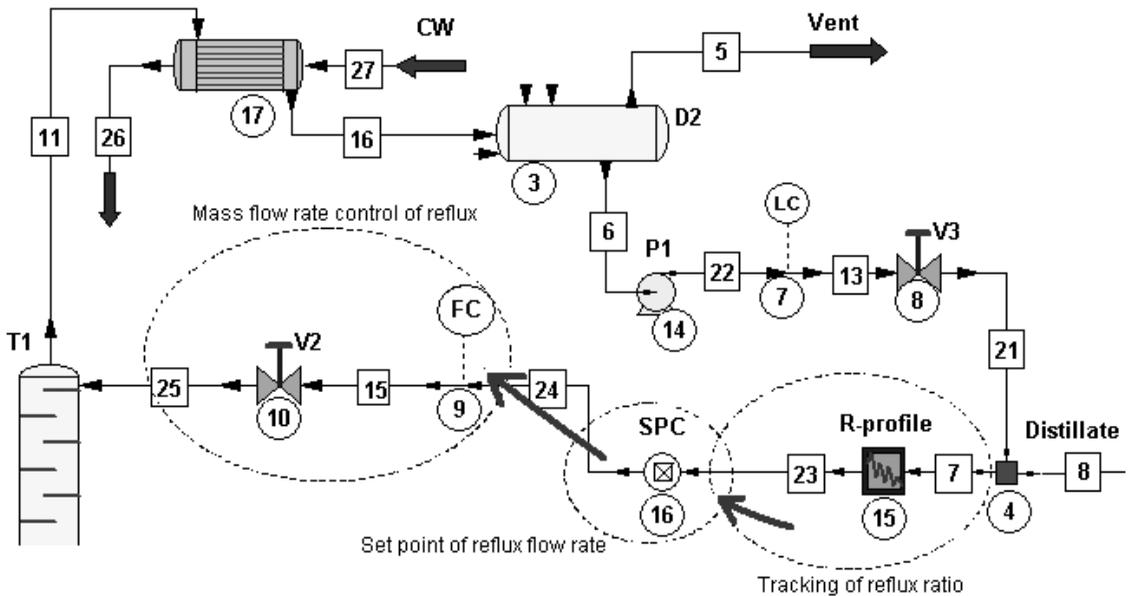

The reflux ratio versus time profile is given. R-profile (RAMP) model keeps track of the profile and passes the actual reflux ratio to the SPC model (Set Point Controller), which produces an actual set point for FC (local flowrate) controller. The red arrows show the direction of information transfer. There is no information conversion to mA and back in this case.

The setting of RAMP follows:

<input checked="" type="radio"/> Equipment	ID number	16	Variable	9 Scale
<input type="radio"/> Stream			Variable units	Internal unit

The SPC model calculates the actual reflux flow rate = set point value as desired, according to the equation:

$$R = Rratio * D \quad \{\text{Adjusted variable} = \text{Scale factor} * \text{Measured variable}\}$$

where R and D are reflux and distillate flow rates, respectively.

The SPC model reads the real time data of the distillate flow rate; (this is the stream 8), calculates the real time set point and writes this into the parameter table of the FC model. Eventually, FC controller (PIDC) modifies the reflux flow rate. It is also possible to calculate on-line value of reflux ratio – see the trend charts.

The SPC was modeled using the CC-DCOLUMN CONT (Steady State Controller). The data entered into the dialog box of CONT are:

Controller Mode: ID: 16


Set This variable: ID number Variable

Equal to this: Stream ID number Variable
 Equipment Scale Component

Arithmetic Operator: Real time value of distillate flow rate
 Stream ID number Variable
 Equipment Scale Component

Real time value of reflux ratio

Below are several trend charts demonstrating the response of the control system, which appears to be satisfactory.

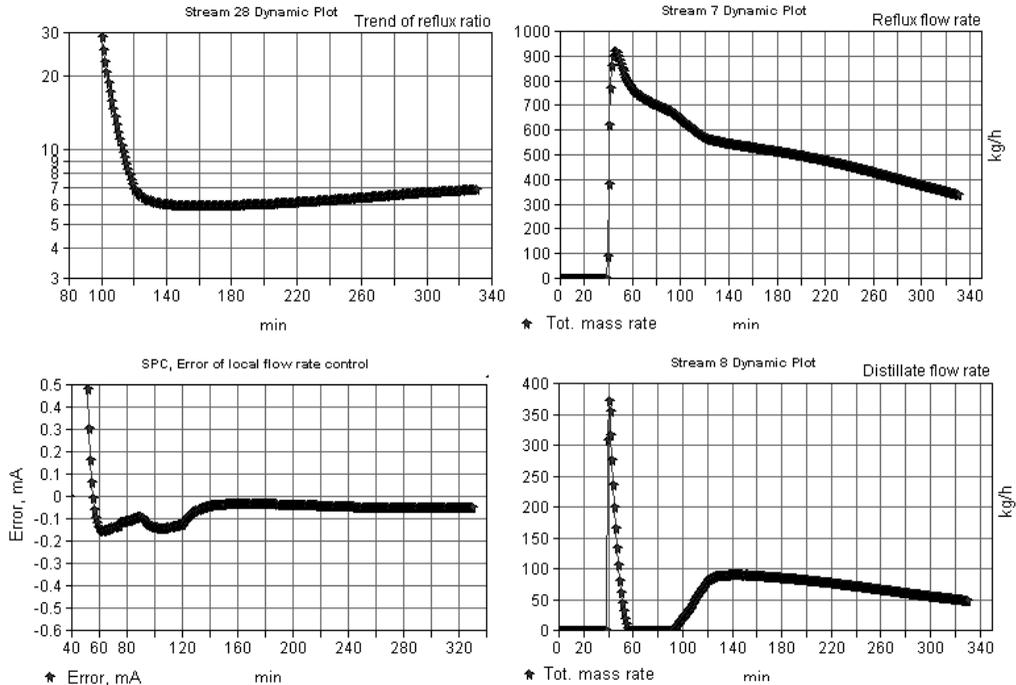

Using the error chart, we can calculate the maximum error of the reflux flow control. This is 14 kg/h and the overall difference is 5 kg/h. It is also necessary to point out that the column was under startup conditions for 30 minutes at total reflux, and the actual reflux ratio profile was activated after startup finished.

APPLICATIONS OF STEADY STATE MODELS IN DYNAMIC SIMULATION

Earlier, we demonstrated that the stream mixer (MIXE) and the stream divider (DIVI) could be applied as steady state unit operations in dynamic mode. Theoretically, these units do not have any volume or dynamic properties. They are simulated with simple mass and heat balance equations. The basis of this philosophy is the fact that the space of the processes of mixing and / or of stream distribution is small. The residence time and time constant of these unit operations are very small compared to the time step of dynamic simulation, which is in turn much smaller than time constant of a distillation tower for example. Therefore, we can neglect the diagnosis of these units. The steady state model of the valve model (VALV) simulates pressure drop only and it is similar to MIXE and DIVI in this respect. You can make similar assumptions for liquid pump (PUMP) or for gas compressor / expander (COMP / EXPN).


In many cases, you can accept the simple assumption described above for heat exchanger (HTXR) and for pipes (PIPE). In such cases, you can neglect the influence of unit's dynamics on the process dynamics because it can be in fact small, or because you can assume that the control of temperature (heat exchanger) is perfect.

Fundamental Rule

Never manipulate intensive variables of a stream directly. Use a one-sided heat exchanger with outlet temperature definition to set a stream temperature. Use one of the VALV, PUMP, COMP or EXPN models to manipulate a stream pressure. Try to use pre-defined streams or separate component streams combined with mixer or component separator model for manipulation of concentration. You can combine these solutions in combination with a RAMP model as well.

HOW TO USE THE HTXR MODEL

Discussed here is a more complicated system using HTXR as a simple temperature setting device. The example is a separated condenser system for a distillation column. It provides total condensation.

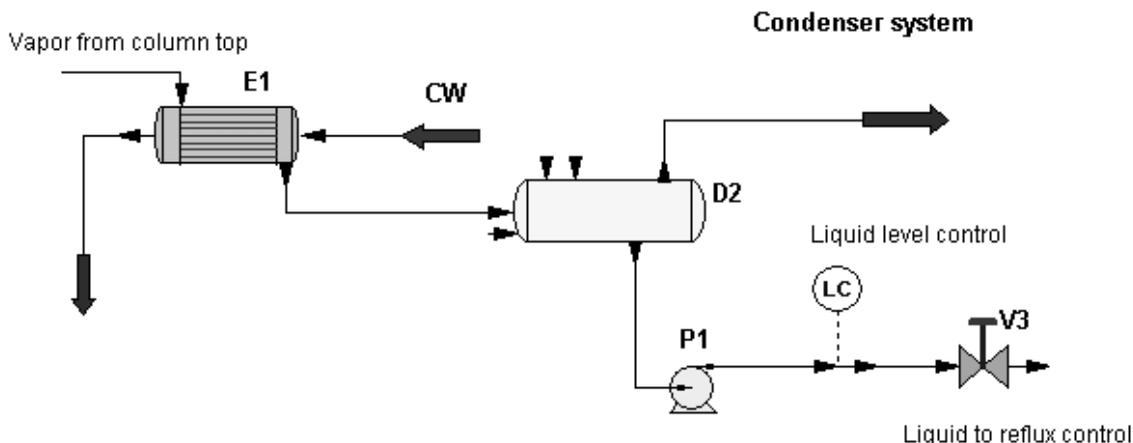

Solution 1.

Specify the heat transfer area and heat transfer coefficient of unit E1. This is a good approach because it means using the rating mode for the heat exchanger but the heat transfer coefficient is kept constant.

Solution 2.

Use the "simulation mode" of CC-THERM to re-calculate the value of the heat transfer coefficient. This is a rating mode also and uses the exchanger geometry to determine the outlet stream conditions.

Solution 1
It does not use CCTHERM


Calculation Modes:	
Simulation mode:	0 Enter specifications (CHEMCAD simulation)
Heat transfer coeff. and area specification:	
Heat transfer coeff. (U)	400 kcal/h-m ² -C
Area/shell	4 m ²

Solution 2
It needs CCTHERM

Calculation Modes:	
Simulation mode:	1 Enter geometry (CCTHERM simulation)
Press the OK button to proceed to CCTHERM data entry, or change the simulation mode back to CHEMCAD simulation	

Both solutions use steady state modules for the heat exchanger.

For advanced use of CC-DCOLUMN, we present a quasi-dynamic simulation of heat exchanger:

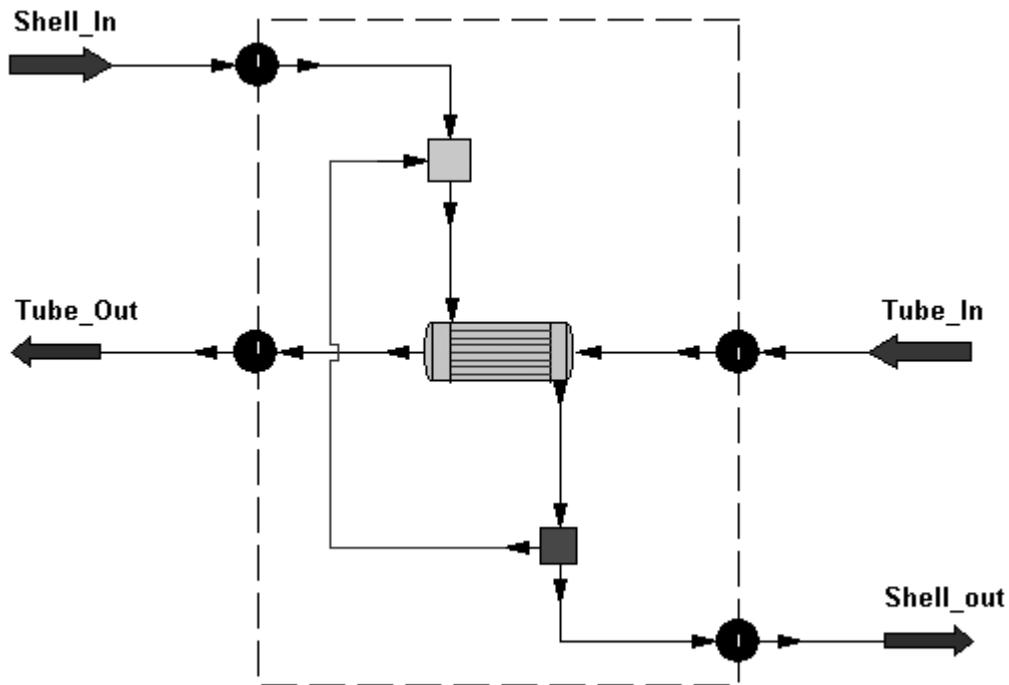


The dashed box covers the dynamic model of the heat exchanger. Each of the stream reference (SREF) unit operations copies its inlet to its outlet using a scale factor. The scale factor is the time step (unit is hours) for the inlet points and reciprocal of time step for the outlet points. The shell side at the start of calculation defines the initial state of the internal recycle stream: flow rate = mass (volume * density), T, P, and concentration have values of stream Shell_In at time zero. This simple model can take into account the dynamic properties of the shell side.





HOW TO USE THE PIPE MODEL

To calculate the piping pressure losses between equipment, you normally use the PIPE model. You can assume that a plug flow model can describe the flow inside a pipe. This assumption results in a well-defined residence time. If you cannot neglect the effect of this time delay, then you can apply the following solution.

Flowsheet

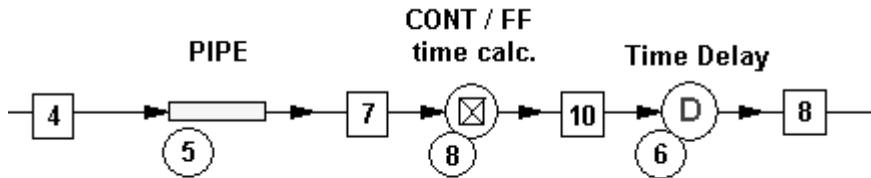

Solution

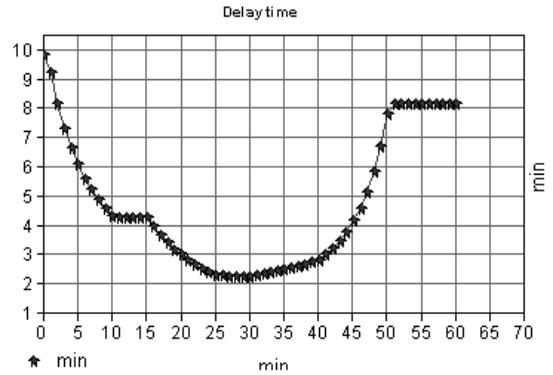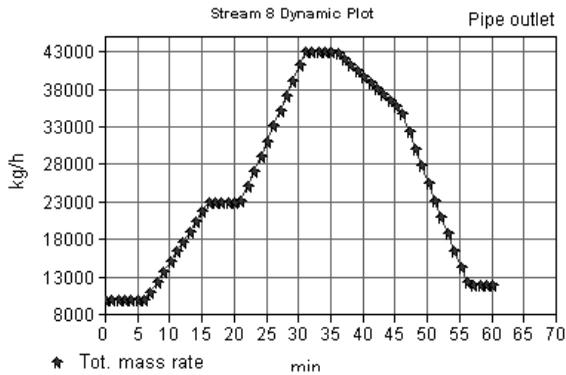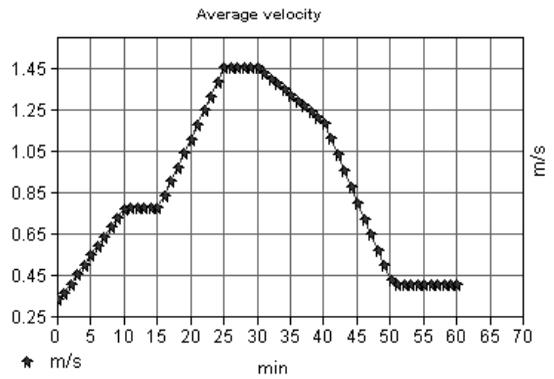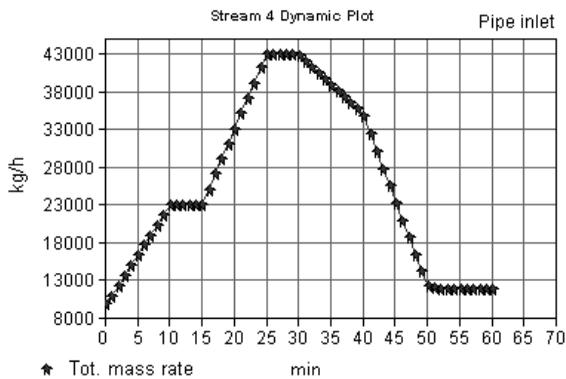

Tables

Time delay (DLAY) unit operation gets calculated data from the control model.

		ID: 6
Delay time	<input type="text" value="9.84014"/>	minutes

The control model uses the equation as follows:

$$\text{Time} = (\text{Pipe_length}) / (\text{Linear_velocity} * 60) \quad [\text{min}]$$

Controller Mode: <input type="text" value="Feed-forward"/>		ID: 8
Set This variable		
<input type="text" value="UnitOp"/>	ID number <input type="text" value="6"/>	Variable <input type="text" value="2 Delay time (min)"/>
Equal to this		
<input type="radio"/> Stream	ID number <input type="text" value="5"/>	Variable <input type="text" value="5 Pipe Length"/>
<input checked="" type="radio"/> Equipment	Scale <input type="text"/>	Component <input type="text" value="<None>"/>
Arithmetic Operator	<input type="text" value="4 Divide"/>	
<input type="radio"/> Stream	ID number <input type="text" value="5"/>	Variable <input type="text" value="17 Velocity/sec"/>
<input checked="" type="radio"/> Equipment	Scale <input type="text" value="60"/>	Component <input type="text" value="<None>"/>

DYNAMIC SIMULATION OF A DISTILLATION COLUMN

The SCDS, TPLS and TOWR distillation models can be used to perform dynamic distillation simulations. They can be used to analyze dynamic responses of distillation columns without any control system around it, or you can use controllers. A wide range analysis, ranging from the very simple to the very complex can be performed. To run the distillation models in dynamics, you need a license for CC-DCOLUMN.

Since the dynamic distillation menu is common to the three models available (SCDS, TPLS, TOWR), however all examples in this manual will be run using the SCDS distillation model.

WHICH ICON OF SCDS SHOULD YOU USE IN A DYNAMIC SIMULATION?

The icons of CHEMCAD unit operations include three different things, these are


- the symbol; this is a visualization of the equipment
- the model; this is mathematical algorithm used for the calculation of that equipment

- the link; this makes the connection between the symbol and model; in practical terms, the product of linking is the icon.

According to this concept, you can theoretically use any of CC-DCOLUMN column icons (and their unit operations) in a dynamic simulation. Practically, it is better to select the specialized Dynamic Column SCDS icon if your intention is to connect the distillation unit to other unit operations. This is because, not all icons have enough connection points (inlet / outlet points on the symbol).

Therefore, the following SCDS icon is recommended:


Prepared icon for dynamic simulation

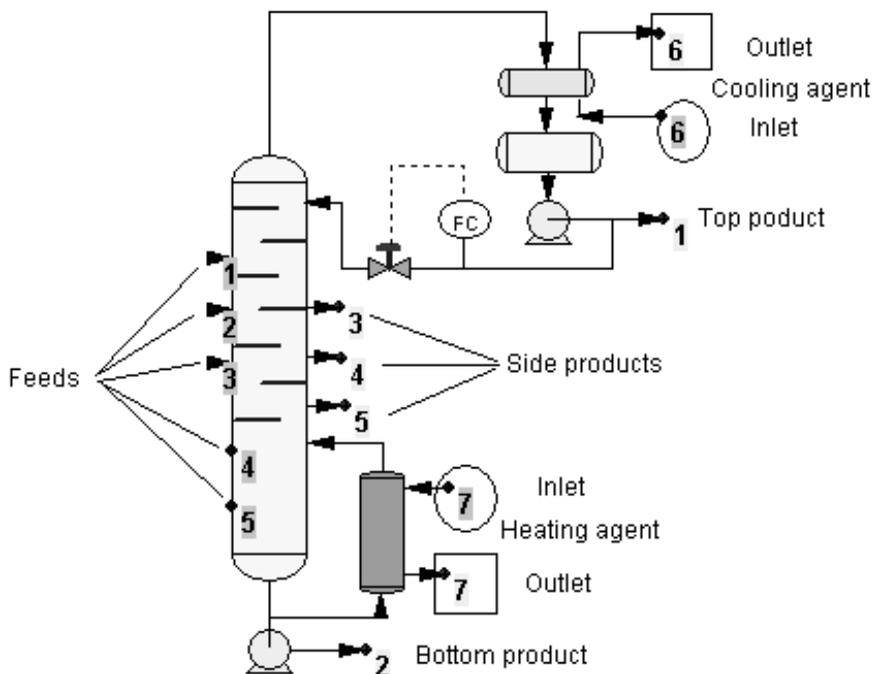


This icon involves built-in control loops and built-in dynamic vessels (both for condenser and/or reboiler systems).

The next icon does not look as attractive, but it can be used as well, as it includes enough connection points.

Use of an overall icon for dynamic simulation

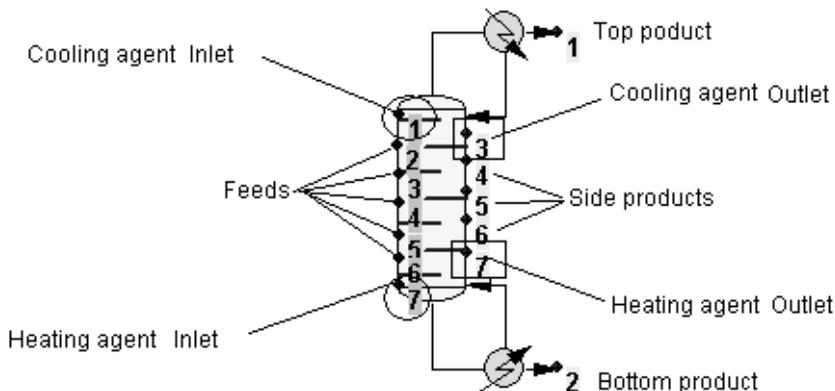

You can simulate systems with separated cooling/heating, too. The next picture shows this concept and a possible solution for a packed batch distillation column.

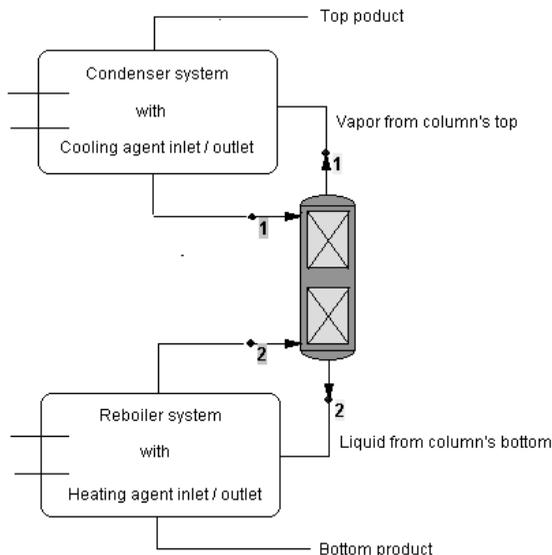

In special cases you might want to draw your own icon with CHEMCAD's built-in symbol builder.

COLUMN DYNAMICS WITHOUT ANY CONTROLLER

Let's start studying techniques of dynamic column calculations with a typical distillation problem. Let's choose a situation where the feed of a well-working column changes. This job is installed together with other examples during the installation of the CHEMCAD Suite under \CCDATA\Examples\Dynamics. Job name is FEEDCHANGEDCOLM. It contains the starting data and information.

The components and thermodynamic calculation methods follow:

COMPONENTS

	ID #	Name	
	1	3	Ethane
	2	4	Propane
	3	5	I-Butane
	4	6	N-Butane
	5	7	I-Pentane
	6	8	N-Pentane
	7	10	N-Hexane
	8	11	N-Heptane
	9	12	N-Octane

THERMODYNAMICS

K-value model : SRK
 Enthalpy model : SRK
 Liquid density : Library

The feed changes at the start of the study from Feed_1 to Feed_2 as:

Stream Name	Feed_1	Feed_2
Temp C	50.0000	50.0000
Pres bar	15.0000	15.0000
Total kg/h	19800.0000	20000.0000

Component	Kg/hr	Kg/hr
Ethane	1200	1473
Propane	3400	3156.4
I-Butane	4000	3787.7
N-Butane	4100	4839.8
I-Pentane	2500	2314.7
N-Pentane	2000	1893.8
N-Hexane	1300	1262.6
N-Heptane	800	841.7
N-Octane	500	430.3

The column is in steady state before the change of feed and it works properly with the following parameters:

```


No. of stages           30
1st feed stage         15
Condenser type         1  Partial condenser
Select condenser mode: 1  Specified by reflux ratio
Condenser spec.        3.0000Rr = R/D
Reboiler mode          3  Specified by bottom temperature
Reboiler spec.        157.0000 T_bottom, C
Top pressure           15.0000 P_top, bar
    
```

You can implement the change of feeds with a simple use of RAMP modules with the following parameters:

```


-----
RAMPRAMP
  on on
  Feed_1Feed_2Remarks
-----
Stream ID                1                2
Variable No.             6                6Mass flow rate
Variable unit            1                1 Mole / Mass
-----
TimeValueValue
(min) (kg/h) (kg/h)
-----
0.0    19800.00    1.0000e-06
          0.001  1.0000e-06    20000.00
          300.000  1.0000e-06    20000.00
-----
    
```

You would calculate the steady state values first. The following picture presents the important data before the change of feed. This is the initial state of the system.

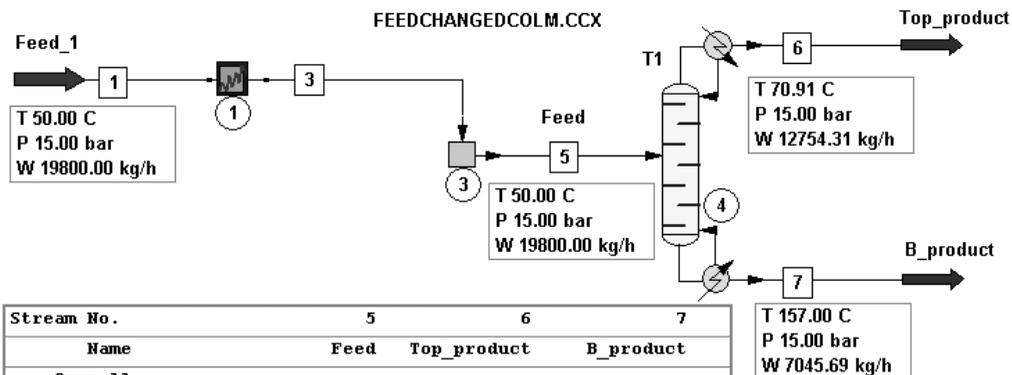

It is good to know the final state of the column (or, in other words: to know the answer to the question) before you start the dynamic simulation. Which parameters should be used for this calculation? If you keep the original operating parameters, that is, R/D and bottom temperature, then the question is: what is the capacity of the column?

This is the answer:

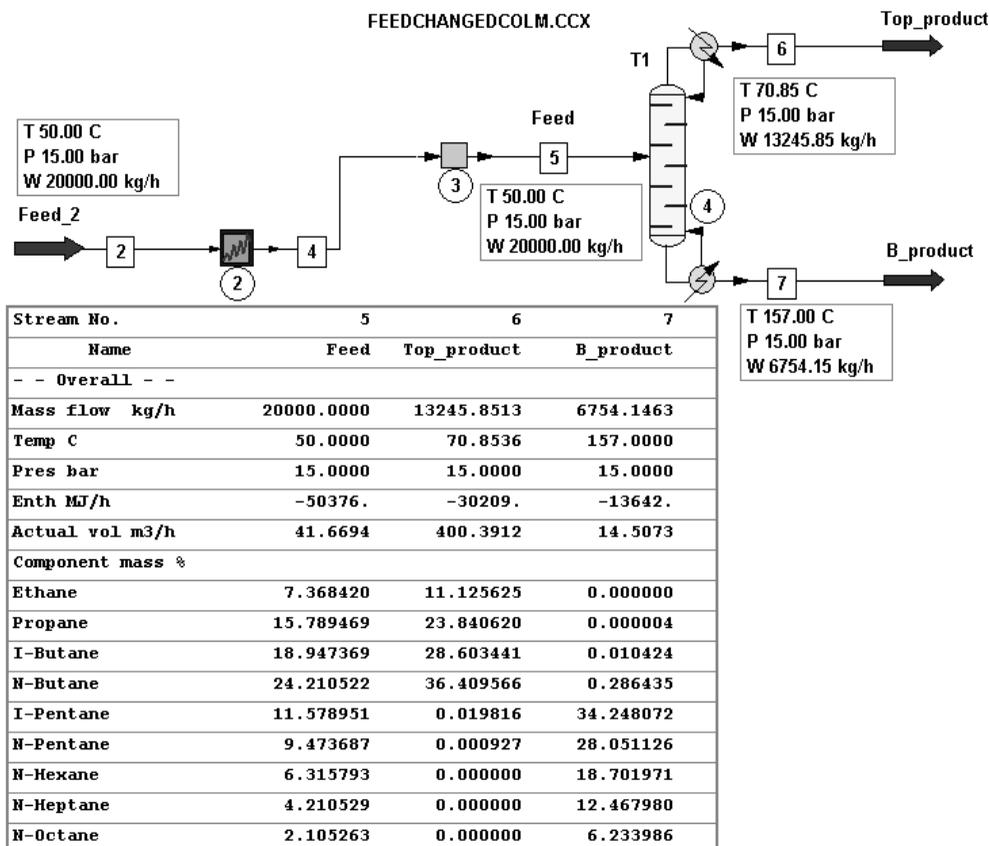

The new feed contains new component concentrations and produces new product streams. From the standpoint of the required separation, you should check the key components only:

	Before (wt. %)	After (wt. %)
N - Pentane (top)	0.017871	0.000927
I - Butane (bottom)	0.002873	0.010424

The results reflect the change of component concentration in the feed and anticipate enough capacity but still do not necessarily provide an adequate picture of the column operation. The reason is the specified simulation parameters are not for column operations. Operating parameters, R/D and bottom temperature, are typical design parameters for steady state, but more appropriate operating selections for the initial condition of the column would be the real operating parameters, such as heat duty of reboiler and heat duty of condenser.

According to the first steady state calculation these values would be:

Heat duty of condenser 12515.9 MJ/h

Heat duty of reboiler 18942 MJ/h

Now, you can repeat the steady state calculation after the feed change keeping operating parameters as given above at constant values.

The main streams are now:

Stream No.	5	6	7
Name	Feed	Top_product	B_product
- - Overall - -			
Mass flow kg/h	20000.0000	13008.1991	6991.7937
Temp C	50.0000	70.3335	153.4132
Pres bar	15.0000	15.0000	15.0000
Enth MJ/h	-50376.	-29717.	-14232.
Actual vol m3/h	41.6694	393.9026	15.3340
Component mass %			
Ethane	7.368420	11.328880	0.000000
Propane	15.789469	24.276155	0.000025
I-Butane	18.947370	29.073516	0.107718
N-Butane	24.210523	35.315049	3.550608
I-Pentane	11.578952	0.005958	33.110449
N-Pentane	9.473686	0.000439	27.098614
N-Hexane	6.315792	0.000000	18.066294
N-Heptane	4.210529	0.000000	12.044196
N-Octane	2.105263	0.000000	6.022095

Examining the bottom product, you can see that without any modification the column cannot produce acceptable purity at the bottom anymore; temperature decreased 3.5 C, and the concentration of I-Butane increased to 0.11 w%.

You can study this behavior of the column using the dynamic column model of CC-DCOLUMN. Select this option in the "Run / Convergence" sub-menu.

Calculation sequence:
 Steady State/Dynamics:

You need to use RAMP modules now:

Switch off Feed_1

Equipment ID number
 Stream

Mode:

Time (min)	Value
<input type="text"/>	<input type="text" value="19800"/>
<input type="text" value="0.001"/>	<input type="text" value="1e-006"/>
<input type="text" value="300"/>	<input type="text" value="1e-007"/>

Switch on Feed_2

Equipment ID number
 Stream

Mode:

Time (min)	Value
<input type="text"/>	<input type="text" value="1e-006"/>
<input type="text" value="0.001"/>	<input type="text" value="20000"/>
<input type="text" value="300"/>	<input type="text" value="20000"/>

In dynamic simulation, you normally do not want to use the condenser and reboiler specifications in the same way as in steady state. Therefore, we selected bottom mass flow rate and reflux flow rate for the column specs.

Condenser type

No. of stages

Feed stages:
 Feed tray for stream 5

Simulation model

Condenser mode:	<input type="text" value="15 Reflux mass flowrate"/> <input type="button" value="v"/>	Specification	<input type="text" value="41783.4"/> kg/h
Select reboiler mode:	<input type="text" value="10 Bottom mass flowrate"/> <input type="button" value="v"/>	Specification	<input type="text" value="7081.6"/> kg/h

General estimates

Dist. rate kmol/h
 Reflux rate kmol/h

Temperature estimates

T top C
 T bottom C

For the first dynamic simulation use minimal settings. The meaning of “minimal settings” is:


Calculate a continuous process starting from steady state for the initial state.

Ignore the vapor holdup and specify constant liquid holdup in moles; specify all trays the same.

Do not calculate the condenser and reboiler system separately. Use the overall specifications for distillation column.

Record data of selected trays only and request on-line plotting of product concentration.

The picture below gives an overview of these settings.

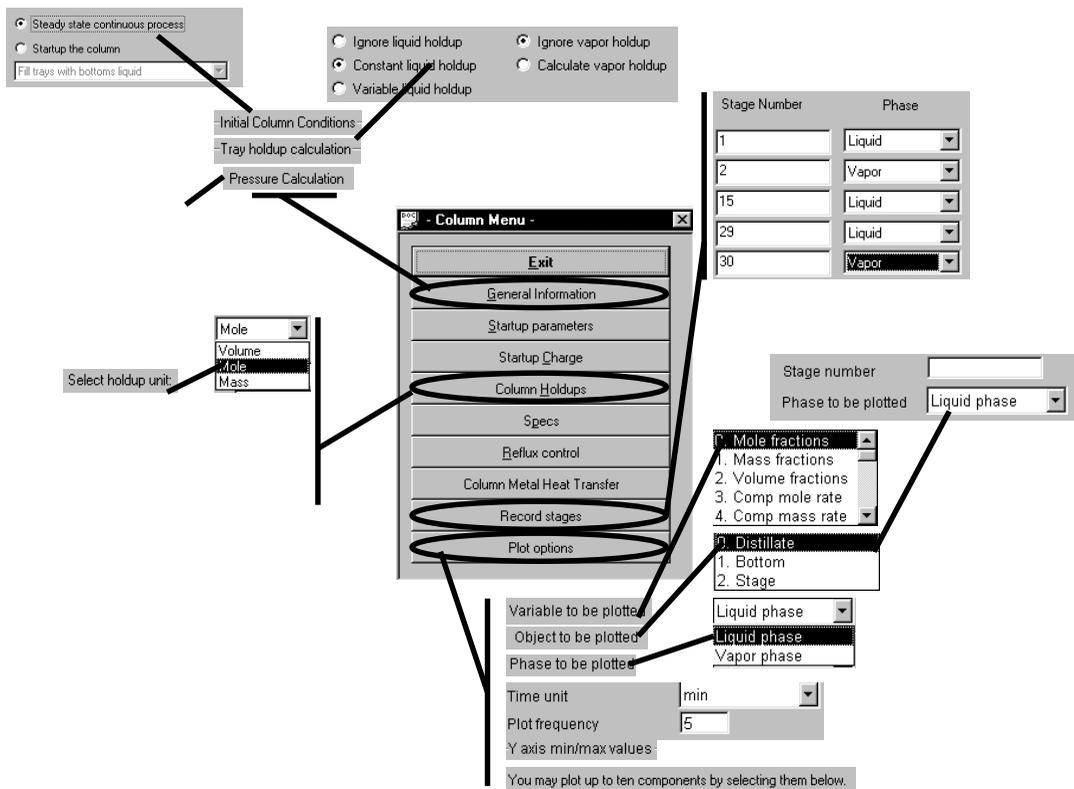

For the dynamic simulation, we should specify the time duration of the simulation and the time step size.

Operation Step 1

Time Run time: min. Step size: min.
 Stream Calc. time: min.
 Equipment

ID number: Variable: Units:

Component:

Stop Mode: Stop Value: Tolerance:

Number of operation steps:

- Dynamic Menu -

Exit

Set run time

Run from initial state

Run from current state

Restore to initial state

Record streams

Record unit operations

Record process

Save as initial state

Help

Typical start


Select streams from flowsheet

Or enter the stream ID's below:





ID	RunTimePlot	ID	Run
<input type="text" value="6"/>	<input type="checkbox"/>	<input type="text"/>	<input type="checkbox"/>
<input type="text" value="7"/>	<input type="checkbox"/>	<input type="text"/>	<input type="checkbox"/>

The following plot gives the I-Butane concentration in the bottom product when the bottom and reflux streams are kept constant.

Distil. Column 4, Bottom

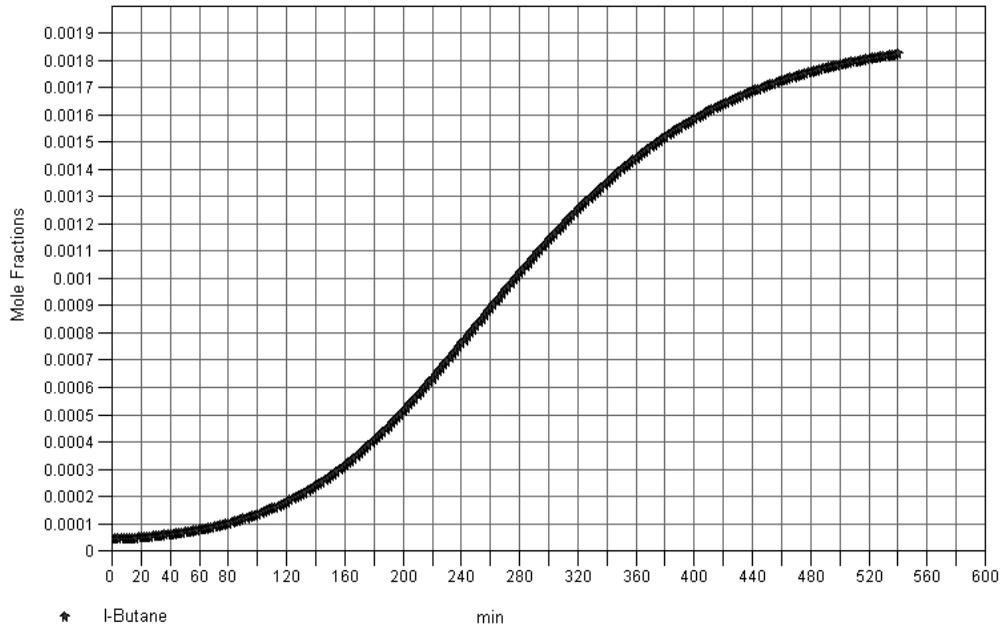


If you return to the original $R/D = 3$ and $T_{\text{bottom}} = 157$ °C parameters, and then repeat the dynamic simulation, you will get information about the operating parameters needed for the condenser and reboiler.

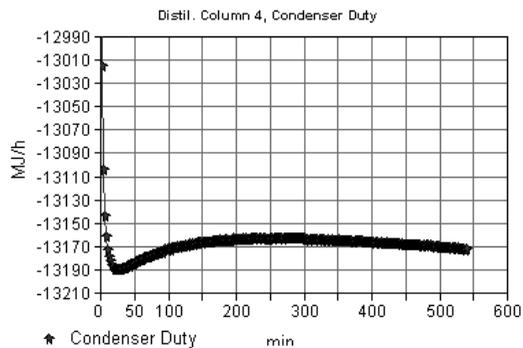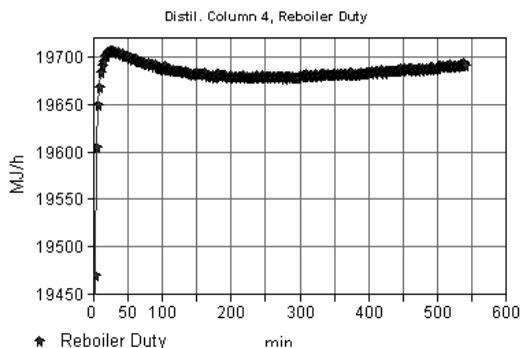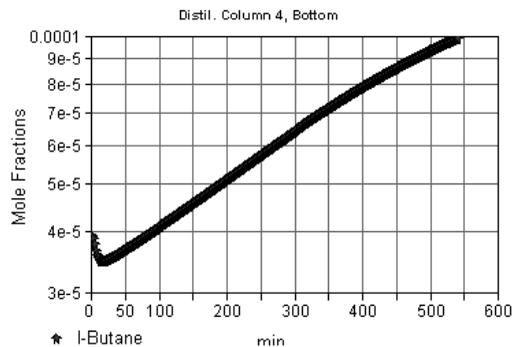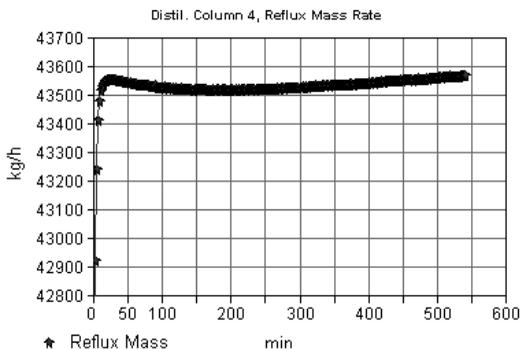

According to the chart, you can tell that good compensation of the noise of the feed requires fast response of the condenser and reboiler system, and it will result in rapid changes in the flow rate of the reflux stream. No real control equipment can do this. However, you have been able to determine an appropriate control strategy. It must be pointed out that this strategy produces an overshoot and a slow, asymptotic convergence later.

Let's compare the result of the converged dynamic simulation to the result of the steady state simulation. These can be found below and reflect a good equivalence to the result of steady state simulation (see second material balance of the example above). By running the calculation over a longer simulation period, you would observe smaller differences. Do not expect the results of both types of simulations to be 100% identical.

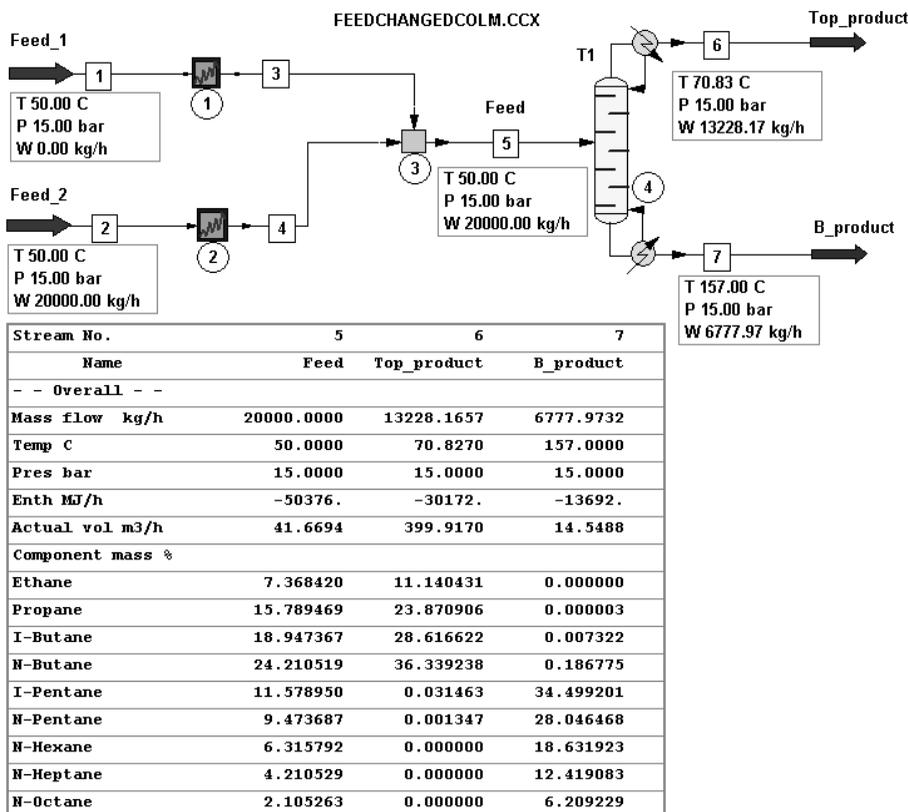

In the next step, we extend the dynamic column to represent a more realistic column. The dynamic column model can calculate holdup on each tray if the sizing data is given.

This calculation works for tray-columns only. For packed columns, we suggest entering the holdup profile. In such case, you should estimate the holdups; you can define a different holdup for each segment of the packed column if you like. This approach can be important when you use the mass transfer model for the calculation of the vapor-liquid component transfer and the segment sizes are different.

If you know tray sizes (that is, you are calculating an existing column), then you should enter the available data.

The normal sequence to specify tray sizes is as follows:

Select the "variable holdup" option in the "Initial Condition" menu.

- Open and close the "Column holdups" menu. (There is a hierarchy of specifications and a constant holdup will be overwritten with a holdup profile, the holdup profile will be overwritten with calculated holdup, etc. Therefore, you do not have to delete the "old" specifications. On the other hand, do not forget that the tray holdup calculation does not cover the holdup of condenser and reboiler. You can enter these values in the "Specs = special settings" menu and we will show an example of this later in the manual. For now, let's keep these values as constant.)
- Enter data into the table, which will appear on the screen.

If the work is for the design of a new column, then you should perform tray sizing of the column first, based on the data from the current column calculation. CC-DCOLUMN will display the size data automatically.

For the initial state conditions we get the following size data for sieve trays:

Equip. 4 Tray No. 4

Tray Loadings	Vapor		Liquid
	57933.023	kg/h	45178.718 kg/h
Density	36.459	kg/m3	465.603 kg/m3
Downcomer dimension,	Width m	Length m	Area m2
Side	0.251	1.535	0.262
Center	0.262	5.200	0.682
Off center	0.258	4.633	0.593
Avg. weir length m		8.769
Flow path length m		0.330
Flow path width m		8.836
Tray area, m2		5.309
Tray active area m2		2.918
% flood		75.490
Fractional entrainment		0.008
Aeration factor		0.685
Minimum (Weeping) vapor flow	kg/h	49830.489
Tray press loss, m		0.069
Tray press loss, bar		0.003
Downcomer backup m		0.139
Downcomer residence time, sec		6.154
Liquid holdup m3		0.304
Liquid holdup kg		141.508


Equip. 4 Tray No. 24

Tray Loadings		Vapor		Liquid
		82035.384 kg/h		89081.091 kg/h
Density		43.651 kg/m3		467.739 kg/m3
Downcomer dimension,		Width m	Length m	Area m2
	Side	0.314	1.695	0.365
	Center	0.374	5.200	0.972
	Off center	0.367	4.641	0.845
Avg. weir length	m		8.936
Flow path length	m		0.216
Flow path width	m		8.888
Tray area,	m2		5.309
Tray active area	m2		1.919
% flood			77.725
Fractional entrainment			0.005
Aeration factor			0.612
Minimum (Weeping) vapor flow	kg/h		72773.794
Tray press loss,	m		0.069
Tray press loss,	bar		0.003
Downcomer backup	m		0.148
Downcomer residence time,	sec		4.750
Liquid holdup	m3		0.342
Liquid holdup	kg		160.178

The sizing program calculates the total pressure drop as well:

Total column pressure drop = 0.087 bar

The new specification in the General Information menu is then:

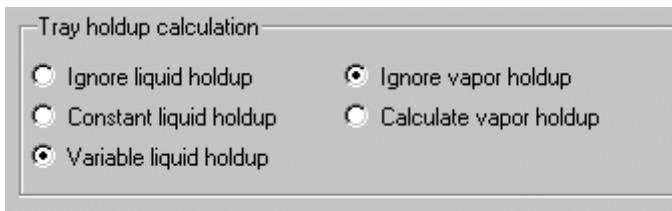

Let's use the following tray specifications:

Section: 1		Tray Type	Section: 2	
		<input type="radio"/> Valve Tray <input checked="" type="radio"/> Sieve Tray <input type="radio"/> Bubble Cap Tray		
		Number of sections	2	
Starting Stage	2	Starting Stage	15	
Ending Stage	14	Ending Stage	29	
System factor	1	System factor	1	
Tray diameter	2.6	Tray diameter	2.6	m
Tray Spacing	0.4	Tray Spacing	0.8	m
Flood percent	80	Flood percent	80	
No. of passes	4	No. of passes	4	
Downcmr A/ Tot A	0.2	Downcmr A/ Tot A	0.3	
Hole A / Tot A	0.05	Hole A / Tot A	0.06	
Splash type	No Splash baffle	Splash type	No Splash baffle	
Hole diameter	0.00635	Hole diameter	0.00635	m
Hole pattern	Square pitch	Hole pattern	Triangular pitch	
Hole pitch	0.015875	Hole pitch	0.015875	m
Tray thickness	0.0019812	Tray thickness	0.0019812	m
Weir height	0.0508	Weir height	0.0508	m
Downcmr clear	0.0762	Downcmr clear	0.0762	m
Downcomer width		Downcomer width		
Side	0.250886	Side	0.314205	m
Center	0.262182	Center	0.373662	m
Off-center	0.257623	Off-center	0.367164	m

The pressure drop is constant in the dynamic column calculation. The program does not calculate new pressure drops at each time stop. The "variable pressure" option means a new top pressure is calculated at each time point. The actual pressure of a tray is calculated from the variable top pressure and from the interpolated pressure drop based on the tray position and on the total pressure drop. This calculation can be important for columns equipped with total condensers.

Before you install any control loops around the column, we will make an analysis of the dynamic properties of the column. Several time dependent cases can be recorded during the simulation if the "Record process" option of the "Dynamic menu" is selected.

For example:

- Record Time -


The entire flowsheet can be recorded at the specified times (in ascending order).

Use the tab key to proceed from one time specification to the next.

Time (min)	Time (min)	Time (min)	Time (min)
15			
30			
45			
90			
180			
360			

CC-DCOLUMN will save a set of case studies automatically according to this table. The case studies will be given names such as: #D15, #D30, ... It is possible to examine individual case studies, normally after the simulation.

The plot below presents sample temperature profiles taken from saved case studies. The objective is to understand the sensitivity of the column and to find a "good tray" for the temperature control system. We decided to select a tray from the area enclosed in the box in the picture. The common property of trays from 24 to 26 is in the fact that the temperature profiles show an inflection point here. We have selected tray 24 for measurement and control of temperature for the bottom section of the column.

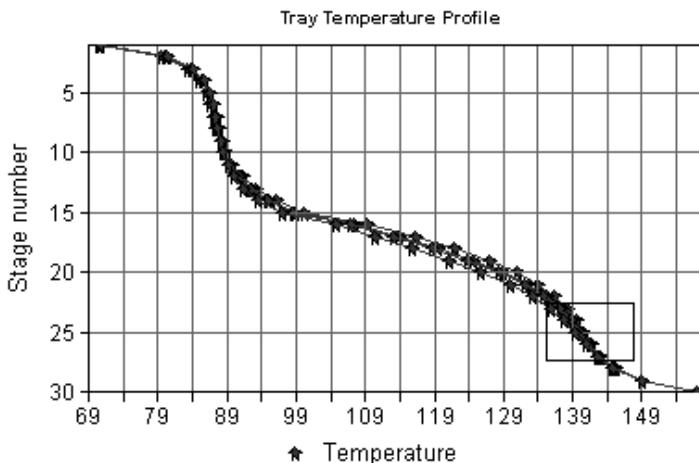

In the control system, we will try to maintain nearly constant temperature of this tray.

HOW TO INSTALL CONTROL LOOPS FOR A COLUMN

Let's explain the sequence of work for the reboiler system of this example.


Step 1

- Switch simulation mode from dynamic to steady state
- Insert a multipurpose flash module into the stream of B_product (bottom product)
- Connect the vapor outlet of flash to the column, this will be the vaporized stream from the reboiler
- The original column outlet is the inlet of flash, this stream is coming from the last tray (segment), its new name is B_liquid
- The liquid outlet of the vessel is the bottom product of the column
- Modify the settings of column: there is no reboiler, so decrease the number of trays by one and specify the new feed on the last tray
- Estimate the B_liquid stream using the result of last calculation (liquid from tray 29)
- Specify flash with temperature ($T_b = 157\text{ }^{\circ}\text{C}$) and pressure (left it blank)
- Use the recycle run option to converge the loop containing unit 5 and unit 8


Step 2

- Insert a heat exchanger before flash
- Use steam as utility – heating – agent
- Using several options of overall HTXR module and / or using the CC-THERM module of the CHEMCAD Suite, obtain the size data of the reboiler heat exchanger, finally use rating definitions (area and heat transfer coefficient)
- Delete specification of vessel
- Use the vessel sizing tool for the flash (keep the column diameter for vessel diameter)
- Run the new system and achieve the converged solution

FEEDCHANGEDCOLM.CCX

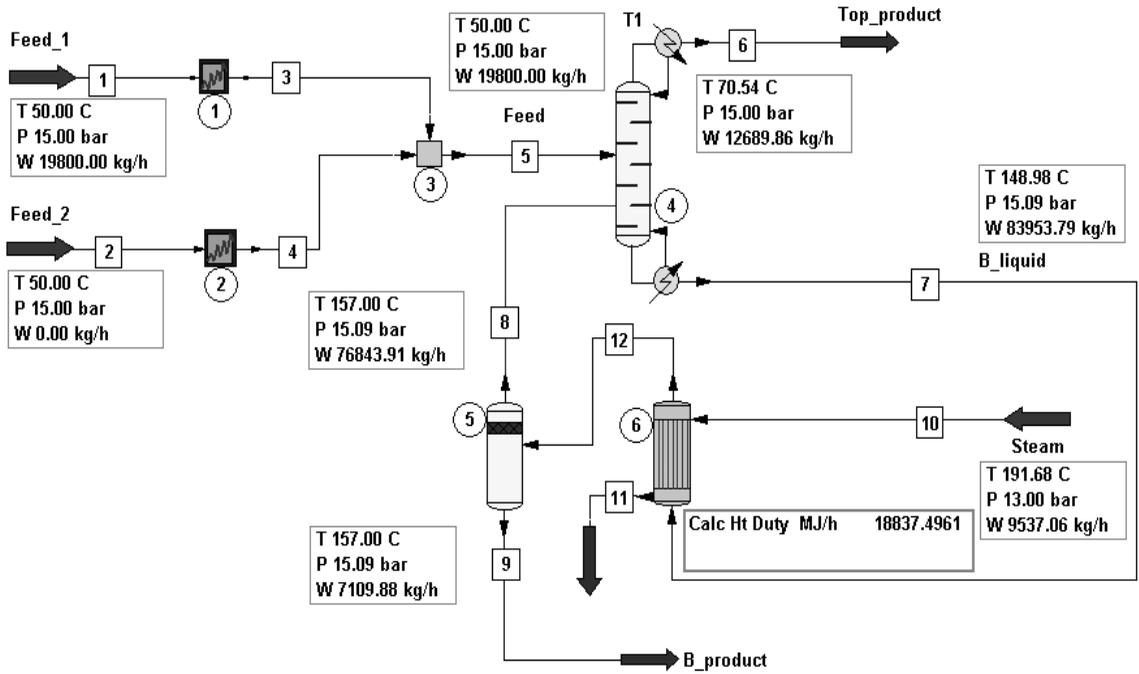

Step 3

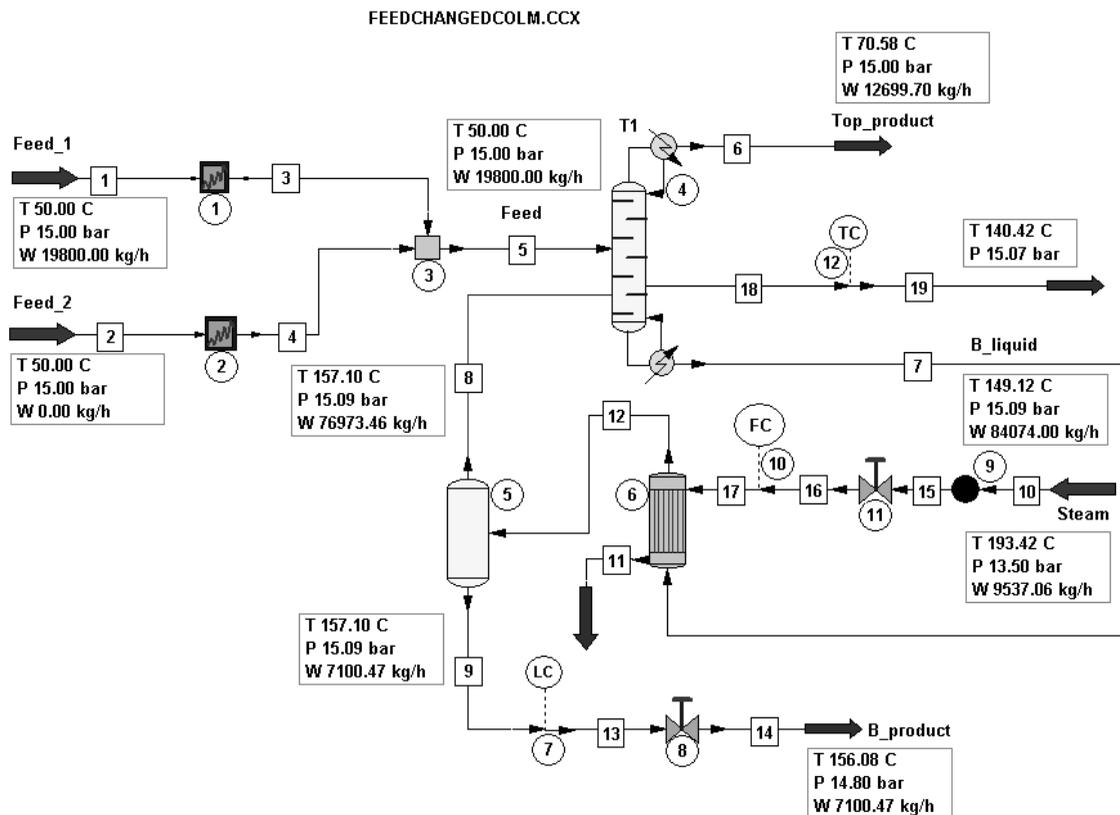

This is the result of the steady state process and this is the initial state of the dynamic simulation.

This sequence follows:

- Swap the flash module with dynamic vessel module and specify it using flash size data or by existing equipment data
- Insert a liquid level control loop into the B_product stream, use control valve sizing tool or enter existing data

Specify the controller:

- Run the units in the control loop and check the initial values (transmitter, controller output, valve position, connection or information transfer between the vessel and control valve)
- Repeat these steps and specify the local flow rate control loop of steam
- Use a cascade control system, let the primary loop be a temperature control on the tray 24

- Specify an empty side product stream on tray 24 (column model, mass flow rate =1e-6)
- Run and then verify the cascade control system (define the inlet of TC controller before the calculation; use the data of tray 24; unit numbers for this steady state run are: 12, 9,11,10)
- Use the "Run All" option of steady state simulator and save the result of converged run; this is the initial state of the system, turn the initial flag of column to mode 1(reload column profile) on the Convergence screen.
- Switch the simulation mode to dynamic

This is a possible result of steps described above:

Equip. No.	5
Name	Bottom vessel
Pressure bar	15.0870
Recorder option:	1 On line recording
Diameter m	2.6000Equal to the column diameter
Cylinder length m	8.0000Estimated
Int. liq lev 1 m	3.0000estimated
Liq flow 1 mode	3Control valve (link, vessel is active)
Liq flow 1 spec.	8.0000 ID

Equip. No.	6
Name	ReboilerHeat exchanger
U W/m2-K	800.0000Estimated
Area/shell m2	200.0000Estimated

Controllers

Equip. No.	7	10	12
Name	LIC	FIC	TIC
PB (Proportional Band)	100.0000	100.0000	100.0000
Ti (Integral time, min)	2.0000	0.5000	15.0000
Set point	3.0000	9537.0000	140.4000
Error definition	0	1	1
Control valve ID.	8	11	0
Measured object	1 (Unit)	0 (Stream)	0 (Stream)
Measured object ID.	5	16	18
Measured variable	43 (Level)	6 (Flowrate)	1 (Temp)
Variable unit	18 (Length)	1 (Mass)	2 (Temp)
Cascade ID	0	0	10
Controller/Sensor Func.	0 (Lin.)	1 (Quadr.)	0 (Lin)
Variable Min	1.0000	5000.0000	120.0000
Variable Max	5.0000	15000.0000	160.0000
Ctrl input min	4.0000	4.0000	4.0000
Ctrl input max	20.0000	20.0000	20.0000
Primary ID	0	12	0

Control valves

Equip. No.	8	11
Name	Valve-product	Valve-steam
Valve flow coefficient	54.0000	480.0000Sizing tool
Rangeability	10.0000	10.0000
Critical flow factor	0.9800	0.9800
Downstream pressure bar	14.8000	13.0000Defined
Controller ID	7	10
Valve time constant		0.1000
Valve Av	0.0625	0.0625NC valve
Valve Bv	-0.2500	-0.2500
Equip. ID	0	9Transfer to SREF
Equip. var. no	0	11 Fixed flow rate

The modified column specifications are:

Equip. No.	4
Name	T1
No. of stages	291+28
1st feed stage	15
2nd feed stage	29
Condenser type	1 Partial
Select condenser mode:	1 Reflux ratio is specified
Condenser spec.	3.0000R/D
Side product stage	24
Side product mode	-3 Liquid mass flow rate
Side product spec.	1.0000e-006Empty stream
Colm press drop bar	0.0870
Top pressure bar	15.0000
Iterations	100
Initial flag	1
Tray type	3 Sieve tray
Column diameter m	2.6000
Tray space m	0.4000
No of sections	2
Diameter 2nd sec. m	2.6000
Section 2 stage no.	15
No of passes (S1)	4
No of passes (S2)	4
Weir side width m	0.2509
Weir center width m	0.2622
Weir off-center m	0.2576
Weir side (2) m	0.3142
Weir center (2) m	0.3737
Weir off-center(2) m	0.3672
Weir height m	0.0508
Weir height (2) m	0.0508
System factor	1.0000

The dynamic parameters of this solution are:

Run time

Operation Step 1

Time Run time min. Step size min.

General Information

Initial Column Conditions

Steady state continuous process

Startup the column

Tray holdup calculation

Ignore liquid holdup Ignore vapor holdup

Constant liquid holdup Calculate vapor holdup

Variable liquid holdup

Pressure Calculation

Display plot during simulation

Record frequency


Include column metal heat transfer

Use operator training algorithm.





Help Cancel OK

The result after 300 minutes:

FEEDCHANGEDCOLM.CCX

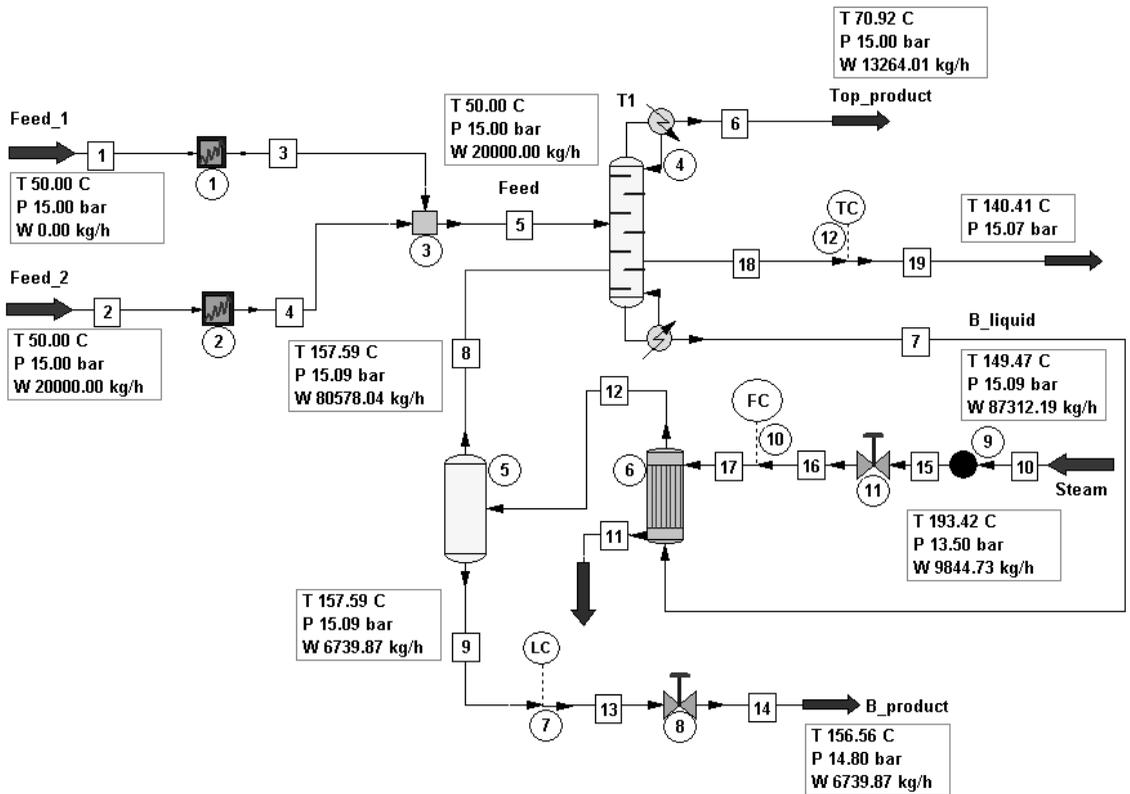

Typical trends:

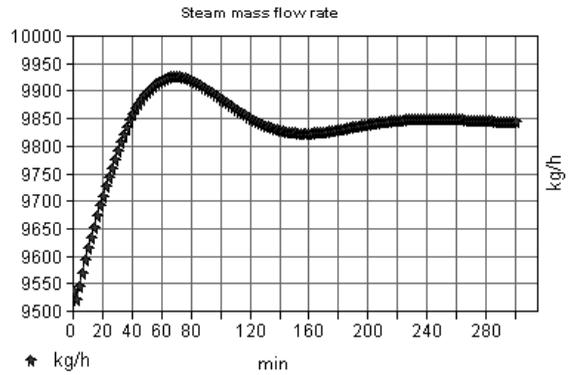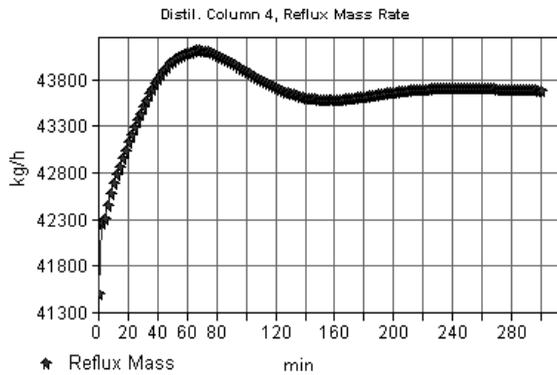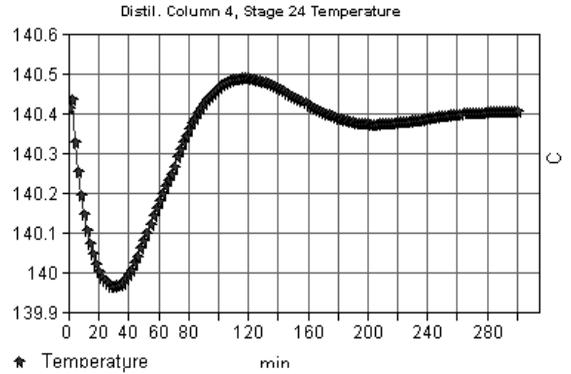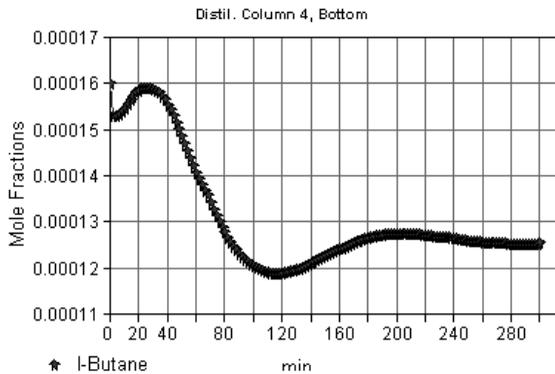


The I-Butane concentration of bottom product is stabilized on a low level of 1250 ppm. The main control variable – temperature of tray 24 – is stabilized at the set point, this is 140.4 °C. The trend of the reflux flowrate and the trend of the steam mass flowrate show a well-controlled and stabilized system.

The Main streams after 300 minutes are:

Stream No.	5	6	14
Name	Feed	Top_product	B_product
-- Overall --			
Mass flow kg/h	20000.0000	13267.0240	6725.4982
Temp C	50.0000	70.9473	156.7398
Pres bar	15.0000	15.0000	14.0000
Enth kJ/h	-30376.	-30251.	-13562.
Actual vol m3/h	41.6694	400.9909	16.5924
Component mass %			
Ethane	7.368420	11.107228	0.000000
Propane	15.789470	23.798135	0.000002
I-Butane	18.947372	28.546014	0.003855
N-Butane	24.210523	36.446357	0.081836
I-Pentane	11.578953	0.098358	33.931831
N-Pentane	9.473687	0.003906	28.223622
N-Hexane	6.315793	0.000000	18.879268
N-Heptane	4.210529	0.000000	12.578221
N-Octane	2.105263	0.000000	6.301364
Water	0.000000	0.000000	0.000000

Important note: We suggest you attempt to expand the flowsheet for the condenser system. Use a heat exchanger and a dynamic vessel (isobaric). Use a local flowrate control loop on the cooling water inlet and a primary loop as liquid level control of the reflux vessel. Use a local loop for the flow rate control of reflux and try to combine it with tray temperature controller (cascade) or with any SPC controller. For SPC controller (steady state controller) we recommend the Feed-Forward type algorithm, which can predict the best set point by information of noise.

Example:

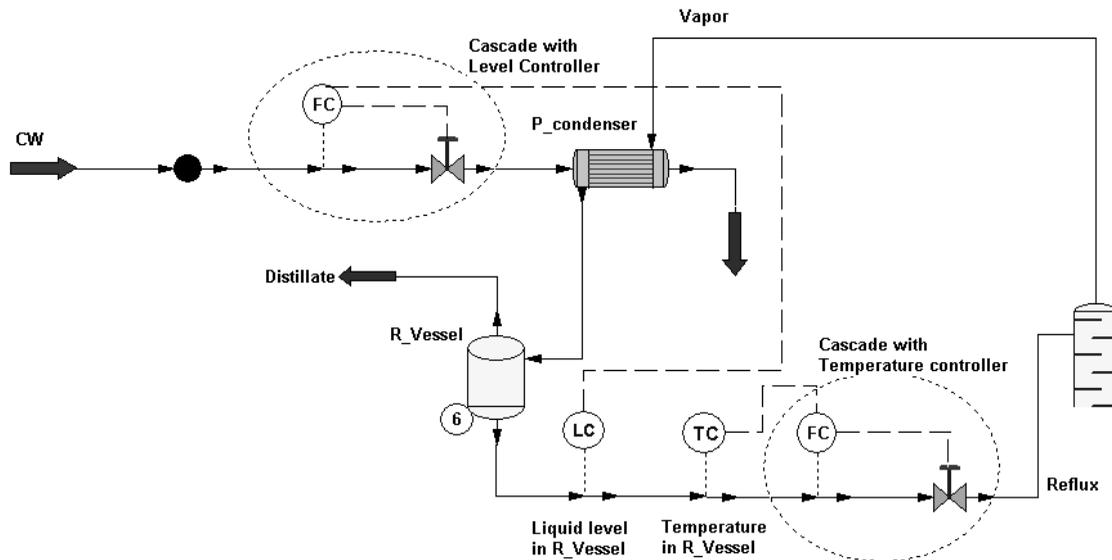

HOW TO USE THE BUILT-IN MODELS OF DYNAMIC COLUMN MODULE


The dynamic column module contains several built-in models. These cover elements of the reboiler and of the condenser system. We will now replace the detailed system described above with the multifunctional capabilities of the dynamic SCDS model.

The sequence of this modification is as follows:

- Switch the simulation mode back to steady state
- Swap the icon of SCDS with the special icon of Dynamic Column SCDS (this change keeps all model parameters while replacing the symbol. (Note: to swap a unit operation with another in the flowsheet editing mode, right click the desired icon, select Swap Unit, and then follow the instructions displayed by CHEMCAD.)
- Remove the vessel and heat exchanger from the flowsheet (try to keep all existing streams and control loops during this work)
- Make use of the vessel and heat exchanger parameters at the dynamic column specification later
- Connect the steam stream to the column icon directly
- Modify the inlet stream of the level control loop to become the bottom product of the column. (Most likely, you will need to create temporary streams and unit operations to save existing information; you can also copy the stream information later)
- Calculate all loops separately in steady state and then verify results

- Modify the column parameters: increase the number of trays to the original specification; DO NOT SPECIFY UTILITY STREAMS AS FEED OR SIDE PRODUCT; set the reboiler specification
- Run the whole system and save the converged solution; this is the initial state of the dynamic simulation
- Switch the dynamic simulation mode on

The new flowsheet at initial state looks similar to this one:

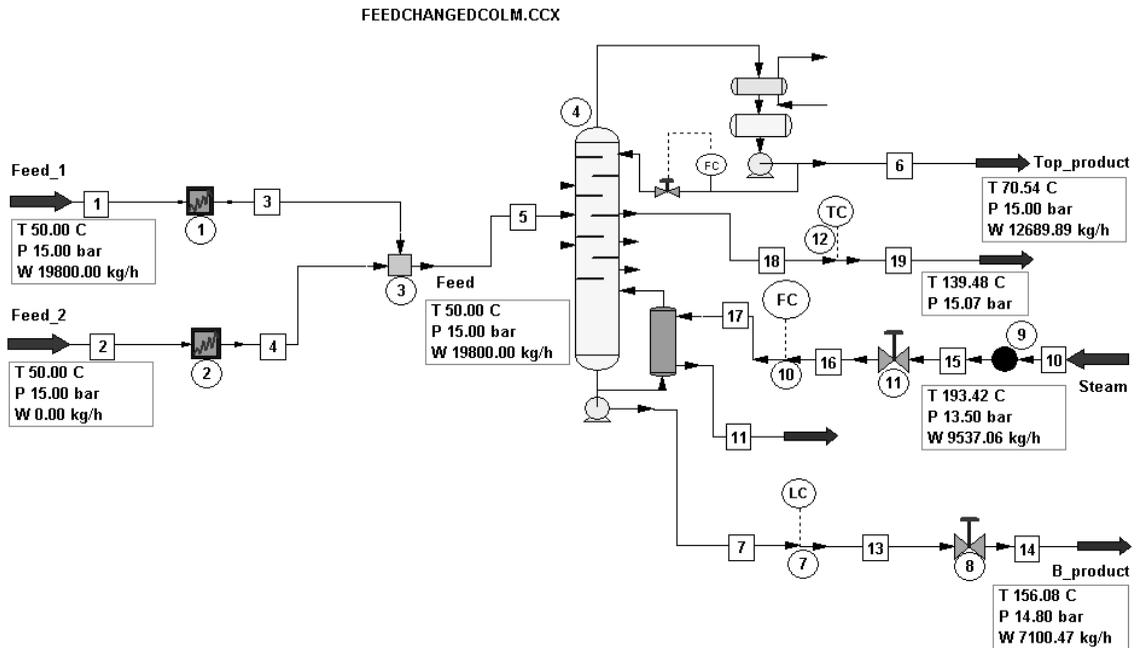

Summary of modifications to the dynamic part follows:

Column specification:

No. of stages		<input type="text" value="30"/>
Feed stages:		
Feed tray for stream	5	<input type="text" value="15"/>
Feed tray for stream	17	<input type="text"/>

This is the inlet point of steam, left it blank

Select reboiler mode:		Specification	
<input type="text" value="3 Bottom product temperature"/>		<input type="text" value="157"/>	C
Side Product Specifications			
Stream	Stage	Side product mode	Specification
18	<input type="text" value="24"/>	<input type="text" value="Liquid Mass Flow"/>	<input type="text" value="1e-006"/> kg/h
11	<input type="text"/>	<input type="text" value="(None)"/>	<input type="text"/>

This is connection point for condensate; leave this blank

New settings in the dynamic column specification.


The specification of the reboiler system is as follows:

Reboiler holdup option		ID: 4	
Variable Holdup		Reboiler Specifications	
For a reboiler with a UA specification		Bottoms rate specification	
Utility Option	Steam	By control valve	
Utility stream inlet ID #	17	Bottoms rate	
Utility stream outlet ID #	11	Bottoms control valve ID #	8
Utility control valve ID #	11	Optional level specifications	
Thermosyphon Recirculation R ₀		kg/h	Orientation
Utility pressure drop		bar	Vertical
Reboiler U	800	W/m ² -K	Head type
Reboiler A	200	m ²	Ellipsoidal
			Radius/depth head ratio
			Diameter
			2.6 m
			Cylinder length
			8 m
			Initial liquid level
			3 m

Change the controller specification (now there is no separate vessel).

<input checked="" type="checkbox"/> Activate controller		ID: 7
Set point	<input type="text" value="3"/>	Controller / Sensor Function
Steady state output (P0)	<input type="text" value="13.9112"/>	<input type="text" value="0 Linear function"/>
Proportional band (PB)	<input type="text" value="100"/>	Variable Min
Integral time (Ti)	<input type="text" value="2"/> min	<input type="text" value="1"/>
Derivative time (Td)	<input type="text"/> min	Variable Max
		<input type="text" value="5"/>
Control valve ID.	<input type="text" value="8"/> or	Ctrl input min
Cascade ID	<input type="text"/>	<input type="text" value="4"/>
Primary ID	<input type="text"/>	Ctrl input max
		<input type="text" value="20"/>
		Error Definition
		<input checked="" type="radio"/> Error = X - Xset (C,P,L)
		<input type="radio"/> Error = Xset - X (H,F)
Measured Object		
<input type="radio"/> Stream	ID number <input type="text" value="4"/>	Variable
<input checked="" type="radio"/> Equipment		<input type="text" value="140 Bottom liq. level"/>
		Component
		<input type="text" value="<None>"/>
		Variable unit
		<input type="text" value="18 Length"/>


The result after 300 minutes:

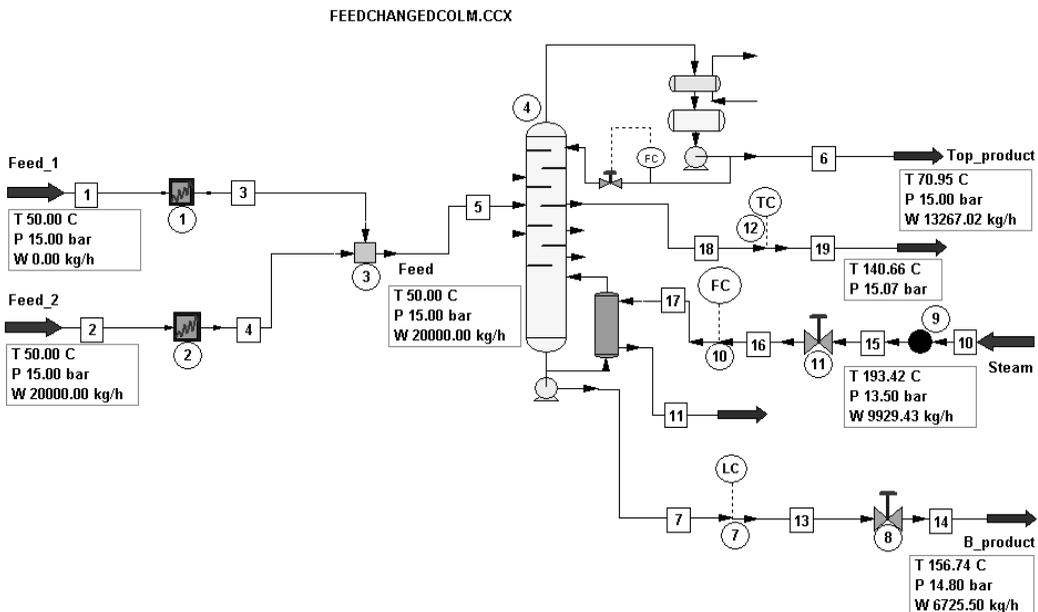

The main streams:

Stream No.	5	6	14
Name	Feed	Top_product	B_product
- - Overall - -			
Mass flow kg/h	20000.0000	13267.0240	6725.4982
Temp C	50.0000	70.9473	156.7398
Pres bar	15.0000	15.0000	14.8000
Enth MJ/h	-50376.	-30251.	-13562.
Actual vol m3/h	41.6694	400.9909	16.5924
Component mass %			
Ethane	7.368420	11.107228	0.000000
Propane	15.789470	23.798135	0.000002
I-Butane	18.947372	28.546014	0.003855
N-Butane	24.210523	36.446357	0.081836
I-Pentane	11.578953	0.098358	33.931831
N-Pentane	9.473687	0.003906	28.223622
N-Hexane	6.315793	0.000000	18.879268
N-Heptane	4.210529	0.000000	12.578221
N-Octane	2.105263	0.000000	6.301364
Water	0.000000	0.000000	0.000000

The trends:

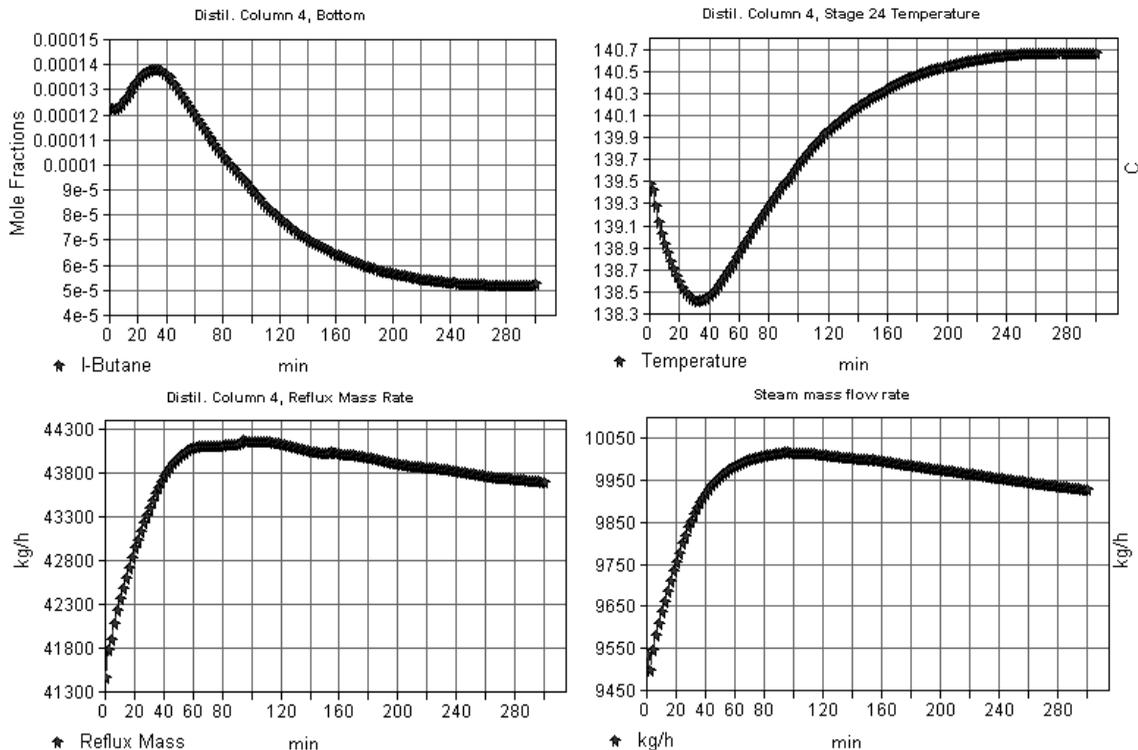

This control system also works well. The dynamic properties of the system differ from the first solution; simple copying of original parameters is not sufficient. The same trends would probably be produced if tuning of the parameters of each control loop were performed.

Special Note: This column works with a partial condenser. Do not use the built-in reflux control system for a partial condenser system.

The next example explains usage of multipurpose dynamic column model for a column equipped with total condenser.

HOW TO USE DYNAMIC COLUMN MODEL FOR CONTROL OF CONDENSER AND REFLUX

The job files for this example are installed automatically during the installation of CHEMCAD under CCDATA\Examples\Dynamics. The name of the job is DCOLM_CONT. The installed job is not identical to the example we describe but can be customized for following example.

In this example, the second typical method of dynamic studies is described. This is an analysis of dynamic properties of a closed-loop control system by change of set points. The technology is a continuous process and the study starts from a steady state condition with change of set point.

Our main objective here is to highlight the details of the calculation method for the total condenser system, the reflux flow control and the column pressure control. The same technique for the reboiler system as described in the first detailed example has been applied. The component system and the set of thermodynamic methods follow:

COMPONENTS

	ID #	Name
1	117	Methanol
2	140	Acetone
3	134	Ethanol
4	62	Water

THERMODYNAMICS

K-value model : NRTL
 No correction for vapor fugacity
 Enthalpy model : Latent Heat
 Liquid density : Library

Feed streams:

Stream Name	Feed_1	Feed_2	Feed_3
Temp F	150.3300*	160.3300*	130.3300*
Pres mmHg	760.0000*	760.0000*	1250.0000*
Enth Btu/h	-3.6452E+007	-1.4774E+009	-6.2616E+008
Vapor mole fraction	0.00000	0.00000	0.00000
Total lbmol/h	300.0000	12195.0000	6000.0000
Total lb/h	5404.5000	229521.4688	231309.0000
Total std L ft3/hr	86.5857	3742.7737	4613.1787
Total std V scfh	113843.59	4627742.00	2276871.75
Component mass %			
Methanol	0.000000	0.209405	54.024619
Acetone	0.000000	0.759145	37.663904
Ethanol	0.000000	6.021528	5.974995
Water	99.999994	93.009925	2.336485

Utility streams:


Stream Name	CW inlet	Steam
Temp F	80.3300*	266.5000*
Pres mmHg	2000.0000*	2040.7342
Enth Btu/h	-8.4718E+009	-4.4650E+008
Vapor mole fraction	0.00000	1.0000*
Total lbmol/h	69007.7969	4356.0000
Total lb/h	1243175.3750	78473.3359

Total std L ft3/hr	19916.9696	1257.2248
Total std V scfh	26186984.00	1653008.88
Component mass %		
Methanol	0.000000	0.000000
Acetone	0.000000	0.000000
Ethanol	0.000000	0.000000
Water	100.000000	100.000000

The steady state calculation reports the converged solution of the column, and this is the initial state of the process. The figures below show the flowsheet and the mass balance. We have marked important parts of the control system in the flowsheet:

- Total condenser system
- Pressure control
- Liquid level control of reflux drum
- Reflux flow rate control

Flowsheet and calculated stream data at initial state.

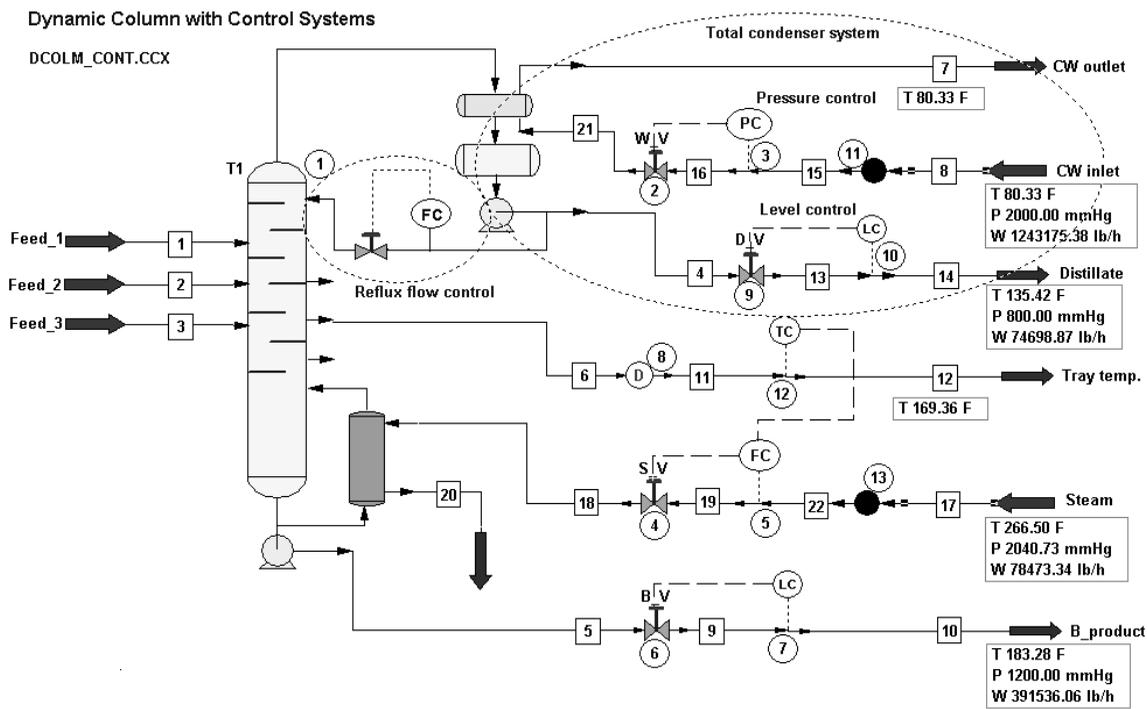


Mass balance at initial state.

Dynamic Column with Control Systems

DCOLM_CONT.CCX

Stream No.	1	2	3	14	10	8	17
Name	Feed_1	Feed_2	Feed_3	Distillate	B_product	CW inlet	Steam
-- Overall --							
Molar flow lbmol/h	300.0000	12195.0000	6000.0000	1395.0005	17100.0000	69007.7969	4356.0000
Mass flow lb/h	5404.5000	229521.4844	231309.0000	74698.8672	391536.0625	1243175.3750	78473.3359
Temp F	150.3300	160.3300	130.3300	135.4187	183.2754	80.3300	266.5000
Pres mmHg	760.0000	760.0000	1250.0000	800.0000	1200.0000	2000.0000	2040.7342
Vapor mole fraction	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	1.000
Enth Btu/h	-3.6452E+007	-1.4774E+009	-6.2616E+008	-1.4996E+008	-1.9789E+009	-8.4718E+009	-4.4650E+008
Actual vol ft3/hr	88.3513	3848.7856	4881.7690	1592.7662	7415.0093	19989.1367	844218.2500
Component mass %							
Methanol	0.000000	0.209405	54.024619	0.232895	31.994611	0.000000	0.000000
Acetone	0.000000	0.759145	37.663904	89.833587	5.557016	0.000000	0.000000
Ethanol	0.000000	6.021528	5.974995	7.037702	5.717050	0.000000	0.000000
Water	99.999994	93.009925	2.336485	2.895811	56.731325	100.000000	100.000000

Column profiles at steady state.

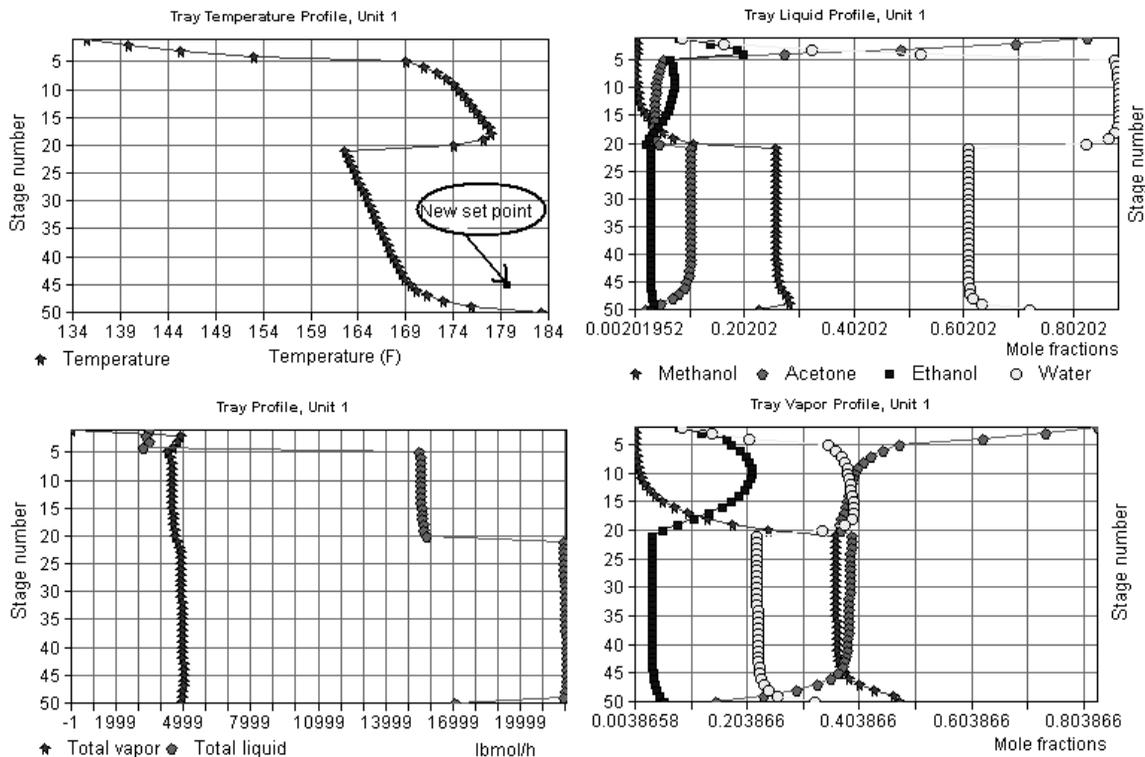

In the plot of the column temperature profile, we point to the new set point, which is 10 F above the current temperature. The temperature control loop is the primary loop of the steam flow rate control. For the much faster response of the cascade controllers, we also increased the set point of the flow rate control loop. All other controllers keep the existing set point.

The unit parameters (first part: external controllers and control valves).

Controllers

Equip. No.	7	5	12
Controller Name	LC-B_level	FC-Steam	TC-Tray_45
PB (Proportional Band)	200.0000	666.7000	200.0000
Ti (Integral time, min)	5.0000	0.2500	17.0000
P0 Steady state output	9.3843	15.2533	7.2400
Set point	8.0000	81000.0000	180.3300 <- NEW SP
Error definition	0	1	1
Control valve ID.	6	4	0
Measured object	1	0	0

Measured object ID.	1 (Unit)	18 (Stream)	11 (Stream)
Measured variable	140 (level)	6 (f-rate)	1 (tempr.)
Variable unit	18 (length)	1 (mass)	2 (tempr.)
State	1	1	1
Cascade ID	0	0	5
Controller/Sensor Func.	0	1	0
Variable Min	6.0000	0.0600	160.3300
Variable Max	10.0000	180000.0000	200.3300
Ctrl input min	4.0000	4.0000	4.0000
Ctrl input max	20.0000	20.0000	20.0000
Primary ID	0	12	0

Controllers

Equip. No.	10	3
Controller Name	LC-C_vessel	PC-Column
PB (Proportional Band)	90.9000	66.7000
Ti (Integral time, min)	3.0000	3.0000
P0 Steady state output	10.3529	11.5918
Set point	3.0000	760.0000
Control valve ID.	9	2
Measured object	1	1
Measured object ID.	1 (Unit)	1 (Unit)
Measured variable	136 (level)	34 (pressure)
Variable unit	18 (length)	4 (pressure)
State	1	1
Variable Min	1.0000e-004	500.0000
Variable Max	10.0000	1000.0000
Ctrl input min	4.0000	4.0000
Ctrl input max	20.0000	20.0000

Control valves

Equip. No.	6	4	9	2
Equip. Name	B_V	S_V	D_V	W_V
Valve flow coefficient	665.0000	2150.0000	120.5000	1720.0000
Rangeability	10.0000	10.0000	10.0000	10.0000
Critical flow factor	0.9800	0.9800	0.9800	0.9800
Downstr. pres., mmHg	1200.0000	886.0500	800.0000	780.0000
Calc. flow rate lb/h	391536.0625	78473.3359	74698.8672	1.2432e+006
		<-actual ->		
Controller ID	7	5	10	3
Valve position %	33.6519	70.3329	39.7056	47.4490
Valve time constant	0.1500	0.2000	0.1500	0.1500
Valve Av	0.0625	0.0625	0.0625	0.0625
Valve Bv	-0.2500	-0.2500	-0.2500	-0.2500
Controller output	9.3843	15.2533	10.3529	11.5918
Steady state position	33.6519	70.3329	39.7056	47.4490
Controller output SS	9.3843	15.2533	10.3529	11.5918

Destination ID	0	1	0	0
Var. No.	0	144	0	0
Phase option	1	0	1	1
Equip. ID	0	13	0	11
Equip. var. no	0	11	0	11

The setting of the dynamic column model (second part: units included into column model).

General Model Parameters

Simulation model Regular VLE model

Condenser type 0 Total or none

Subcooled delta T F

Top pressure 760 mmHg

Cond press drop 27 mmHg

Colm press drop 229 mmHg

Reflux pump pout 2500 mmHg

Bottom pump pout 3000 mmHg

No. of stages 50

Feed stages:

Feed tray for stream	1	3
Feed tray for stream	2	5
Feed tray for stream	3	21
Feed tray for stream	21	
Feed tray for stream	18	

Condenser mode: 15 Reflux mass flowrate Specification 186000 lb/h

Select reboiler mode: 4 Bottom mole flowrate Specification 17100 lbmol/h

Side Product Specifications

Stream	Stage	Side product mode	Specification
6	45	Liquid Mass Flow	0.06 lb/h
7		(None)	
20		(None)	

Thermosyphon reboiler

Vapor fraction 0.15

Overview of the dynamic column menu:

The image displays the dynamic column menu interface, which includes several configuration panels and a central menu. The central menu, titled "Column Menu", lists the following options: Exit, General Information, Startup parameters, Startup Charge, Column Holdups, Specs, Reflux control, Column Metal Heat Transfer, Record stages, and Plot options. The "Column Holdups" and "Specs" options are circled in the menu. To the left of the menu is a panel with the following settings:
 Steady state continuous process
 Variable liquid holdup
 Ignore vapor holdup
 Variable Pressure: [Dropdown]
 Display plot during simulation
 Record frequency: [1]
 Below this panel are two sub-panels: "Condenser Specifications" with a "Condenser holdup option" dropdown set to "Variable Holdup", and "Reboiler Specifications" with a "Reboiler holdup option" dropdown set to "Variable Holdup". To the right of the menu is a detailed configuration panel for a "Sieve Tray" with the following settings:
 Sieve Tray Number of sections: [1]
 Starting Stage: [2]
 Ending Stage: [49]
 System factor: [1]
 Tray diameter: [15] ft
 Tray Spacing: [2] ft
 Flood percent: [80]
 No. of passes: [1]
 Downcomr A/ Tot A: [0.12]
 Hole A / Tot A: [0.0738]
 Splash type: [No Splash baffle]
 Hole diameter: [0.0156] ft
 Hole pattern: [Triangular pitch]
 Hole pitch: [0.0520833] ft
 Tray thickness: [0.0078] ft
 Weir height: [0.0833] ft
 Downcomr clear: [0.0833] ft
 Downcomer width:
 Side: [2.4] ft
 Center: [] ft
 Off-center: [] ft
 Off-side: [] ft

Condenser specification involves a heat exchanger and a dynamic vessel.

The ID of valve of level controller (active unit in the flow rate transfer) and the initial value of level should be defined here.

Condenser holdup option ID: 1

Condenser Specifications

Reflux specification Liquid distillate specification

By control valve By control valve

Reflux rate Distillate rate

See separated sheet for reflux Distillate Control Valve ID #

Heat exchanger Vessel

For a condenser with a UA specification Optional level specifications

Utility stream inlet ID #	<input type="text" value="21"/>		
Utility stream outlet ID #	<input type="text" value="7"/>		
Utility control valve ID #	<input type="text" value="2"/>		
Utility pressure drop	<input type="text"/>	mmHg	
Condenser U	<input type="text" value="100"/>	Btu/hr-ft ² -F	
Condenser A	<input type="text" value="30000"/>	ft ²	

Orientation	<input type="text" value="Horizontal"/>	
Head type	<input type="text" value="Ellipsoidal"/>	
Radius/depth head ratio	<input type="text"/>	
Diameter	<input type="text" value="10"/>	ft
Cylinder length	<input type="text" value="16"/>	ft
Initial liquid level	<input type="text" value="3"/>	ft

Reflux control valve and controller specification (identical with the normal specification).

Controller/Sensor function 1 Quadratic function	
Variable Min	600
Variable Max	360000
Ctrl input min	4
Ctrl input max	20
Sensor Information Measured variable: 0 Mass flow rate Tray no.:	
PB (Proportional Band)	400
Ti (Integral time, min)	0.1
Td (Derivative, min)	
PD Steady state output	
Set point	186000
Error Definition <input type="radio"/> Error = X - Xset (C.P.L.) <input checked="" type="radio"/> Error = Xset - X (H.F.)	

Valve type <input checked="" type="radio"/> Equal percentage valve		
Valve flow coefficient	300	
Rangeability	10	
Critical flow factor	0.98	
Supply pressure	2000	mmHg
Valve position %		0-1
Controller / Valve Position:		
Valve time constant	0.15	
Valve Av	0.0625	
Valve Bv	-0.25	

The reboiler specification involves a heat exchanger and a dynamic vessel. You should define here the ID of the control valve for level controller (active unit in the flow rate transfer) and the initial value of level.

Reboiler holdup option ID: 1

Variable Holdup

Reboiler Specifications

For a reboiler with a UA specification

Utility Option:

Utility stream inlet ID #:

Utility stream outlet ID #:

Utility control valve ID #:

Thermosyphon Recirculation Rate: lb/h

Utility pressure drop: mmHg

Reboiler U: Btu/hr-ft²-F

Reboiler A: ft²

Bottoms rate specification

By control valve:

Bottoms rate:

Bottoms control valve ID #:

Optional level specifications

Orientation:

Head type:

Radius/depth head ratio:

Diameter: ft

Cylinder length: ft

Initial liquid level: ft

Heat exchanger (points to Utility control valve ID #)

Vessel (points to Initial liquid level)

Dynamic run menu:





Operation Step 1


Time Run time: min. Step size: min.

Saved or recorded information:

- Record Streams -			- Record Units -		
<input type="checkbox"/> Select streams from flowsheet			<input type="checkbox"/> Select units from flowsheet		
Or enter the stream ID's below			Or enter the unitop ID's below		
7			6		
8			4		
17			9		
14			2		
10			3		
			10		
			12		
			5		
			7		
			1		

Trend results after 300 minutes:

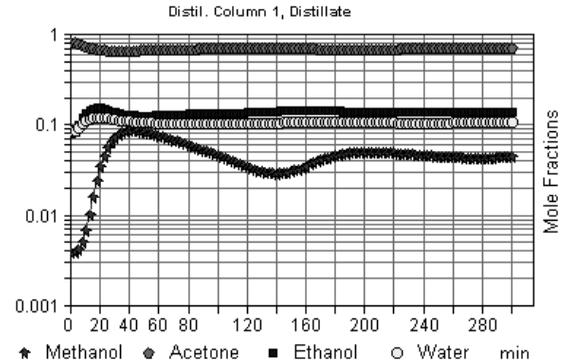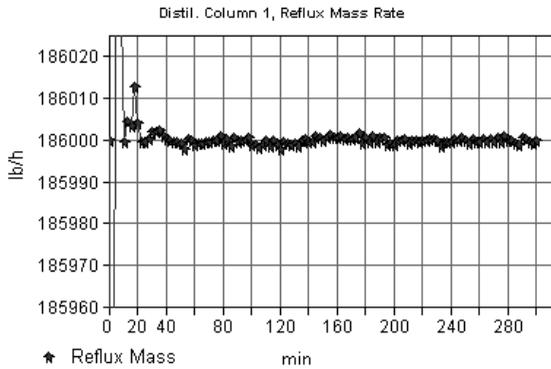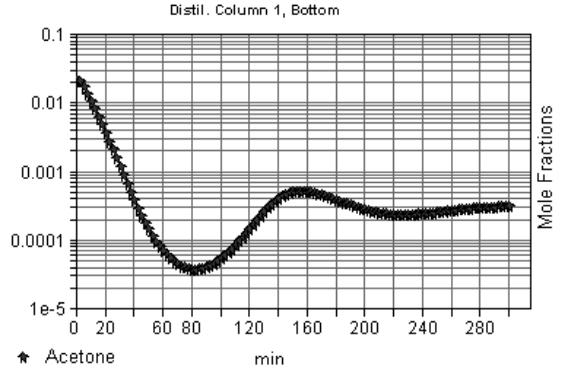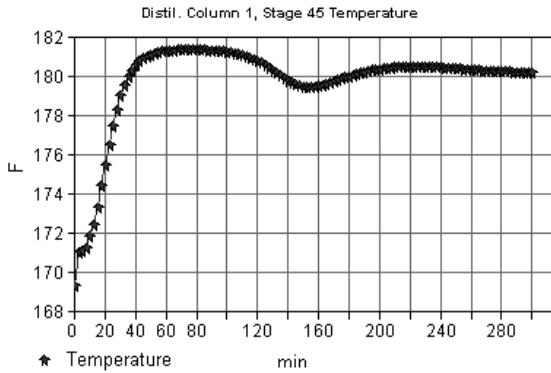

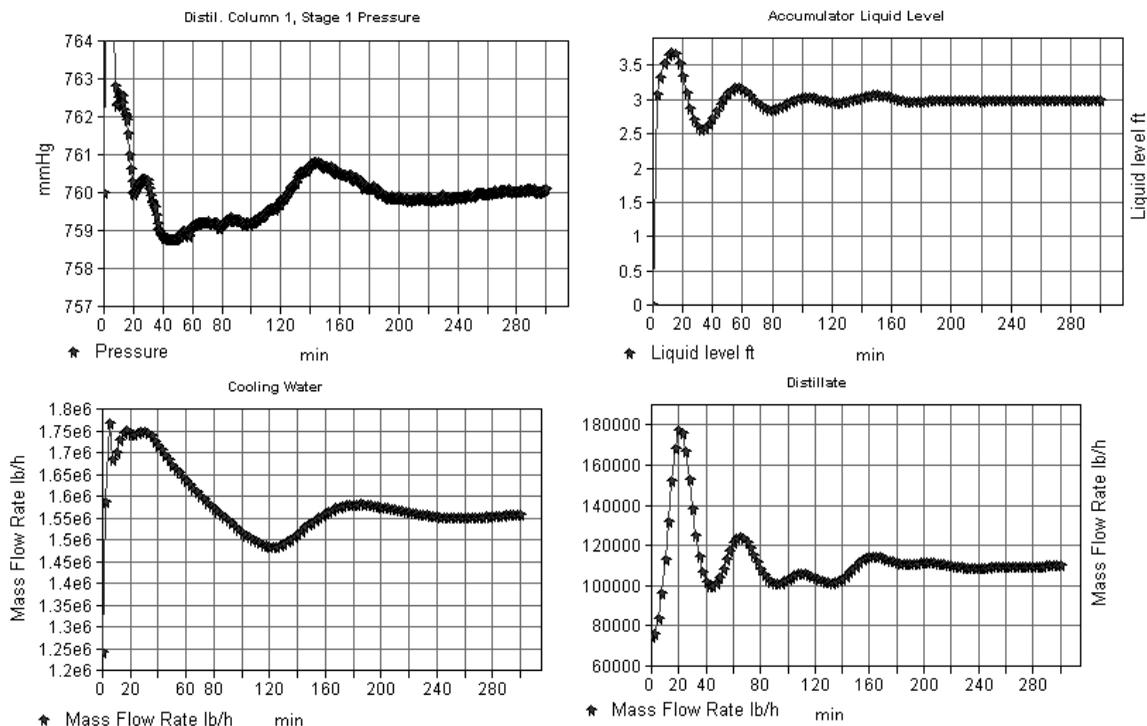


The simulation results indicate a good-working control system. The temperature of tray 45 has been stabilized at the new set point and other controlled variables are at practically steady state values as well. From an operating standpoint, the bottom section of the column works at a higher temperature and we have acetone at a lower concentration in the bottom product, that is, under 0.1 wt %. (The starting value was higher than 5 wt %.)

Flowsheet:

Dynamic Column with Control Systems

DCOLM_CONT.CCX

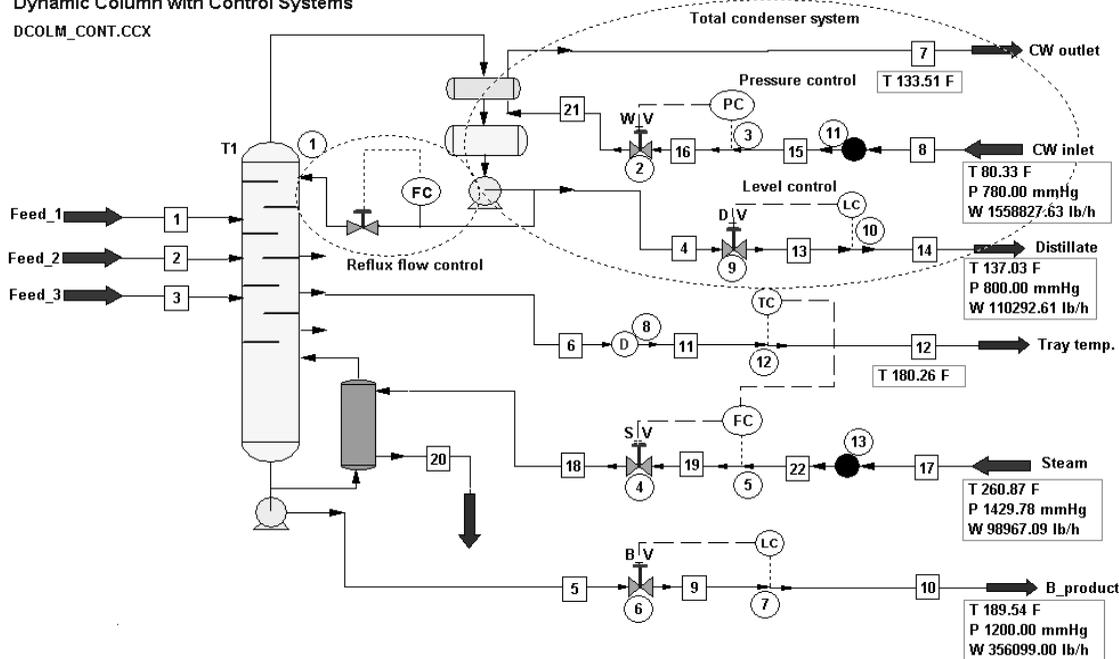


Balance

Dynamic Column with Control Systems

DCOLM_CONT.CCX

Stream No.	1	2	3	14	10	8	17
Name	Feed_1	Feed_2	Feed_3	Distillate	B_product	CW inlet	Steam
-- Overall --							
Molar flow lbmol/h	300.0000	12195.0000	6000.0000	2166.8591	16325.7988	86529.4297	5493.5938
Mass flow lb/h	5404.5000	229521.4844	231309.0000	110292.6094	356099.0000	1558827.6250	98967.0859
Temp F	150.3300	160.3300	130.3300	137.0332	189.5399	80.3300	260.8652
Pres mmHg	760.0000	760.0000	1250.0000	800.0000	1200.0000	780.0000	1429.7788
Vapor mole fraction	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000	1.000
Enth Btu/h	-3.6452E+007	-1.4774E+009	-6.2616E+008	-2.3495E+008	-1.8926E+009	-1.0623E+010	-5.6311E+008
Actual vol ft3/hr	88.3513	3848.7856	4881.7690	2347.2515	6660.5732	25064.5391	1516005.7500
Component mass %							
Methanol	0.000000	0.209405	54.024619	2.807423	34.336859	0.000000	0.000000
Acetone	0.000000	0.759145	37.663904	80.511367	0.082871	0.000000	0.000000
Ethanol	0.000000	6.021528	5.974995	12.873179	3.808446	0.000000	0.000000
Water	99.999994	93.009925	2.336485	3.808033	61.771828	100.000000	100.000000

The column profiles after 300 minutes dynamic simulation show significant differences to the initial state in the bottom section of the column.

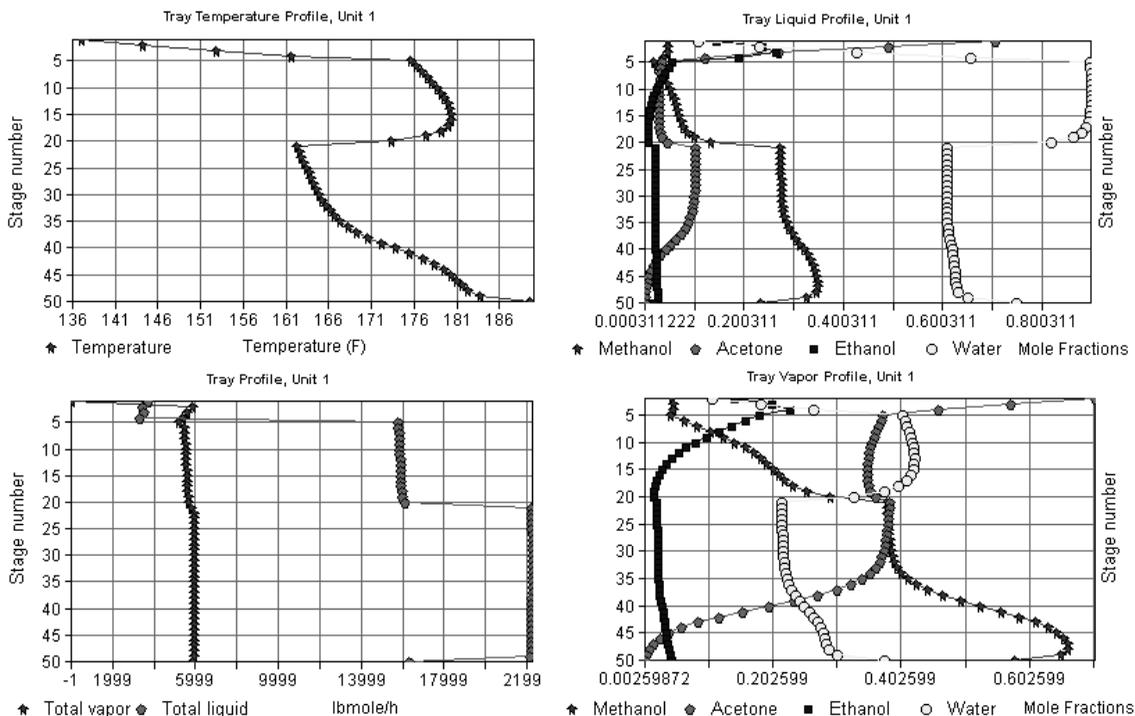


DYNAMIC COLUMN MODEL FOR BATCH DISTILLATION SYSTEMS, STARTUP PROBLEMS

This problem is typical. A component should be recovered from a mixture. This mixture is strongly non-ideal and contains components in very different concentrations. Considering the volume of the raw material and the properties of mixture, it was decided that batch distillation unit would be suitable.

The job was initially studied with the CC-BATCH module to estimate several operating parameters.

Batch distillation technology is not limited to a distillation column but it also involves several auxiliary equipment pieces: heat exchangers for vaporization of liquid mixture and for condensation of vapor; vessels to accumulate the distillation products; pumps and several devices of control system.

A typical configuration of the technology can be seen in the following flowsheet:

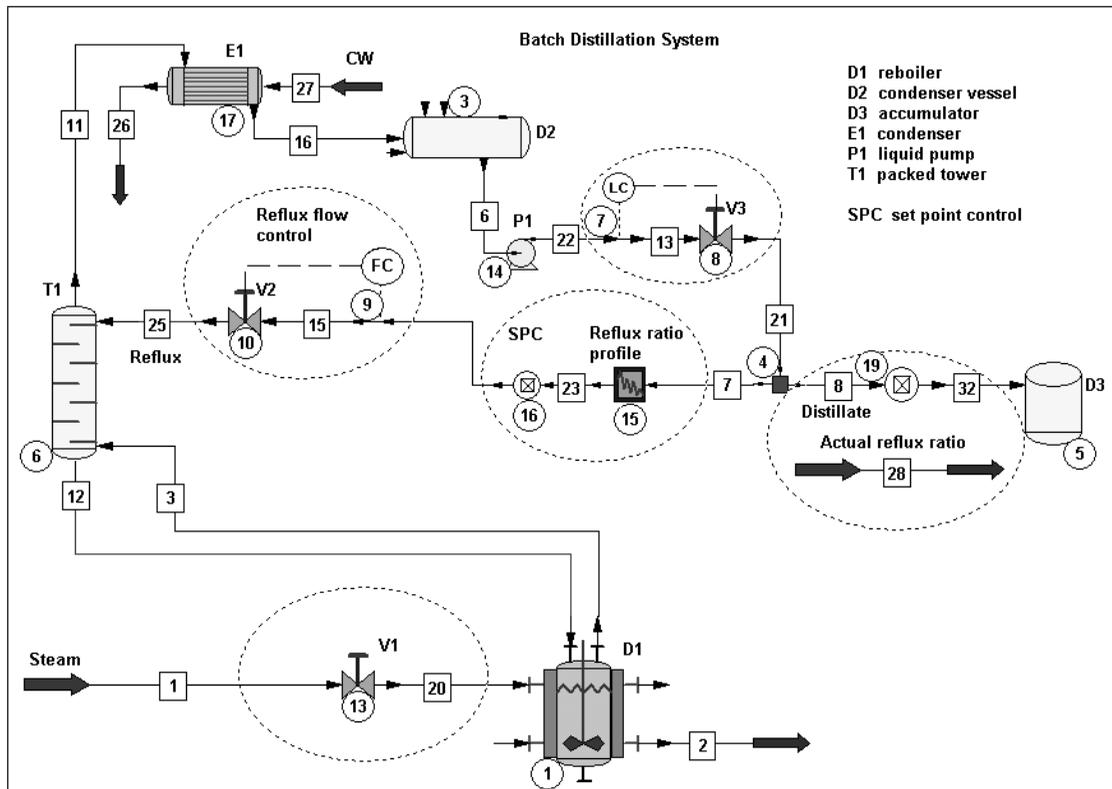

The parts of the control system are circled. The T1 column is modeled with CC-DCOLUMN.

Each charge needs same operating steps:

- startup of the system
- continuous regime under controlled parameters
- shutdown of the production

The multifunctional unit of CC-DCOLUMN is able to simulate this technology using built-in models. For practical reasons, we split the system into independent equipment pieces, and we used the SCDS model for the distillation column only. We will explain the analogy between this detailed solution and the universal model description of SCDS later.

The charge is defined by:

Stream Name	Charge
Temp C	20.0000
Pres bar	10.2000
Enth kcal	-2.5459E+006
Vapor mole fraction	0.00000
Total kmol	25.3385
Total kg	1801.5414
Total std L m3	2.0000
Component mass %	
Methanol	7.000002
Ethyl Acetate	89.999998
Water	3.000000

The thermodynamical and transport calculation methods selected were the NRTL K-Values with fugacity correction, latent heat for enthalpy, and Lu's method for density.

The list of equipments is:

- D1 jacketed vessel with steam heating, batch reactor model (BREA)
- D2 accumulator to collect the condensed liquid after the condenser (DVSL)
- D3 accumulator to collect the distilled product (DVSL)
- E1 tubular heat exchanger with water cooling, steady state model (HTXR)
- P1 liquid pump, steady state model (PUMP)
- T1 distillation tower with Intalox saddle random packing, SCDS dynamic column model

The control system involves

- Reflux flow rate local control loop, V2 (control valve) and FC (PID controller)
- Level local control loop, V3 (control valve) and LC (PID controller)
- V1 control valve for steam inlet.

For the set point control (SPC) of the reflux flow rate control loop, a steady state control module (CONT) has been used together with a RAMP module. The RAMP module produces the time dependent reflux ratio. A fuller description of SPC can be found in the section "How to define a set point control system".

Notes:

- The jacket pressure controls the steam feed flow rate automatically. This mechanism can be defined in this way:

Valve flow coefficient	<input type="text" value="9"/>	Valve type	ID: 13
Rangeability	<input type="text" value="10"/>	<input checked="" type="radio"/> Equal percentage valve	
Controller ID	<input type="text" value=""/> Set it by hand	<input type="radio"/> Linear valve	Initial value
Valve position %	<input type="text" value="95.8915"/>	Critical flow factor	<input type="text" value="0.98"/>
Controller / Valve Position:		Downstream pressure	<input type="text" value="24"/> bar
Valve time constant	<input type="text" value="0.1"/>	Supply pressure	<input type="text" value=""/> bar
Valve Av	<input type="text" value="0.0625"/>	If downstream P not specified	
Valve Bv	<input type="text" value="-0.25"/>	Destination ID	<input type="text" value="1"/>
		Variable	<input type="text" value="21 Jacket P1"/>
		<input type="checkbox"/> Forward flow only	
		<input type="checkbox"/> Check here for non-flashing liquid	

- The reboiler has been defined as discrete unit operation, the batch reactor. The following picture shows analogy between the definition of the built-in reboiler of the CC-DCOLUMN model (top), and similar definition of reboiler made of separate batch reactor (bottom):

Specs

Reboiler Specifications

Variable Holdup

For a reboiler with a UA specification

Utility Option	<input type="text" value="Steam"/>	<input type="button" value="v"/>
Utility stream inlet ID #	<input type="text"/>	
Utility stream outlet ID #	<input type="text"/>	
Utility control valve ID #	<input type="text"/>	
Thermosyphon Recirculation R.	<input type="text"/>	kg/h
Utility pressure drop	<input type="text"/>	bar
Reboiler U	<input type="text"/>	kcal/h-m ² -C
Reboiler A	<input type="text"/>	m ²

Optional level specifications

Orientation	<input type="text" value="Vertical"/>	<input type="button" value="v"/>
Head type	<input type="text" value="Ellipsoidal"/>	<input type="button" value="v"/>
Radius/depth head ratio	<input type="text"/>	
Diameter	<input type="text"/>	m
Cylinder length	<input type="text"/>	m
Initial liquid level	<input type="text"/>	m

Jacketed vessel

Jacket annulus	<input type="text" value="0.015"/>	m
Inlet diameter	<input type="text" value="0.1"/>	m
Jacket total volume	<input type="text" value="0.6"/>	m ³
Jacket height	<input type="text" value="1.4"/>	m
Heat transfer area		
Minimum area	<input type="text"/>	m ²
Maximum area	<input type="text" value="6"/>	m ²
Reactor vol. at min. area	<input type="text"/>	m ³
Reactor vol. at max. area	<input type="text" value="2.2"/>	m ³

Reactor volume	<input type="text" value="2.5"/>	m ³
Reactor diameter	<input type="text" value="1.4"/>	m
Wall thickness	<input type="text" value="0.015"/>	m
Wall density	<input type="text" value="7800"/>	kg/m ³
Wall cp	<input type="text" value="0.1"/>	kcal/kg-C
Wall therm. cond.	<input type="text" value="40.9512"/>	kcal/h-m-C
Initial wall temp.	<input type="text" value="20"/>	C

- There is a similar analogy between built-in units of CC-DCOLUMN (such as the accumulator, the condenser, and the reflux control loop), and similar units made of discrete unit operations. A summary of the existing unit operations follows:

Vessels:

Equip. No.	3	5	
Equip. Name	D2	D3	
Pressure bar	10.2000	10.0000	
Recorder option:	1	1	Record history
Diameter m	0.6000	1.4000	
Cylinder length m	1.8000	2.0000	
Head type:	3	3	
Int. liq lev 1 m	1.0000e-010	1.0000e-010	Empty vessels at start
Liq flow 1 mode	3	0	
Liq flow 1 spec.	8.0000	Controlled by CVAL 8	

Control Valves:

Equip. No.	10	8	
Equip. Name	V2	V3	
Valve flow coefficient	9.0000	9.0000	
Rangeability	10.0000	10.0000	
Valve type	1	1	
Critical flow factor	0.9800	0.9800	
Downstream pressure, bar	10.2000	10.4000	
Controller ID	9	7	
Valve time constant	0.1000		
Valve Av	0.0625	0.0625	
Valve Bv	-0.2500	-0.2500	
Phase option	1	1	
Equip. ID	4	0	Flow rate transfer
Equip. var. no	3	0	

PID Controllers:

Equip. No.	9	7	
Equip. Name	FC	LC	
PB (Proportional Band)	125.0000	25.0000	
Ti (Integral time, min)	0.5000	5.0000	
P0 Steady state output	4.0000	4.0000	
Set point	1.0000e-006	0.9000	Controlled by SPC
Error definition	1	0	
Control valve ID.	10	8	
Measured object	0	1	
Measured object ID.	7	3	
Measured variable	6	43	
Variable unit	1	18	
State	1	1	
Controller/Sensor Func.	1	0	
Variable Min	1.0000e-006	1.0000e-006	
Variable Max	1500.0000	2.0000	
Ctrl input min	4.0000	4.0000	
Ctrl input max	20.0000	20.0000	

Heat Exchanger:

Equip. No.	17
Equip. Name	E1
U kcal/h-m ² -C	400.0000
Area/shell m ²	4.0000

Elements of SPC calculation:

RAMP

Equip. No.	15
Equip. Name	R-profile
Equip/Stream ID	16 CONT module
Variable No.	9 Scale
	0.999time & value
90.0	0.999
120.0	0.8500
300.0	0.8500


CONT

Equip. No.	16
Equip. Name	SPC
Mode	1 FF
Equip. no. adjusted	9 Reflux controller
Variable No.	6 Set point

Measured variables:

Number	21	Liquid stream from condenser
Variable	6	Mass flow rate
Scale		1.0000Defined by RAMP module

The parameters that have been entered as specifications of the distillation column are:

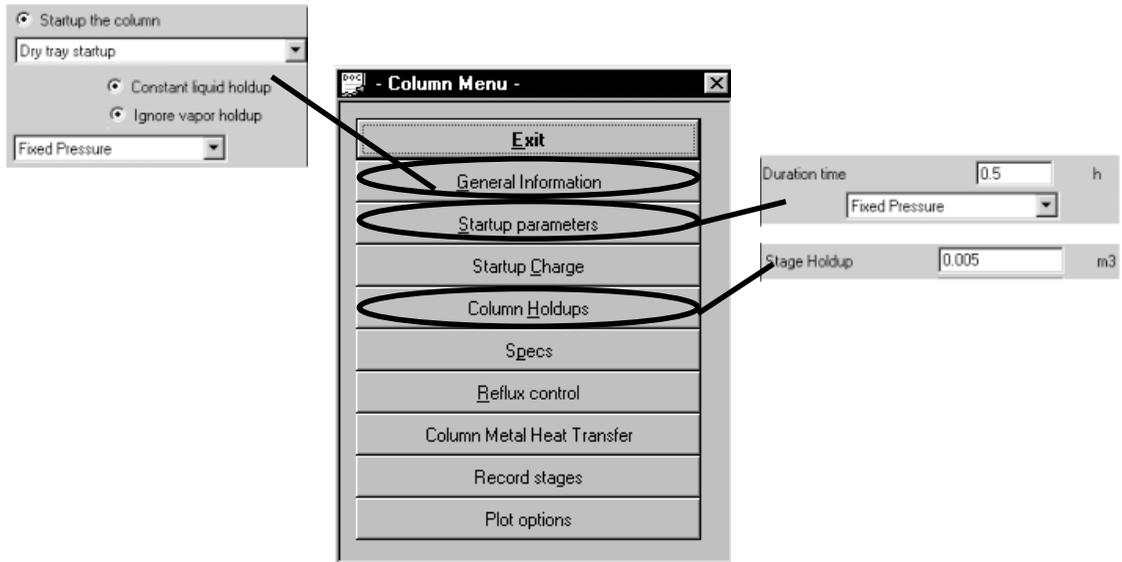


Plots:


Several plots can be produced using the simulator of batch technology. These can help in the design phase and can help analyze the existing technology.

With the next set of profiles, we would like to show how you could use these results in the design of time schedule of the batch technology.


Distil. Column 6, Stage 24 Liquid

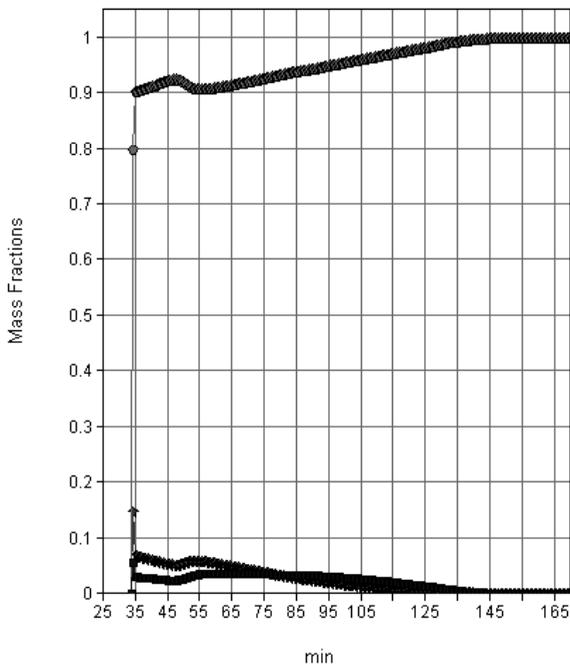

Distil. Column 6, Stage 1 Vapor

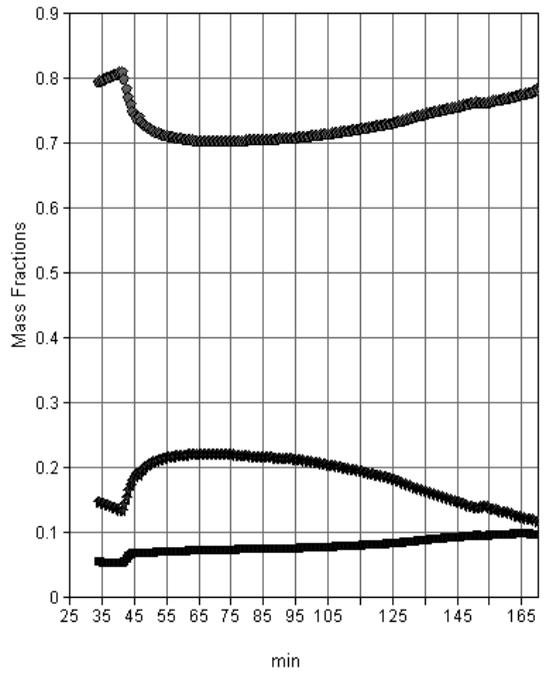

★ Methanol ◆ Ethyl Acetate ■ Water

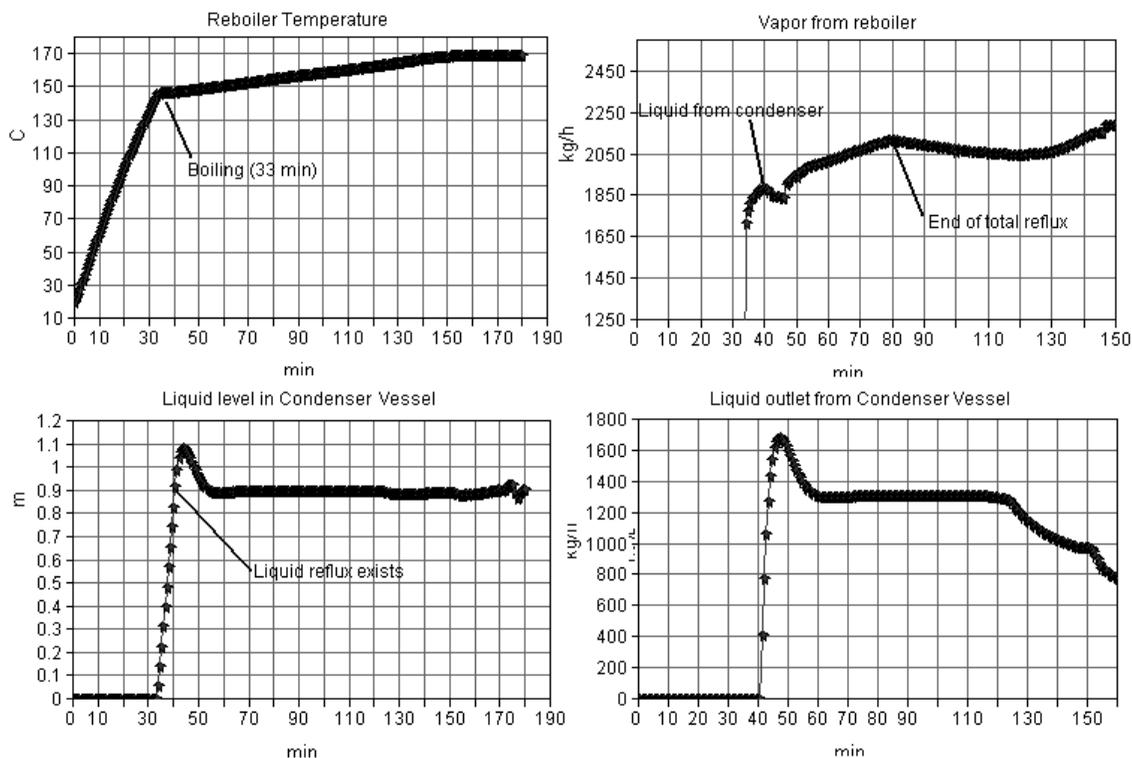

RATE REGRESSION


The rate regression utility in CC-ReACS allows you to regress kinetic data into reaction rate parameters. The program can handle simultaneous reactions, and many types of data from multiple sources of batch reactor data. Depending on the data, any coefficients from the Arrhenius or Langmuir-Hinshelwood equations can be regressed using this utility.

The discussion of rate regression is organized into three parts. In the "Input Discussion", we will define all the terms and default values necessary for this package. In "Using Rate Regression" we will step through how to use the regression tool. In the final section, "Examples" we will look at an example of using rate regression.

In order to regress kinetic data, you must first define the components, reactions, and reactor vessel used to collect the rate data. This is done by creating a batch reactor simulation which is capable of simulating the experiments used to gather the rate data.

INPUT DISCUSSION

Rate Regression is an option under the **Tools** option of the menu bar. After selecting this option, the **Reaction Rate Regression Menu** will appear as shown below:

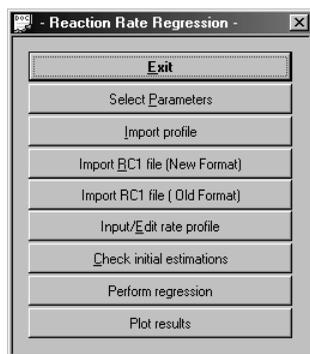

There are seven options on this menu:

- | | |
|--------------------------------------|---|
| Exit: | Returns to the CHEMCAD Menu bar |
| Select Parameters: | Provides facilities for (page 1) selecting the rate parameters to be calculated, (page 2) identifying files containing new data, and specifying numerical controls for the calculation. |
| Import Profile: | Is used to import generic raw data. In this dialog box the user defines the format and engineering units of the file containing the raw data. |
| Import RC1 file (New Format): | Use this option to import data from RC1 calorimeters using the new format. |
| Import RC1 file (Old Format): | Use this option to import data from RC1 calorimeters using the old format (B1.dat, TR.dat, etc) |
| Input/Edit rate profile: | This dialog box is used to type in data for regression or to edit imported data. |
| Check/Initial Estimates: | This option very quickly simulates the chemistry model using initial estimates of the regression parameters. It is a good way to see if there are any problems with either initial estimations or data. |
| Perform Regression: | Selecting this option initiates the regression analysis. |
| Plot Results: | For graphically comparing regression results to raw data. |

PARAMETER DEFINITIONS – PAGE 1

Par Type:

Reaction rates can be computed using either the Arrhenius or the Langmuir-Hishelwood forms of the rate expression. These equations are described in detail in the **Batch Reactor Model** section of this user's guide. Refer to that section as necessary. The following discussion assumes the user is familiar with these equations.

- The rate regression program can calculate the following parameters for both the Arrhenius equation and the Langmuir-Hishelwood equations:
 - a. The frequency factor, A (**RXN-A** on the screen).
 - b. The activation energy, E (**RXN-E** on the screen).
 - c. The order of the reaction in each component, which is the exponent of the component concentration term. (**Exp** on the screen).
- For the Langmuir-Hishelwood equation only:
 - a. The adsorption frequency factor, ϕ (**Ad-A** on the screen)
 - b. Component adsorption activation energy, E (**Ad-E** on the screen).

The Langmuir power factor, β , must be defined by the user if Langmuir-Hinshelwood adsorption parameters are to be calculated.

Note: Parameters for a user added equation can also be required using this facility. The concepts, however, are more complex and difficult and are therefore addressed elsewhere.

Tip: Specify *none* in Par Type to allow a reaction to use a constant Frequency Factor during regression. If you hold one or two frequency factors constant, regression of the third will quickly produce a decent estimate for the constant. Once you have reliable estimates for all frequency factors, you may hold one or two constant to allow for fine-tuning of the regression.

RXN:

The reaction number of the parameter to be regressed. This is required for all regression parameters.

COMP:

This is the component number for parameters which are component specific (such as e, Ad_A, Ad_E). This is the position of the component in the stream list, NOT THE COMPONENT ID NUMBER. If you press the F5 key, the component list will be displayed with both the position number (to the far left) and the ID numbers (in parenthesis).

Estimation:

This is the initial estimate for the parameter value. An estimate is not required. However, because of the extreme sensitivity of reaction rate to activation energy, it is strongly suggested that you provide an initial estimate when calculating E.

Lower Bound: (required)

This is the lower limit for this parameter.

Upper Bound: (required)

This is the upper limit for this parameter.

PARAMETER DEFINITIONS – PAGE 2

Rate Profile:

Up to five different data sets may be used in a single regression. To initialize a data set, enter a filename for that data set.

Composition Unit:

The units used in the file shown in the data set name to the left of this field. These two fields, data set name and units, allow you to use several sets of data, and each data set may be in a different set of units.

Mode:

Please specify the mode under which the data was gathered; either ADIABATIC or NON-ADIABATIC.

Max. Iterations:

This is the maximum number of iterations CHEMCAD will run before quitting the regression. The default value is 500.

Relative Tolerance:

The tolerance used before the program is within convergence limits relative to the value of the data point. The default value is $1e-5$.

Absolute Tolerance:

The maximum absolute tolerance between calculated and experimental data set. The default value is $1e-5$.

K min, K max:

We know from theory that the bounds of K, the rate constant, are 0 and infinity. For the purposes of regression, however, it is necessary to define concrete bounds within the computational limits of the computer being used. The default bounds are 10^{-5} and 10^{+5} .

Perturbation size:

This is only used for the GRG method. It is the size of the change in the independent variable used when calculating the slope of the error function. The default is 10^{-3} .

Regression Method:

Two algorithms are available for performing the regression analysis; the GRG (General Reduced Gradient) method and the Complex method. These methods are common techniques and can be found in standard optimization texts. They are not explained here.

The default is the GRG method.

Derivatives:

This is only used for the GRG method. When calculating the slope or derivative of a function, the perturbation step can be taken 100% in a single direction (forward difference) or 50% in one direction and 50% in the opposite direction (central difference).

Integration method:

The Runga-Kutta 4 (Fast Calculation) is extremely fast and accurate for many, if not most, reaction systems. However, it cannot be used for stiff systems. The semi-implicit RK4 should be used for very stiff systems.

Number of Attempts:

Each reset starts with an initial estimate that is an order of magnitude larger or smaller than the last. Therefore, if the specified (or shown) initial estimate is 10^{-4} and the number of attempts is 5; then the program will make five regressions. The five regressions will start with the initial estimates 10^{-2} , 10^{-3} , 10^{-4} , 10^{-5} , and 10^{-6} . The regression producing the best results will be selected by the program as the preferred answer.

IMPORT PROFILE

The **Import Rate File dialog box** is used for importing raw data to be regressed. Fields are provided for file management and for specifying the format and engineering units used by the file. One of these dialog boxes must be completed for each file to be imported. When the dialog box is closed, the data is imported.

The dialog box looks like this:

PARAMETER DEFINITIONS**Source file name:**

Enter the name of the source data file. The name may contain a path such as "C:\DATA\DATAFILE.TXT". In the default condition, the program will look for the file in the current job subdirectory.

Output file name:

Enter the file name for the imported data. This may be an existing data file, in which case the program will append the new imported data to the end of the file.

Data set #:

This input box is used to specify the number of the data set.

Read from line _____ to line _____:

This tells the program where the data set to be imported begins and ends in the text file.

Time column #:

Enter which column time data is stored in the import file. To the right, enter in the units for this quantity.

Temperature column #:

Enter the Temperature column for the import file. To the right, enter in the units for this quantity.

H of reaction column #:

Enter the column that contains heat of reaction data in the import file. To the right, enter in the units for this quantity.

Volume column #:

Enter the column that contains volume data in the import file. To the right, enter in the units for this quantity.

Composition column #:

Enter here the first column that contains composition (concentration or quantity) data. Immediately following this column should be the concentration or amount of each component in its own column, in the sequence order of the component list. To the right, enter in the units for this quantity.

Time unit in source file:

Identify the time units used by the file to be imported. Select from the list.

Temp. unit in source file:

Identify the temperature units used by the file to be imported. Select from the list. Used only when the **Temperature column #** field has an entry.

Q unit in source file:

Identify the enthalpy units used by the file to be imported. Select from the list. Used only when the **H of reaction colm #** field has an entry.

V unit in source file:

Identify the volume units used by the file to be imported. Select from the list. Used only when the **Volume column #** field has an entry.

Composition unit:

Identify the concentration units used by the file to be imported. Select from the list. Used only when the Composition col. # field has an entry.

INPUT/EDIT RATE PROFILE

This option is used to inspect input, and/or edit the data to be used in the regression analysis. If data has already been imported, it will be displayed upon entry into the dialog box. It can then be modified, extended, or abbreviated as desired. If no data has been imported, the dialog box will be empty.

The **Input/Edit Rate Profile dialog box** will not open unless a data set filename has been provided on Page 2 of the **Select Parameters dialog box**.

The dimensions of this dialog box will be (the number of components plus six) by 300.

A column is provided for each of the following:

- Component concentrations
- Weight factor
- Time
- Temperature
- Instantaneous heat of reaction (Qr)
- Volume
- Cumulative heat of reaction (Cum_Qr)

Up to 300 times can be reported. One now is provided for each time.

The **Input/Edit Rate Profile dialog box** will appear as follows:

	Weight_Factor	Time (hr)	Temp (C)	N-Butanol	Acetic-Acid	N.
1	1	0	20	0.55243	0.44757	0
2	1	0.2	20	0.08219	0.06659	0.7
3	1	0.4	20	0.05388	0.04365	0.7
4	1	0.6	20	0.04669	0.03783	0.7
5	1	0.8	20	0.04442	0.03599	0.7
6	1	1	20	0.04366	0.03537	0.7
7	0	0	0	0	0	0
8	0	0	0	0	0	0
9	0	0	0	0	0	0
10	0	0	0	0	0	0
11	0	0	0	0	0	0
12	0	0	0	0	0	0
13	0	0	0	0	0	0
14	0	0	0	0	0	0
15	0	0	0	0	0	0
16	0	0	0	0	0	0
17	0	0	0	0	0	0
18	0	0	0	0	0	0
19	0	0	0	0	0	0
20	0	0	0	0	0	0

PARAMETER DEFINITION

Weight Factor:

This column is used if you wish to fit closer to some data points than to others. If all weights are equal or zero, all points are equally important in the regression.

Time:

Time at which the data was measured.

Temperature:

Temperature of reactor.

Concentration:

The concentration of each component is listed in the next set of columns. Concentration units are selected in the "Select Parameters" screen, second page.

Qr:

Enter the instantaneous heat of reaction here.

Volume:

Enter the reactor volume here.

Cum_Qr:

Enter the cumulative heat of reaction here.

CHECK INITIAL ESTIMATIONS


This option is used to check you initial estimates entered in the "Select Parameters" section of the rate regression utility. In any equation with exponential terms, such as a rate equation, regression of coefficients is very sensitive to the starting estimation. This utility allows you to check your estimation by graphing the results of running your batch reactor with these values. This utility should be used to ensure that your estimates make sense.

PERFORM REGRESSION

Selection of this option initiates the regression calculations. An example of the results from the ARC1 example is shown below.

PLOT RESULTS

This option will plot both the regressed results and the experimental data, allowing you to judge the fit. An example fit is shown below:

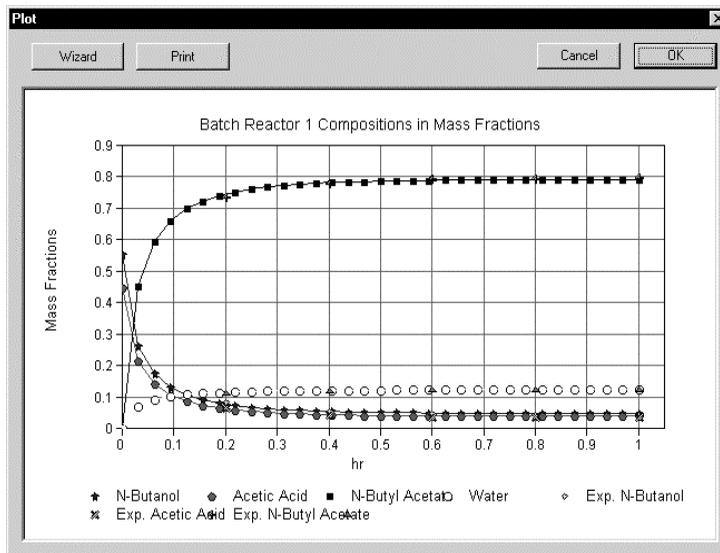

USING RATE REGRESSION

Now we are ready to walk through the program. The best way to use the rate regression utility is to do the following in order:

1. Build a flowsheet representing the experiments or operating equipment used to gather the data.
2. Specify the initial charge of the experiment or batch run from which the data was taken.
3. Specify the general parameters of the regression.
4. Specify the reaction mechanisms in the **Reaction Kinetics dialog box(s)** of the batch reactor.
5. Call the **Rate Regression menu**.
6. Select the parameters to be calculated by the regression analysis using the **SELECT PARAMETERS dialog box**.
7. Build the regression data sets by importing, entering, and/or editing the raw data.
8. Specify which data sets are to be used in the regression analysis.
9. Check the initial estimates (optional).
10. Perform the regression.
11. Plot the results.

DETERMINING CONSTANTS

The following parameters from any reaction may be selected for regression:

Reaction frequency factor (A or A_j below)

Reaction activation energy (E or E_j below)

Component exponent (e or a_{kj} below)

Component adsorption frequency factor (Ad_A or $\phi_{k,j}$ below)

Component adsorption activation energy (Ad_E or $E_{k,j}$ below)

These correspond to the parameters from the Langmuir-Hinshelwood equation shown below:

$$r_i = \sum_{j=1}^{nrx} \left(N_{i,j} \cdot A_j \cdot e^{-E_j/(RT)} \cdot \prod_{k=1}^{n_j} C_k^{a_{k,j}} \right) \cdot \left(1 + \sum_{k=1}^{n_j} \phi_{k,j} \cdot e^{-E_{k,j}/(RT)} \cdot C_k^{b_{k,j}} \right)^{-\beta_j}$$

Note: These parameters may also be regressed in a user added rate expression.

PARAMETER SELECTION

Enter the parameter type, reaction number, and component number (if e, Ad_A , or Ad_E) along with any bounds and initial estimates you wish. On the next page, name your data files and enter any additional information such as maximum iterations, error tolerances and K-value settings.

BUILD A BATCH REACTOR FLOWSHEET

The first step is to build a flowsheet, which represents the process from which the data was gathered. This normally is just a simple batch reactor (batch process) or a batch reactor with a feed (semi-batch process).

This flowsheet is drawn like any flowsheet.

SPECIFY THE INITIAL CHARGE

There are two ways to specify the initial charge of the experiment:

1. Enter it in the **INITIAL CHARGE dialog box** of the batch reactor.
2. Include it in one of the import data files as the composition at time zero.

The second option can only be used with files containing concentration data. Where concentration data files are not present the initial charge can only be given through the **INITIAL CHARGE dialog box**.

Time zero information in the import data files will override information given in the **INITIAL CHARGE dialog box**, if there is a conflict.

If the import files provide all necessary information, it is not necessary to complete **the INITIAL CHARGE dialog box**.

ENTER THE GENERAL PARAMETERS

The following items on the **GENERAL INFORMATION dialog box** must be entered:

1. Number of reactions
2. Batch time
3. Thermal mode
4. Pressure

The number of reactions must be entered so that the program knows how much data to collect. This is the case in simulation calculations as well.

The batch time must be entered, but will be overridden if in conflict with the times given in the import files.

The thermal mode must be identified. Only adiabatic and isothermal can be used in regression mode.

The pressure must be specified when performing regression calculations.

SPECIFY THE REACTIONS

The reaction scheme to be used in the regression analysis must be specified by the user. This is done in the **REACTION KINETICS dialog box** of the batch reactor models. The input for this dialog box is described in the Batch Reactor section of this user guide. The user is referred to this description for input details.

The following should be noted regarding a regression analysis:

1. The rate parameters to be calculated by the regression analysis should not be entered.
2. If the reaction order is not specified and not calculated, it is assumed to be one for each reactant.

CALL THE RATE REGRESSION MENU

The **Regression Menu** is accessed by:

1. Click on the **Tools** command on the menu bar. The **Tools Menu** will open.
2. Select the **Rate Regression** option on the **Tools Menu**. The **Rate Regression Menu** will open.

SELECT THE PARAMETERS TO BE CALCULATED

For each reaction specify which of the following parameters is to be calculated:

1. The frequency factor

2. The activation energy
3. The order or concentration exponents for the reactants
4. The adsorption frequency factor
5. The adsorption energy

On Page One of the **SELECT PARAMETERS dialog box** select the parameters from the list provided in the first column of each row.

For each selected parameter:

1. Identify the reaction that the parameter applies to.
2. If the parameter is a concentration exponent (order) or an adsorption exponent, specify the component that the parameter applies to.
3. Give an initial estimate of the parameter value (optional but recommended).
4. Enter the upper and lower bounds of the parameter values. The regression analysis will only search between these two numbers for this parameter. The upper and lower bounds are required input.

BUILD THE REGRESSION DATA SETS

A regression data set is a collection of various kinds of experimental data from a single file. For example, if an experiment was run where the temperature was measured and recorded into a file called TEMP.EX1 and the concentrations were measured and recorded into a file called CONC.EX1, then both of these files can be imported and saved into a single file or data set. This data set is saved and can be used in future regressions as desired.

Data sets are built using the **IMPORT RATE FILE dialog box** and/or the **INPUT/EDIT RATE PROFILE dialog box**. The use of the dialog boxes was described earlier in this section and is not repeated here.

The following rules should be remembered when building and using data sets:

1. All data within a data set must come from the same experiment. This is because the program will apply the same initial and operating conditions to all data contained in a data set.
2. The times for the measurements must be the same for all files collected into a given data set.
3. More than one data set can be included in a regression analysis.
4. Data set file names must be entered on Page 2 of the **SELECT PARAMETERS dialog box** before data can be imported or typed into them.
5. The default location for storing data sets is the current job subdirectory.

Therefore, to build a data set:

1. Enter the file name, where the data set is to be stored, in one of the fields provided on Page 2 of the **SELECT PARAMETERS dialog box**.

2. Import any available files (if any) into the data set using the **IMPORT RATE FILE dialog box**. One Source file is imported at a time. The Output file name entered in this dialog box is the data set file name and will be the same for all source files imported into this data set. (Optional)
3. Edit the import data and/or enter new data using the **INPUT/EDIT RATE PROFILE dialog box**.

SPECIFY WHICH DATA SETS ARE TO BE USED IN THE REGRESSION ANALYSIS

Up to five Data sets can be included in a single regression analysis. These data sets can contain different information from the same experiment and/or data from different experiments (whether it overlaps the first data set or not).

The data sets to be included in the regression analysis must be specified on Page 2 of the **SELECT PARAMETERS dialog box** in the fields provided under the heading, **Specify file name for each data set**: If the data set contains concentration data, the concentration engineering units must be identified in the field provided. The mode (adiabatic and non-adiabatic) of the regression must always be specified.

CHECK THE INITIAL ESTIMATES

This step is optional but generally a good idea. The initial estimates are entered in the **SELECT PARAMETERS dialog box**. When the option **check initial estimations** is selected from the **Rate Regression Menu**, the program:

1. Reads the initial estimates
2. Simulates the chemistry using these estimates
3. Compares the simulated results to the experimental data by displaying a series of plots.

PERFORM THE REGRESSION

To perform the regression, click on the **Perform Regression** option on the **Rate Regression Menu**. During the calculations the program will display the current error in the lower left-hand corner of the CHEMCAD Window. When the regression calculations are complete, the results will be displayed in a Wordpad document.

Before returning to the Rate Regression Menu, CC-ReACS will ask if you want to save the calculated parameters. Answering, "Yes" will cause them to be saved in the batch reactor dialog boxes.

TROUBLESHOOTING REGRESSIONS

Regressing reaction rates can be difficult. If you start having problems with the regression convergence, try to run the actual simulation from time 0 with some estimation of the reaction rate parameters. By running these manually you can get a feel for what an acceptable range is for the frequency factor, etc. **It is quite common to make engineering unit mistakes with reaction rates.** Usually the problem is comparing the results in CHEMCAD to available scientific literature. When doing so, always make sure the reaction rate units are the same.

CC-ReACS regresses for a fit to the Cumulative Qr rather than the instantaneous Qr ($\Delta Qr/\Delta t$). This is done for numerical methods reason.

The short explanation of why CC-ReACS uses this method is "CC-ReACS uses this method so the answer can be found without knowing the answer."

The difficulty with this method (cumulative Qr) occurs if there is a sharp drop in ($\Delta Qr/\Delta t$) for a single time step. Regressed parameters that predict a 'not as sharp drop' across several time steps will result in the same cumulative Qr. Numerical integration is simply solving for area under the curve and predicting a curve that matches the area. The area under a wide and short square is equal to the area under a thin and tall rectangle. Adding a few data points will force the regression to use a taller rectangle. Using a smaller time step (AFTER obtaining a decent fit) will also help produce a more accurate fit. If the time step is smaller, the Cumulative Qr will be more sensitive to the sudden spike of the instantaneous Qr.

How to eliminate the error of instantaneous Qr in a spike

Adding a few data points will force the regression to fit the curve to the data more reliably in that area. Using a smaller time step may allow for a more accurate curve.

PLOT THE RESULTS

The quality of the fit obtained by the regression analysis can be evaluated by plotting the predicted results and experimental data together for comparison. Clicking the **Plot Results** option on the **Rate Regression Menu** will do this. Five plots will be plotted for each data set.

EXAMPLES

THE RATEREGRESSRC1 PROBLEM

Now we are ready to walk through an example of rate regression. The following example is based on the reaction of water and acetic anhydride to form acetic acid.



Problem statement: 1.022 kg of Water is charged into a Calorimeter. The Calorimeter is brought to 37.8 C and 152 g of acetic anhydride is injected over the course of 1 hour. Determine a reaction rate constant such that:

$$R_{Acetic} = K * C_{Acetic\ Anhydride}$$

If we take the standard Arrhenius form and set all the langmuir-hinshelwood terms to 0, and set the exponential factor for acetic acid to 1, the rate expression becomes

$$R = A * C_{Acetic\ Anhydride} * e^{(-E/RT)}$$

Rearranging,

$$R = K * C_{\text{Acetic Anhydride}}$$

$$\text{Where } K = A * e^{(-E/RT)}$$


Its clear if we set the Activation Energy (E) to 0, the frequency factor term becomes our reaction rate constant K. R is the rate or reaction in 1/s, to get to the rate of formation of acetic acid we have to multiply by the stoichiometric coefficient.

This example is stored in the *Examples\Rate Regression* folder in your work directory. To work through the tutorial on your own, you will need to make a copy of the raw RC1 data files. To do this, create a new simulation and copy the files *B1.DAT*, *QRMINQB1.DAT*, *TR1.DAT* from *Examples/Rate Regression* into your new simulation folder.

1. Flowsheet drawing

Build a flowsheet with a batch reactor and a feed stream to represent the dosing.

RC1 Rate Regression

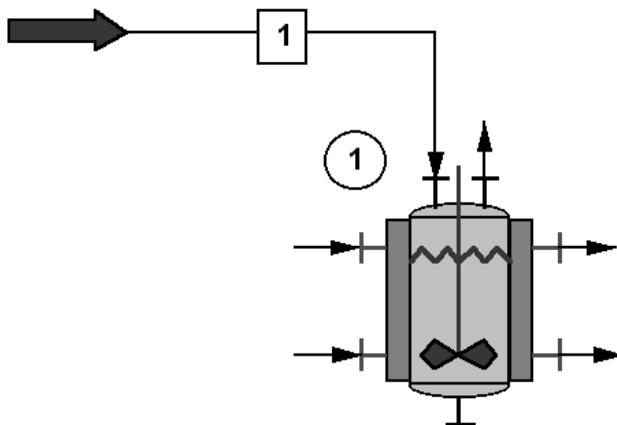

Define the component list to contain acetic anhydride, water, and acetic acid.

2. Thermodynamics.


This model uses **UNIFAC** as **K** model. The enthalpy model selected is **Latent Heat**. Since the reaction is isothermal, there will be no heat flux from non-ideal deviation terms with **Latent Heat**. You can select this model in the ThermoPhysical menu.

ThermoPhysical menu > **K values**

ThermoPhysical menu > Enthalpy

3. Specify the inlet stream.

This stream represents the dosing of acetic anhydride. The overall stream flowrate isn't important here (It will be overridden by the injection data from the Mettler data files) but it is important to set an inlet T,P and composition as shown:

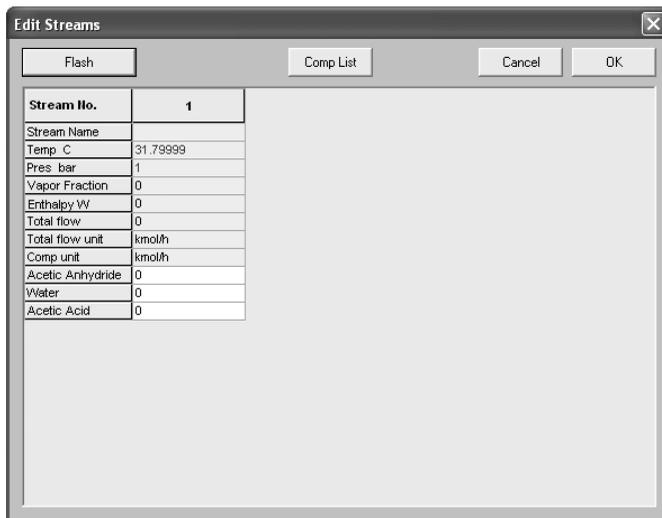

The screenshot shows a dialog box titled "Edit Streams" with a close button (X) in the top right corner. At the top, there are four buttons: "Flash", "Comp List", "Cancel", and "OK". Below the buttons is a table with the following data:

Stream No.	1
Stream Name	
Temp C	31.79999
Pres bar	1
Vapor Fraction	0
Enthalpy W	0
Total flow	0
Total flow unit	kmol/h
Comp unit	kmol/h
Acetic Anhydride	0
Water	0
Acetic Acid	0

4. Specify the reactor: double click the reactor.

The first time through this the program will take you through steps 5 through 11 step by step

5. Specify initial charge.

The initial charge is used for starting conditions of the RC1. For this example the initial charge composition is 1.022 kg of pure water. For RC1 data where the initial charge is not specified it is often possible to calculate the initial charge based on assumptions of consumption of the feed and composition of any offgas product.

Edit Batch Charge/Add	
Flash	Comp List
Cancel OK	
Stream No.	101
Stream Name	Reactor Char
Temp. C	31.79999
Pres. bar	1
Vapor Fraction	0
Enthalpy W	-4494.044
Total flow	1.022
Total flow unit	kg
Comp unit	kg
Acetic Anhydride	0
Water	1.022
Acetic Acid	0

6. Make the general specifications of the reactor.

Specify the number of reactions that will be modeled. If there is offgasing, mixed phase must be specified to allow for offgas. In this example there will only be one reaction modeled and since there is a single phase the liquid only phase option should be selected. For this example we are assuming the reaction takes place in the liquid and none of our compounds have significant vapor pressure to affect the results.

Set the thermal mode of the reactor. The **thermal mode** of this example is **isothermal** at the temperature used for the RC1 data. Therefore, specify **31.8 °C**.

Enter the **pressure** of the unit. Specify **1 bar**.

7. Make the semi-batch specifications.

Batch Reactor General Information -	
General	Semi-Batch
Convergence	
ID: 1	
Number of reactions	1 <input checked="" type="checkbox"/> Show plot during simulation
Specify reactor phase	Liquid only, liquid phase reaction
Kinetic rate expression	Standard
Thermal Mode:	
<input checked="" type="radio"/> 1 Isothermal (specify temp)	Reactor temperature 31.8 C
<input type="radio"/> 2 Adiabatic (no heating exchange)	
<input type="radio"/> 3 Specify heat duty	
<input type="radio"/> 4 Spec time / temp. profile	
<input type="radio"/> 5 Specify jackets/coils	
<input type="radio"/> 6 Specify time / heat duty profile	<input type="checkbox"/> Include compression/expansion effect
<input type="radio"/> 7 Specify vapor rate and P, calc duty	
Specify constant pressure:	
Pressure 1 bar	Pressure will be fixed to the given specification
Help	Cancel OK

Select the **Semi-Batch** tab. Select the dosing stream for **Feed Stream 1**. Select **cumulative** as the **Feed option 1**. The cumulative option indicates that the specified flowrate for the stream multiplied by one time unit is the total flow from the feed stream.

The screenshot shows the 'Batch Reactor General Information' dialog box with the 'Semi-Batch' tab selected. The 'Feed Streams' section includes 'Feed stream 1' set to 'Stream 1' and 'Feed stream 2' set to 'None'. 'Feed 1 option' is set to 'Cumulative' and 'Feed 2 option' is set to 'Flowrate'. The 'Product Streams' section has 'Liquid product' set to 'None' and 'Vapor product' set to 'None'. The 'Reactor Contents' section has 'Reactor Holdup' and 'Transfer reactor content to stream #' as empty text boxes. The 'ID' is 1. Buttons for 'Help', 'Cancel', and 'OK' are at the bottom.

8. Make the convergence specifications.

Select the **Convergence** tab. Use the default numerical method of Runge Kutta 4 as this is not a stiff system. A stiff system is one where the curves are extremely nonlinear and the numerical integration method is very sensitive to the differential change at each iteration. When you are finished, press OK to save your specifications.

The screenshot shows the 'Batch Reactor General Information' dialog box with the 'Convergence' tab selected. The 'Integration Parameters' section has 'Integration Method' set to 'Runge-Kutta 4 (Fast calculation)', with 'Step size' and 'Tolerance' as empty text boxes. The 'Results from current iteration' section has 'Reactor temperature' (C), 'Reactor pressure' (bar), 'Wall temperature' (C), 'Heat rate' (W), 'Rxn heat rate' (W), and 'Liquid level' (m) as empty text boxes. The 'Overall Results' section has 'Overall heat' (W-h) and 'Overall H of rxns' (W-h) as empty text boxes. The 'ID' is 1. Buttons for 'Help', 'Cancel', and 'OK' are at the bottom.

9. Click on the **Rate Equations Units** button.

Select the units for the rate equation parameters which the Batch Reactor will use. The RC1 data units do not need to match the units selected at this screen. The regressed parameters will be saved in the units selected here. Use **mole basis** for stoichiometry. Be sure to specify the rate equation units as shown.

When you are ready, press **OK** to save your specifications.

- Rate Equation Unit Definition - ID: 1

Stoichiometrics/Eqn Basis

Use mole basis for stoichiometry and rate eqn
 Use mass basis for stoichiometry and rate eqn

Units: 1 Kmol

Time unit: 2 Seconds

Volume unit: 2 Liters

Activation E/H of Rxn unit: 4 K Joules

Reference temperature for heat of reaction

T ref: C

Buttons: Help, Cancel, OK

Kinetic Data

Reaction Number: 1

Frequency factor: 0.336164 Beta factor:

Activation energy: Heat of reaction: -48000

Component	Stoichiometric coefficient	Exponential factor	Adsorption factor	Adsorption energy	Adsorption exponent
1 Acetic Anhydrid	-1	1			
2 Water	-1	1			
3 Acetic Acid	2				
<None>					

Edit next reaction
 Edit specified rxn
 Exit reactions

Rxn #:

10. Click on the **Reactions Kinetics** button.

Enter the reaction stoichiometry. CC-ReACS will enter the frequency factor calculated from regression. If the heat of reaction is not specified it will be calculated based on heats of formation and stoichiometry. By default, CHEMCAD defined the Exponential factor for each reactant as the absolute value of its stoichiometric coefficient. In our case we want the reaction 1st order in Acetic Anhydride and 0th order in Water. To set a reactant to 0th order, set a very small but real number such as 1e-10 here.

For this example we have entered the heat of reaction as -48000 kJ/kmol. As it turns out, the accepted value for the ideal gas heat of formation for acetic acid is not consistent with some published accounts of this reaction's heat of reaction. Acetic acid dimerizes in the vapor phase, hampering accuracy. In order to compare with some literature we must adjust the heat of reaction appropriately.

11. External Feed Schedule and Product Draw Schedule.

The External feed rate will be filled with the data from the FEED column from your RC1 data file when you use the **Import RC1 file** dialog below. It is important to note that in any regression you are limited to a single feed schedule, this means each RC1 experiment will need its own separate batch reactor.

Product Draw Schedule specifications are not necessary for this example. For a model with an offgas you would likely set product rate to **Draw to Keep P Constant**. The pressure criteria in this case is set on the General page **Specify Constant Pressure**.

12. Set Dynamic run time.

Dynamic time and step size are set at the dynamic schedule screens. Use the **Run** menu command **Dynamics** and press the **Set Run Time** button for these options.

There is only one operation step for this example. Batch time is set to the length of the RC1 data or less. For this example, run time is set at **60 minutes**. Step size is set to **0.3 minutes**.

13. Importing the RC1 data and performing the Regression.

From the **Tools** menu select **Rate Regression**. Select the reactor and press **OK**. The Reaction Rate Regression menu will appear.

14. Click on the **Select Parameters** button.

For an isothermal reaction you can regress the Frequency Factor but not the Activation Energy. You may also regress the reaction order; but this would complicate the regression for this example. For a non-isothermal reaction you can regress the activation energy as well as the frequency factor.

Page 1

Select **Rxn_A** from the Par Type field, this is the Frequency (Arrhenius) Factor.

Specify the reaction number for the **Rxn** field. Since reaction 1 is being regressed, type **1**.

When you are finished page 1 of the Rate Regression Parameters dialog should look like the picture below:

Par type	Rxn	Comp	Estimation	Lower bound	Upper bound
1. Rxn_A	1				
None					

Page 2

Specify a file name for CC-ReACS to use as a translated file. This is the file CC-ReACS will create from the imported RC1 data. Any name you select is OK for the sake of this example.

For most situations the default values on the numerical methods parameters are sufficient; it is not necessary to make arbitrary changes without understanding the effect on regression.

15. Specify the RC1 file

Click on the Import RC1 file (Old Format) button. The Import RC1 file dialog will appear.

Enter the names of the files for time, temp, feed, and Qr.

Input the temperature (31.8 °C) into the **Isothermal T** field.

Input 1 into the **Data Set #** field.

Input the **Start** and **End time** of the data (5286 sec and 9000 sec).

Set the units of the data.

Select the **Qr sign conversion**. CC-ReACS considers a positive heat duty to be an endothermic process. If the Qr data does not have a negative sign and the reaction is exothermic, use the Qr sign conversion field to set the reaction to exothermic.

The screenshot shows a dialog box titled "- Import RC1 File -". It contains the following fields and options:

- BX file name:
- TR file name:
- QR file name:
- Output file name:
- Isothermal T: C
- Data set #:
- Time unit in RC1 file: Start time: End time:
- Mass unit in source file:
- Temp unit in source file:
- Qr unit in source file: Qr sign conversion:

Buttons:

Press **OK** and CC-ReACS will convert the RC1 file data to its own format. CC-ReACS will also enter the dosing schedule to the batch reactor feed schedule for you (you can review it later on).

16. Check initial estimates (optional).

This allows you to plot experimental values and the values that would be calculated by using your initial estimates for reaction parameters. If the rates plotted from the initial estimates are far from the experimental rates for the initial times, you may wish to revise these estimates.

It should be clear that the initial estimates are not the correct parameters, so graphs plotting reaction rates against experimental data will not match up, but they should trend similarly.

17. Perform Regression.

This will begin the regression will demand most of the computer's resources; it's best to leave your computer alone and have other processes closed when you perform the regression.

Click on the **Perform Regression** button. Once the regression is finished you will see a report in WordPad.

CC-ReACS will ask you whether to save the regressed parameters or not. Select the **save regressed parameters** option and press **OK** to review results.

CC-ReACS will show you some plots for you to compare regressed and experimental parameters.

18. Plot the results (optional).



You may want to review the results and check how the performed regression fits your experimental data.


There are three plots:

Time vs. composition

Heat of Reaction vs. time

Cumulative Heat of Reaction vs. time

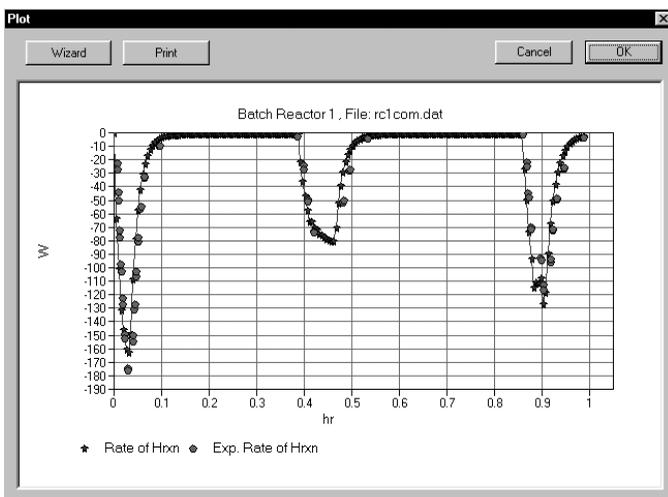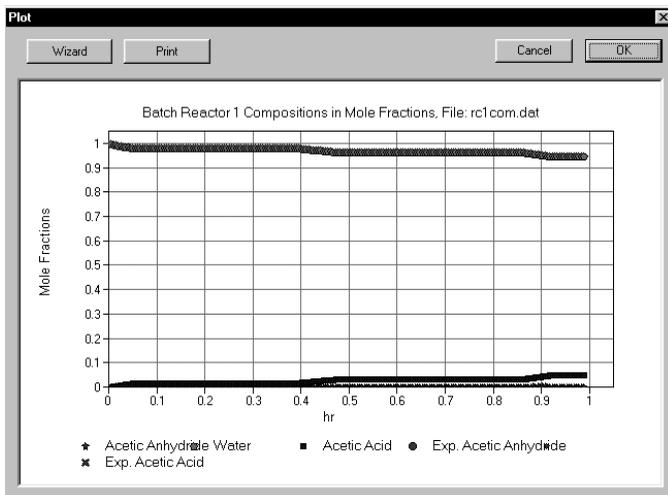

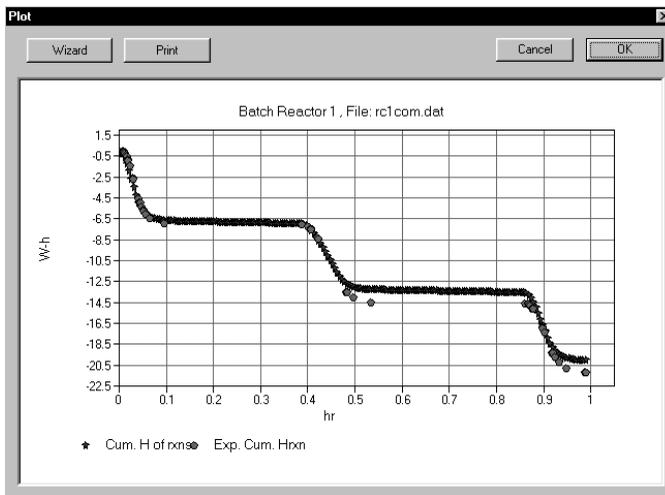

Similar to **Check Initial Estimates**, the **Plot Results** option allows you to plot the rates calculated by regressed parameters on the same plot as the experimental rates from the RC1 file.

THE RATE REGRESS RC1 PROBLEM- ANALYZING THE RESULTS

The whole point of this exercise is to calculate a rate constant given heat release data. The rate constant CHEMCAD calculates is approx. 0.0176 liter/kmol s. So the rate of *reaction* is equal to $0.0176 \text{ liter/kmol s} * C_{\text{Acetic Anhydride}}$ to get the rate of acetic acid *formation*, we must multiply the rate constant by the stoichiometric coefficient of acetic anhydride, 2. So,

$$R_{\text{Acetic}} = 0.0353 * C_{\text{Acetic Anhydride}}$$

if we run the same experiment at another temperature we will get a different K. If we remember that $K = A * e^{(-E/RT)}$ we can set up 2 equations and two unknowns and solve for E and A.

APPENDIX I – AGITATOR COEFFICIENTS FOR THE SEADER-TATE EQUATION
--

Agitator Parameters for the Seader-Tate equation

Agitator	f	a	b	c
Flat blade disk turbine:				
Re<400	0.54	0.67	0.33	0.14
baffled, Re>400	0.74	0.67	0.33	0.14
3 blade propeller:				
baffled, 5500<Re<37000	0.64	0.67	0.33	0.14
Flat blade paddle, Re > 4000	0.36	0.67	0.33	0.14
Anchor:				
30 < Re <300	1.00	0.50	0.33	0.14
300 < Re < 5000	0.38	0.67	0.33	0.14
3 blade turbine, baffled, 20000 < Re < 2000000:				
glassed steel	.33	.67	.33	0.14
alloy steel	0.37	0.67	0.33	0.14

APPENDIX II - USER ADDED KINETIC RATE EXPRESSIONS**OVERVIEW**

The **Kinetic Reactor** dialog box enables the user to specify a custom kinetic rate expression.


The screenshot shows the 'Kinetic Reactor (KREA)' dialog box with the following settings:

- General Specifications:**
 - Number of reactions: 1
 - Reactor pressure: [empty] atm
 - Pressure drop: [empty] atm
 - Kinetic rate expression: User specified
- More Specifications:**
 - Reactor Model:** Specify reactor type: PFR (Plug Flow)
 - Thermal Mode:** Isothermal (specify temp) [selected], Adiabatic (no heat exchange), Spec heat duty, Spec PFR temp. profile (later), Spec PFR utility U
 - Specify calculation mode:** Specify volume, Calculate conversion; Specify conversion, Calculate volume [selected]
 - Reactor Volume: 2.43016 Cubic meters
 - Key Component: 2 Ethane
 - Conversion: 0.8

Buttons: Help, Cancel, OK

BASIC USE

After the user has entered the specifications in the **Kinetic Reactor** dialog box, the user must input the kinetic data for each reaction in the system.

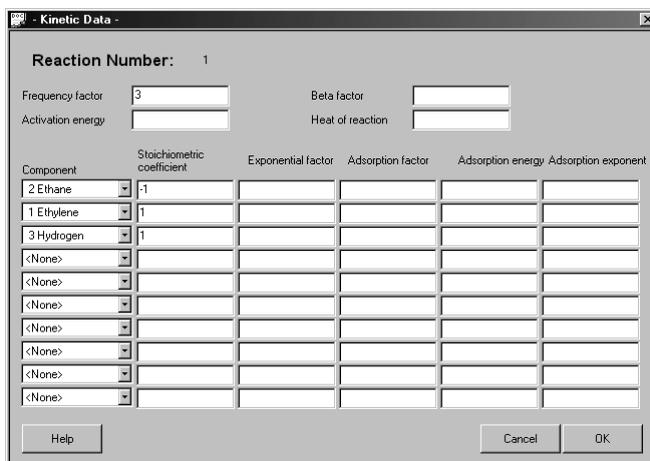

Kinetic Data -

Reaction Number: 1


Frequency factor: 3 Beta factor:

Activation energy: Heat of reaction:

Component	Stoichiometric coefficient	Exponential factor	Adsorption factor	Adsorption energy	Adsorption exponent
2 Ethane	-1	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
1 Ethylene	1	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
3 Hydrogen	1	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<None>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<None>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<None>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<None>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<None>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<None>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<None>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Buttons: Help, Cancel, OK

This data is input using the **Kinetic Data** dialog box. The user is required to enter the stoichiometric coefficients for each reaction. The frequency factor and activation energy may be entered using this dialog box if they are used by the kinetic rate expression. The **User Rate Expressions** dialog box appears after the **Kinetic Data** dialog box is closed.

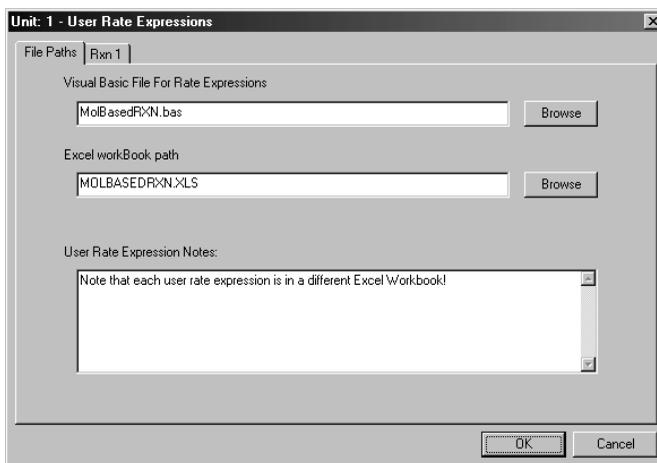

Unit: 1 - User Rate Expressions

File Paths | Rxn 1

Visual Basic File For Rate Expressions

Excel work-Book path

User Rate Expression Notes:

Buttons: OK, Cancel

File Paths:

The name of the VBA file and Excel workbook accessed by the simulation must be specified on the **User Rate Expressions** dialog box. If the files are not located in the current job folder, the full path will need to be entered. The file `\CC5userRxn.xls` is a template for the User Added Kinetic Rate Expression. This file should be copied to the current job folder.

Rxn I:**Name for the Chemical Reaction:**

This name will be displayed on the reports.

Variables for User Rate Expressions:

The following table lists the default parameters available for User Added Kinetic Rate Expression. The ChemCADEntry VBA object handle can be used to access additional CHEMCAD variables.

FF	Frequency Factor	The Frequency Factor is specified in the Kinetic Data dialog box.
ExpERT	Exponential Term	Calculated as $\text{EXP}[(E/R)/T]$. The activation energy is specified in the Kinetic Data dialog box. R is the gas constant.
Temp	Temperature	The current reactor temperature.
Pres	Pressure	The current reactor pressure.
RPM	Propeller speed	The speed of the propeller/mixer. The propeller adds kinetic energy to the system which is dissipated as heat.
Rvol	Total reactor volume	The total volume of the reactor. This is either specified by the user or calculated.
LFrc	Liquid vol. Fraction	The fraction of the reactor volume that is filled with liquid.
Ci-Cj	Component concentration	The current concentration of component i.
Pi-Pj	Component pressure	The current partial pressure.

Additional variables may be dimensioned and specified using VBA standards in the **Write User Rate Expression** field.

Write User Rate Expression:

The User Added Kinetic Rate Expression is entered in this field. The expression may consist of a single line formula, similar to the example given in the dialog box, which uses the pre-defined variables listed in the **Variables for User Rate Expressions** field. If the user needs to define additional variables or utilize a more complex formula, VBA code may be entered into this field. Multiple lines of code may be entered into this field using the [ctrl]+[enter] key combination at the end of each line to insert a line break.

Operators:

This field contains a list of operators that may be used while entering formulas into the **Write User Rate Expression** field.

Do you want to update UserRxnRate Module in Excel Workbook:

After completing the **User Rate Expression** dialog box, a pop-up window prompts the user to save the changes to the VBA module that contains the code for each User Added Kinetic Rate Expression. The user should select **YES** to save the changes, unless Excel is being used to edit the macros manually.

ADDITIONAL COMMENTS

Multiple Reactors in a Job:

A User Added Kinetic Rate Expression may be used by more than one reactor. Once the first reactor has been specified, the subsequent reactors are configured to call the same workbook and module. This feature may also be used with reactors that reside on different flowsheets. For cases where a single rate expression is used for different simulations, the Excel workbook should be copied into the job folder of each of the separate flowsheets. This ensures that the rate expression associated with a specific job does not get lost during export or file transfer.

Kinetic Reaction VBA Macro:

The following example details the structure of the VBA Macro created by the simulation:

```
Sub UserRxnRates(ByRef Rate() As Double, ByVal Temp As Double,
    ByVal Pres As Double, ByVal Rpm As Double, ByRef Conc() As Double,
    ByRef KPar() As Single, ByVal ChemCADEntry As Object)
    Rate(1) = RxnRate001(Temp, Pres, Rpm, Conc, KPar, ChemCADEntry)
    Rate(2) = RxnRate002(Temp, Pres, Rpm, Conc, KPar, ChemCADEntry)
End Sub
```

The function array *Rate* returns the rates of the chemical reactions. *Temp* is the current temperature in user units, *Pres* is current pressure in user units, *Rpm* is the propeller speed, *Conc* contains the array of concentrations in user units, *KPar* carries the array of kinetic parameters, and *ChemCADEntry* is an object handle used to access CHEMCAD. Ten kinetic parameters are currently assigned to each reaction. The frequency factor and exponential term (including the activation energy and temperature) are the first and second kinetic parameters respectively. The remaining kinetic parameters are reserved at this time. The VBA code for the rate function of reaction no. 1 has the following form:

```
Function RxnRate001(ByVal Temp As Double, ByVal Pres As Double,
    ByVal Rpm As Double, ByRef Conc() As Double, ByRef KPar() As Single,
    ByVal ChemCADEntry As Object) As Double
    RxnRate001 = ...
End Function
```

The user can modify these macros using Excel's VBA Editor. Additional information regarding the solid, liquid, or vapor phases can be accessed through the *ChemCADEntry* object handle.

Modeling Biological Reactions:

Biological reactions can be modeled using the Kinetic Reactor (KREA) and Batch Reactor (CC-ReACS) UnitOps in CHEMCAD.

Biological reactions are typically mass based. Therefore, the concentrations are given in terms of mass/volume and the reaction rate equations are based upon the mass of substrate, biomass, and products.

The Kinetic and Batch Reactor models both have a concentration option of **mass/volume**. This setting also changes the reaction stoichiometry to units of mass. The rate expression $A + 2B \leftrightarrow 3C$ is read as "1 kg A + 2kg B goes to 3kg C".

Concentration Flag:

The Concentration Flag option is found on the second tab of the **Kinetic Reactor Dialog Box**. The available settings are:

- | | | |
|---|------------------|---|
| 0 | mole/volume | Default mode |
| 1 | partial pressure | |
| 2 | mass/volume | Used for Biological Reactions (<i>Stoichiometry becomes mass based</i>) |

Mode 2 is useful for biological reactions, which are often mass based. *It is important to note that with mode 2, stoichiometry becomes mass based!*

The flow and volume units (option 0) are selected using parameters 21 and 23 respectively.

The pressure units (option 1) are the same as the global pressure units.


Stoichiometry screens:

If the exponential factor for a reactant is not specified, the stoichiometric coefficient will be used as the default value.

Example: for $A + 2B \leftrightarrow C$, the rate will be $r = FF * C_A * C_B^2$

This does not apply to the User Added Kinetic Rate Expression.

A separate tab will appear for each reaction. The tab sequence corresponds to the order in which the stoichiometric parameters were entered in the **Kinetic Data** dialog boxes.

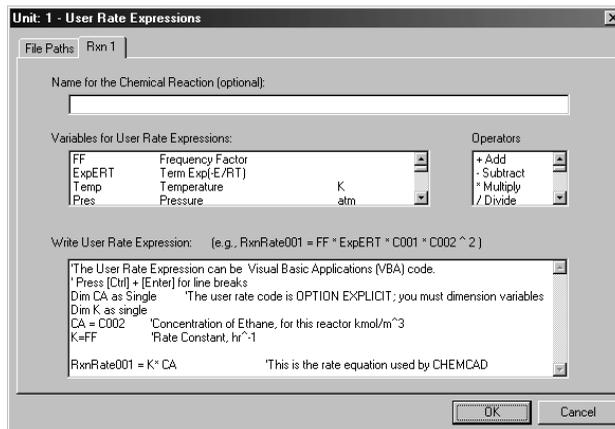

APPENDIX III – STATIC HEAD IN THE DYNAMIC VESSEL

OVERVIEW

The dynamic vessel DVSL allows the user to include the static head pressure into piping network calculations. This feature is handy when more realistic transient simulations are wished.


Since the liquid level in the vessel can vary during a process, the liquid static head variation might be relevant to the pressure/flow calculations for both upstream and downstream UnitOps.

If there is an inlet liquid stream the liquid level in the vessel might rise and therefore the static head will be higher for the next time step.

If there is an outlet liquid stream the liquid level in the vessel might drop and therefore the static head will be lower for the next time step.

BASIC USE

If the static head is to be considered, the dynamic vessel will probably belong to a dynamic piping network flowsheet such as the shown below:

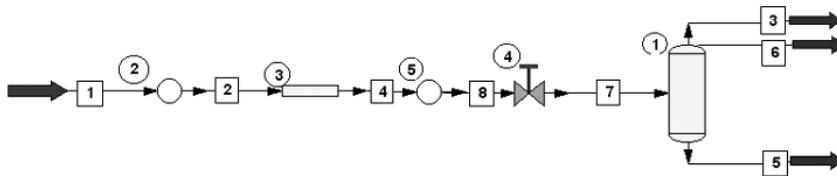

In this example water is being pumped from an infinite source at a constant pressure.

The DVSL UnitOp will represent a pressure node in a piping network. Since the DVSL will be an external piping node, at least one specification must be made. A piping node can usually accept two kinds of specifications:

1. Fix the pressure
2. Fix the flow

This flowsheet was built to determine how long it would take to fill this tank. Since the flow is an unknown variable for this dynamic calculation, the pressure must be fixed (to perform the network calculations).


Tip: In case you wanted to prevent DVSL from backward flow of inlet streams, you can use CVAL and check its **Forward flow only** option. This will avoid false inlet flows.

INLET AND OUTLET NOZZLES


For this example, after inputting the geometry of the vessel, the user should check the Include liquid static head option. This will ensure that the static head is included into the pressure/flow calculations for the inlet and outlet liquid streams. However, the position of the inlet nozzle will be important for DVSL to estimate the column of liquid.

The actual static head relevant to the inlet liquid stream is that of the current liquid level above the nozzle. DVSL lets the user specify the position of the nozzle from the top of the vessel. This means that if the inlet nozzle is located at the very bottom of the vessel the inlet nozzle position to be input is the same as the height of the vessel. Conversely, if the inlet nozzle is located at the very top of the vessel the inlet nozzle position to be input is zero.

For outlet liquid nozzles the default position is at the bottom of the vessel. The picture below may help the user understand this specification.

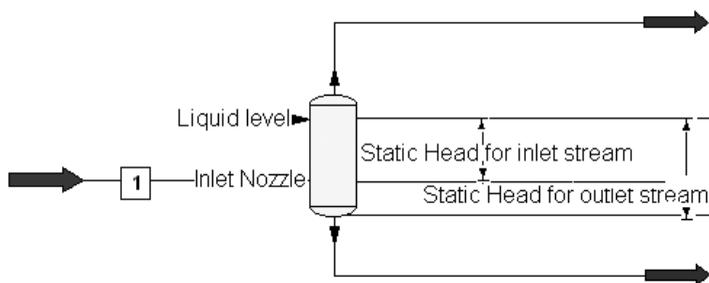

After inputting the vessel geometry and other simulation parameters the general dynamic vessel dialog should look like the picture below. Please notice that for this example the inlet nozzle is located at the very bottom of the vessel (the vessel height and the inlet nozzle position are the same).

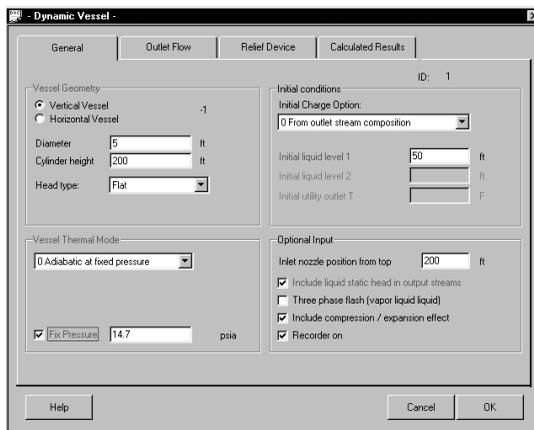


Results

In this example you can notice how the variation of the static head can affect process variables such as the inlet flow, the outlet liquid pressure.


Liquid Level

Please look at the results of the liquid level. The plot does not really show that the variable static head affects the behavior of the liquid level. However, this effect can be noticed in the following plots.

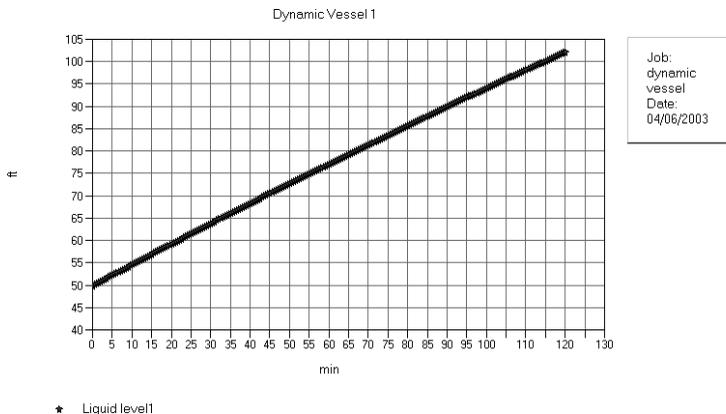


Inlet flow rate

This plot shows how the static head increase makes the inlet flow drop as the process goes on. The liquid must flow against a taller column of liquid.

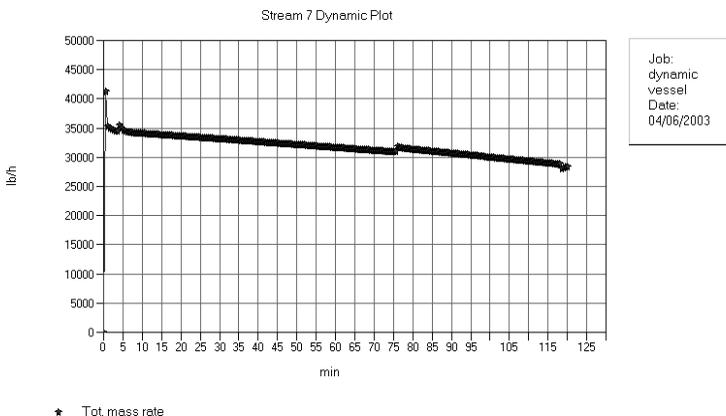

Outlet pressure

This plot show how the outlet pressure decreases as the process goes on. Please notice that the pressure in the vessel is 14.7 psia. The plot shows the sum of the vessel pressure plus the static head.

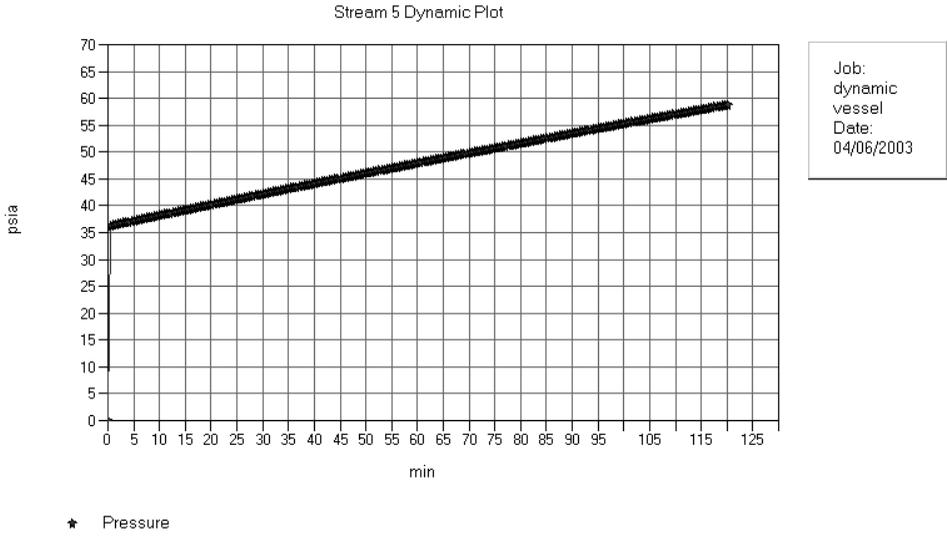

APPENDIX IV – REACTOR DATABASE

REACTOR TYPE	Capacity	Inner Vessel Material	Inner Vessel O.D.	Inner Vessel Thickness	Jacket I.D.	Heated Area	Glass Thickness
UNITS	litres	-	mm	mm	mm	m2	mm
BE40000	40000	CS	3600	30	3718	52.1	1.5
BE32000	32000	CS	3200	30	3518	45.7	1.5
BE25000	25000	CS	3000	28	3068	39.8	1.5
BE20000	20000	CS	2800	25	2870	34.2	1.5
BE16000	16000	CS	2600	25	2672	29.5	1.5
BE12500	12500	CS	2400	22	2467	25.2	1.5
BE10000	10000	CS	2400	22	2467	20.7	1.5
BE8000	8000	CS	2200	22	2276	18	1.5
BE6300	6300	CS	2000	20	2072	18	1.5
BE4000	4000	CS	1800	20	1876	13.2	1.5
AE2500	2500	CS	1600	16	1676	8.3	1.5
AE1600	1600	CS	1400	16	1480	6.3	1.5
AE1000	1000	CS	1200	14	1280	4.6	1.5
AE630	630	CS	1000	12	1084	3.2	1.5
AE400	400	CS	800	12	884	2.5	1.5
AE250	250	CS	700	10	788	1.7	1.5
AE160	160	CS	600	10	688	1.3	1.5
AE100	100	CS	510	10	588	0.9	1.5
AE63	63	CS	510	10	588	0.6	1.5

Number of Side Jacket Inlets	Size of Side Jacket Inlets	Number of Bottom Jacket Inlets	Size of Bottom Jacket Inlets	Number of Jacket Outlets	Size of Jacket Outlet	Circulating Nozzle Type	Circulating Nozzle Size
mm	mm	-	mm	-		Low/High	mm
4	80	1	100	1	100	LOW	50
4	80	1	100	1	100	LOW	50
4	50	1	80	1	80	LOW	38
4	50	1	80	1	80	LOW	38
4	50	1	80	1	80	LOW	38
3	50	1	80	1	80	LOW	38
3	50	1	80	1	80	LOW	38
2	50	1	80	1	80	LOW	38
2	50	1	80	1	80	LOW	38
2	50	1	80	1	80	LOW	38
1	50	1	50	1	50	LOW	38
1	50	1	50	1	50	LOW	38
1	50	1	50	1	50	LOW	38
1	50	1	50	1	50	LOW	38
1	40	1	40	1	40	LOW	30
1	40	1	40	1	40	LOW	30
0	-	1	40	1	40	LOW	30
0	-	1	40	1	40	LOW	30
0	-	1	40	1	40	LOW	30

Jacket Flow Rate	Reactor Weight	Jacket Capacity	Dished End Volume	Dished End Inner Surface Area	Jacket Height	Minimum Stir Volume Impeller	Minimum Stir Volume
m3/hr	kg	litres	litres	m2	mm	litres	Litres
44	18000	3405	6055.9	14.0	3369	10100	NA
44	14500	2965	4253.3	11.1	3445	8270	NA
30	11000	1605	3504.6	9.7	3191	6220	NA
30	9000	1410	2849.4	8.5	2925	3440	NA
30	7500	1260	2281.4	7.3	2717	3080	NA
23	6000	1100	1794.4	6.2	2517	2810	NA
23	5000	810	1794.4	6.2	1920	2160	NA
23	4300	725	1382.1	5.2	1848	1940	NA
23	3400	676	800.0	4.0	2234	1420	NA
23	2500	524	583.2	3.2	1767	1110	NA
15	1800	378	409.6	2.5	1147	870	NA
15	1400	294	274.4	1.9	991	610	NA
15	1000	214	172.8	1.4	842	210	292
15	700	151	100.0	1.0	703	125	181.5
10	500	120	51.2	0.6	743	62	103
10	400	93	34.3	0.5	552	46	74
5	300	70	21.6	0.4	501	33	47
5	250	46	13.3	0.3	401	21	32.8
5	220	32	13.3	0.3	214	21	33.5